

Contents

01 - Self-diagnosis, Electrical check	1
1 Additional heater self-diagnosis	1
1.1 Additional heater self-diagnosis	1
1.2 Technical data of self-diagnosis	2
1.3 Function	3
1.4 Fault recognition	3
1.5 Technical data of self-diagnosis	3
1.6 Self-diagnosis test prerequisites	4
1.7 Safety precautions	4
2 Performing self-diagnosis	5
2.1 Performing self-diagnosis	5
2.2 Connecting vehicle diagnostic, testing and information system VAS 5051 and selecting functions	5
3 Interrogating fault memory	9
3.1 Interrogating fault memory	9
4 Additional heater fault table	11
4.1 Additional heater fault table	11
5 Additional heater final control diagnosis	15
5.1 Additional heater final control diagnosis	15
6 Additional heater basic setting	18
6.1 Additional heater basic setting	18
6.2 Additional heater basic setting (switching on and off)	19
7 Erasing fault memory, ending output	23
7.1 Erasing fault memory, ending output	23
8 Encoding additional heater	25
8.1 Encoding additional heater	25
9 Reading measured value block	27
9.1 Reading measured value block	27
10 Adaption of auxiliary/additional heater	36
10.1 Adaption of auxiliary/additional heater	36
10.2 Performing adaption (adaption channel "01", fixed value for manual undervoltage cut-off)	36
10.3 Performing adaption (adaption channel "10", actuation as additional heater)	40
11 Electrical check of additional heater	45
11.1 Electrical check of additional heater	45
12 Additional heater functional sequence	51
12.1 Additional heater functional sequence	51
12.2 Heat output requirement between 50 and 100%	57
12.3 Heat output requirement less than 50%	58
82 - Auxiliary heating	59
1 Servicing additional heater	59
1.1 Servicing additional heater	59
1.2 Contact corrosion	59
1.3 Notes on additional heater	59
2 Safety measures during work on vehicles with additional heater	60
2.1 Safety measures during work on vehicles with additional heater	60
3 Notes on general repairs to vehicles with additional heaters	60
3.1 Notes on general repairs to vehicles with additional heaters	60
4 Cleanliness rules for work on additional heater and fuel system	61
4.1 Cleanliness rules for work on additional heater and fuel system	61



5	Component arrangement for additional heater	62
5.1	Component arrangement for additional heater	62
5.2	Checking electric additional heater actuation by the engine control unit	64
6	Diversion of fuel for additional heater	66
6.1	Diversion of fuel for additional heater	66
6.2	Diversion of fuel (for the additional heater) from the fuel tank	69
6.3	Checking fuel delivery rate of metering pump -V54	69
6.4	Removing and installing metering pump -V54	72
7	Checking and adjusting CO₂-content in additional heater exhaust gas	73
7.1	Checking and adjusting CO ₂ -content in additional heater exhaust gas	73
7.2	Checking CO ₂ -content of additional heater exhaust gas	73
7.3	Adjusting CO ₂ -content in additional heater exhaust gas	75
7.4	Removing deposits from burner element (only when running on vegetable oil methyl ester)	80
8	Incorporation of additional heater into coolant circuit	82
8.1	Incorporation of additional heater into coolant circuit	82
8.2	For vehicles with 3-cylinder diesel engine	82
8.3	Bleeding coolant circuit	83
9	Removing and installing additional heater	84
9.1	Removing and installing additional heater	84
10	Dismantling and assembling additional heater	88
10.1	Dismantling and assembling additional heater	88
10.2	Removing and re-attaching auxiliary heater exhaust system bracket	88
10.3	Removing and re-installing air intake hose with intake silencer	92
10.4	Dismantling and assembling additional heater	93
10.5	Removing and installing connector rail cover	96
10.6	Additional heater connector rail assignment	96
10.7	Removing and installing combustion air blower -V6	97
10.8	Removing and installing burner element	98
10.9	Removing and installing glow plug with flame detector -Q8	98
11	Additional heater block diagram	101
11.1	Additional heater block diagram	101