

Contents

00 - Technical data	1
1 Gearbox identification	1
1.1 Code, allocation, transmission ratios, capacities	2
2 Overview - power transmission	4
3 Calculating ratio "i"	6
4 Repair instructions	7
4.1 Contact corrosion	7
4.2 General repair instructions	7
30 - Clutch	12
1 Servicing clutch mechanism	12
1.1 Checking hydraulic clutch mechanism	12
1.2 Assembly overview - pedal cluster	14
1.3 Removing and installing over-centre spring	16
1.4 Removing and installing clutch pedal	17
1.5 Assembly overview - hydraulic system	18
1.6 Removing and installing clutch master cylinder	20
1.7 Removing and installing clutch slave cylinder	24
1.8 Bleeding clutch system	26
2 Assembly overview - servicing clutch release mechanism	29
3 Servicing clutch	31
3.1 Fault-finding on power transmission - complaints regarding defects on the clutch and clutch mechanism	31
3.2 Assembly overview - servicing clutch	36
3.3 Removing and installing clutch	39
34 - Controls, housing	41
1 Servicing selector mechanism	41
1.1 Installation position of selector mechanism	41
1.2 Removing and installing gear knob and boot	42
1.3 Assembly overview - servicing gear lever and selector housing	45
1.4 Assembly overview - removing and installing selector cables	47
1.5 Removing and installing selector mechanism	51
1.6 Adjusting selector mechanism	55
2 Removing and installing gearbox	60
2.1 Removing gearbox	61
2.2 Installing gearbox	70
3 Transporting gearbox	78
4 Checking gearbox oil	80
5 Dismantling and assembling gearbox	81
5.1 General layout of gearbox	81
5.2 Assembly overview	81
5.3 Assembly overview - removing and installing gearbox housing cover and 5th gear	82
5.4 Assembly overview - removing and installing gearbox housing and selector mechanism ..	84
5.5 Assembly overview - removing and installing input shaft, output shaft, differential and selector forks	85
5.6 Dismantling and assembling sequence	86
6 Assembly overview - servicing gearbox housing and clutch housing	101
7 Assembly overview - dismantling and assembling selector mechanism in gearbox	109
8 Assembly overview - dismantling and assembling selector forks	114



35 - Gears, shafts	120
1 Input shaft	120
1.1 Assembly overview - dismantling and assembling input shaft	120
1.2 Modified springs for 5th gear synchromesh from gearbox build date 05 11 1 onwards	127
1.3 Adjusting input shaft	128
1.4 Table of shims	131
2 Output shaft	133
2.1 Assembly overview - dismantling and assembling output shaft	133
2.2 1st gear synchromesh modified as of gearbox build date 02 05 0	148
2.3 Adjusting output shaft	151
3 Assembly overview - dismantling and assembling reverse shaft	155
39 - Final drive - differential	159
1 Renewing flange shaft oil seals (gearbox installed)	159
1.1 Renewing oil seal for left flange shaft	159
1.2 Renewing right flange shaft oil seal - two-piece oil seal and sleeve	161
1.3 Renewing right flange shaft oil seal - one-piece oil seal and sleeve	164
2 Table of adjustments	168
3 Differential	169
3.1 Assembly overview - dismantling and assembling differential	169
3.2 Adjusting differential	179