

Contents

00 - Technical data	1
1 Gearbox identification	1
1.1 Location on gearbox	1
1.2 Code, allocation, transmission ratios, capacities	2
2 Overview - power transmission	5
2.1 Identification and ratio	5
2.2 Calculating ratio "i"	5
3 Repair instructions	7
3.1 Contact corrosion	7
3.2 General repair instructions	7
30 - Clutch	12
1 Servicing clutch mechanism	12
1.1 Checking hydraulic clutch mechanism	12
1.2 Assembly overview - pedal cluster	13
1.3 Removing and installing over-centre spring	15
1.4 Removing and installing clutch pedal	16
1.5 Assembly overview - hydraulic system	17
1.6 Removing and installing clutch master cylinder	19
1.7 Removing and installing clutch slave cylinder	23
1.8 Bleeding clutch system	25
2 Servicing clutch release mechanism	27
2.1 Renewing input shaft oil seal	29
3 Servicing clutch	31
3.1 Fault-finding on power transmission - complaints regarding defects on the clutch and clutch mechanism	31
3.2 Servicing clutch - assembly overview	36
3.3 Removing and installing clutch	38
34 - Controls, housing	40
1 Servicing selector mechanism	40
1.1 Installation position of selector mechanism	40
1.2 Removing and installing gear knob and cover	41
1.3 Servicing gear lever and selector housing	44
1.4 Removing and installing selector cables - assembly overview	46
1.5 Removing and installing selector mechanism	50
1.6 Adjusting selector mechanism	54
2 Removing and installing gearbox	59
3 Transporting gearbox	70
4 Checking gearbox oil	72
5 Dismantling and assembling gearbox	73
5.1 General layout of gearbox	73
5.2 Removing and installing gearbox housing cover and 5th gear	74
5.3 Removing and installing clutch housing	76
5.4 Removing and installing input shaft, output shaft, differential, selector mechanism and selector forks	76
5.5 Dismantling and assembling sequence	78
5.6 Modifying gearbox support 3221	80
6 Servicing gearbox housing and clutch housing	89
7 Dismantling and assembling selector mechanism in gearbox	95
8 Dismantling and assembling selector forks	99



35 - Gears, shafts	104
1 Dismantling and assembling input shaft	104
2 Dismantling and assembling output shaft	118
39 - Final drive - differential	129
1 Renewing flange shaft oil seals with gearbox installed	129
1.1 Renewing left flange shaft oil seal	129
1.2 Renewing right flange shaft oil seal	131
2 Dismantling and assembling differential	134
2.1 Modified gearbox housing and tapered roller bearings for differential from gearbox build date 10 06 2 onwards	142
3 Adjusting differential	148