

Contents

00 - Technical data	1
1 Gearbox identification	1
1.1 Code, allocation, transmission ratios	2
2 Capacities	3
3 Overview - power transmission	4
3.1 Calculating ratio "i"	4
4 Safety precautions	6
5 Notes on tow-starting and towing	7
6 Repair instructions	8
7 Rules for cleanliness when working on 5-speed manual gearbox	12
8 Contact corrosion	13
9 Routing and attachment of pipes, hoses and wiring	14
30 - Clutch	15
1 Assembly overview - clutch mechanism	15
1.1 Removing and installing clutch slave cylinder	17
1.2 Adjusting clutch play	20
2 Assembly overview - clutch release mechanism	21
2.1 Servicing clutch release mechanism	21
3 Assembly overview - clutch	26
3.1 Removing and installing clutch plate and clutch pressure plate	28
34 - Controls, housing	31
1 Overview - selector mechanism	31
1.1 Checking selector mechanism	31
2 Assembly overview - gear knob and cover	33
2.1 Removing and installing gear knob and cover	33
2.2 Removing and installing mounting and symbol panel	34
3 Assembly overview - selector mechanism	36
3.1 Removing and installing selector mechanism	38
3.2 Dismantling and assembling selector mechanism	39
3.3 Removing and installing selector lever push rod	42
3.4 Removing and installing potentiometer for selector lever forward and backward G272	43
3.5 Removing and installing selector lever lock solenoid N110	43
4 Assembly overview - gear actuator	46
4.1 Removing and installing gear actuator	50
4.2 Adjusting gear actuator	58
4.3 Renewing gasket for gear actuator	59
5 Assembly overview - hydraulic control unit, pressure accumulator	68
5.1 Removing and installing hydraulic control unit	70
6 Assembly overview - pipe/hose assemblies	76
6.1 Removing and installing pipe/hose assemblies	79
7 Fluid level for clutch mechanism and selector mechanism	84
8 Removing gearbox	85
9 Installing gearbox	97
10 Transporting gearbox	102
11 Securing gearbox/transmission unit to engine and gearbox support	104
12 Checking gear oil level and topping up	105



13	Assembly overview - gearbox housing, selector mechanism, input shaft, output shaft (pinion shaft), differential, selector forks	107
13.1	Dismantling and assembling gearbox housing, selector mechanism, input shaft, output shaft (pinion shaft), differential and selector forks	111
14	Assembly overview - clutch housing	129
14.1	Servicing clutch housing	131
14.2	Adjusting selector finger and selector sleeve	136
35 - Gears, shafts		140
1	Assembly overview - input shaft	140
1.1	Dismantling and assembling input shaft	142
1.2	Adjusting input shaft	149
2	Assembly overview - output shaft	154
2.1	Dismantling and assembling output shaft	157
2.2	Adjusting output shaft	166
39 - Final drive - front differential		170
1	Renewing oil seals for flange shafts	170
2	Assembly overview - differential	173
2.1	Dismantling and assembling differential	175
2.2	Removing and installing final drive gear	179
2.3	Table of adjustments	181
2.4	Adjusting differential	181