

## Contents

<b>01</b>	<b>Self-diagnosis, electrical checks</b>	<b>1</b>
1	<b>Self-diagnosis</b>	1
1.1	Self-diagnosis function	1
1.2	Technical data of self-diagnosis	2
2	<b>Notes on tow-starting and towing</b>	3
3	<b>Electrical/electronic components and fitting locations</b>	4
3.1	Electric/electronic components in the vehicle	4
3.2	Electric/electronic gearbox components	8
3.3	Electric/electronic components on hydraulic control unit	11
4	<b>Performing self-diagnosis</b>	12
4.1	Safety precautions	12
4.2	Connecting vehicle diagnostic, testing and information system VAS 5051 A and selecting functions	12
4.3	List of selectable functions	14
5	<b>Interrogating fault memory</b>	15
5.1	Interrogating fault memory	15
5.2	Fault tables	16
6	<b>Final control diagnosis</b>	27
7	<b>Basic setting</b>	29
7.1	Performing basic setting	29
7.2	Programming the creep point	36
8	<b>Erasing fault memory</b>	38
9	<b>End of output</b>	39
10	<b>Measured value block</b>	40
10.1	Reading measured value block	40
10.2	List of selectable display groups	40
10.3	Test table	42
11	<b>CAN bus</b>	55
11.1	Testing a "two-line bus system"	55
12	<b>Electrical test</b>	58
12.1	Performing electrical test	58
12.2	Connect test box V.A.G 1598/18 to electronic manual gearbox control unit J514	59
12.3	Test table	61
13	<b>Fault analysis, complaints and fault remedy</b>	70
13.1	System leaking	70
13.2	Poor shifting quality	73
13.3	Voltage value of the clutch travel sender G162 cannot be adjusted	73
13.4	Basic setting cannot be performed	76
13.5	Vehicle does not start	76