

Contents

24 - Mixture preparation - injection	1
1 Safety precautions	1
1.1 Safety precautions when working on the fuel supply system	1
1.2 Safety precautions when using testers and measuring instruments during a road test	1
1.3 Safety precautions when working on the ignition system	2
1.4 Safety precautions when working on the cooling system	2
2 Repair instructions	3
2.1 Rules for cleanliness	3
2.2 Bolts/nuts	3
2.3 Identification plates	4
2.4 Use of impact wrenches	4
2.5 Foreign particles in engine	4
2.6 Contact corrosion	4
2.7 Routing and attachment of pipes, hoses and wiring	5
2.8 Installing radiators and condensers	5
2.9 Checking vacuum system	5
3 Servicing Motronic injection system	7
3.1 Technical data	7
3.2 Overview of fitting locations	7
3.3 Removing and installing injection system components	12
3.4 Dismantling and assembling intake manifold (part 1)	14
3.5 Dismantling and assembling intake manifold (part 2)	15
3.6 Fuel rail with high-pressure injectors	17
3.7 Removing and installing fuel pressure regulator and fuel metering valve	18
3.8 Wiring and component check with test box V.A.G 1598/31	19
3.9 Renewing engine control unit J220	20
3.10 Removing and installing intake manifold	21
3.11 Removing and installing high-pressure injectors	25
3.12 Renewing O-ring and teflon ring for high-pressure injector	27
3.13 Removing and installing high-pressure fuel pump	28
28 - Ignition system	31
1 Checking ignition system	31
1.1 Safety precautions when working on the ignition system	31
1.2 Safety precautions when using testers and measuring instruments during a road test	31
1.3 Technical data for ignition system	31