

Contents

00 - Technical data	1
1 Engine number	1
2 Safety precautions	2
2.1 Safety precautions when working on the fuel supply system	2
2.2 Safety precautions when using testers and measuring instruments during a road test	2
2.3 Safety precautions when working on the ignition system	3
2.4 Safety precautions when working on the cooling system	3
3 Repair instructions	4
3.1 Rules for cleanliness	4
3.2 Foreign particles in engine	4
3.3 Contact corrosion	4
3.4 Routing and attachment of pipes, hoses and wiring	5
3.5 Installing radiators and condensers	5
3.6 Checking vacuum system	5
3.7 General notes	6
10 - Removing and installing engine	7
1 Detaching bonnet	7
2 Removing engine	8
3 Separating engine and gearbox	23
4 Securing engine to engine and gearbox support	25
5 Installing engine	27
6 Assembly mountings	30
6.1 Assembly mountings - exploded view	30
6.2 Removing and installing engine mountings	31
6.3 Removing and installing pendulum support	32
13 - Crankshaft group	33
1 Cylinder block (pulley end)	33
1.1 Poly V-belt drive - exploded view	33
1.2 Removing and installing poly V-belt	35
1.3 Removing and installing tensioner for poly V-belt	36
1.4 Removing and installing poly V-belt pulley for crankshaft	37
1.5 Removing and installing bracket for ancillaries	38
2 Toothed belt drive	41
2.1 Toothed belt drive - exploded view	41
2.2 Checking valve timing	42
2.3 Removing and installing main drive toothed belt	45
2.4 Removing and installing coupling drive toothed belt	50
2.5 Checking tensioning roller for main drive toothed belt	51
2.6 Checking tensioning roller for coupling drive toothed belt	52
3 Sealing flanges and flywheel	54
3.1 Sealing flanges and flywheel - exploded view	54
3.2 Renewing crankshaft oil seal	55
3.3 Removing and installing flywheel	57
3.4 Removing and installing sealing flange (gearbox end)	57
4 Crankshaft	66
4.1 Crankshaft - exploded view	66
4.2 Crankshaft dimensions	67
4.3 Measuring axial clearance	68
4.4 Measuring radial clearance	68

5	Pistons and conrods	70
5.1	Pistons and conrods - exploded view	70
5.2	Piston and cylinder dimensions	73
5.3	Measuring radial clearance of conrods	73
15	Cylinder head, valve gear	74
1	Cylinder head	74
1.1	Cylinder head - exploded view	74
1.2	Removing and installing cylinder head	76
1.3	Checking compression	83
2	Valve gear	86
2.1	Camshaft housing - exploded view	86
2.2	Checking axial clearance of camshafts	89
2.3	Removing and installing inlet camshaft sprocket with camshaft adjuster and exhaust camshaft sprocket	90
2.4	Renewing oil seal for inlet camshaft sprocket with camshaft adjuster	94
2.5	Renewing exhaust camshaft oil seal	96
2.6	Removing and installing camshaft housing	98
2.7	Removing and installing camshafts	104
2.8	Valves - exploded view	104
2.9	Renewing valve stem oil seals with cylinder head installed	106
2.10	Renewing valve stem oil seals with cylinder head removed	109
2.11	Valve dimensions	112
2.12	Checking valve guides	112
2.13	Checking valves	113
2.14	Machining valve seats	114
17	Lubrication	117
1	Lubrication system	117
1.1	Lubrication system - exploded view	117
1.2	Removing and installing oil level and oil temperature sender G266	120
1.3	Removing and installing sump	121
1.4	Removing and installing oil pump	124
1.5	Removing and installing oil cooler	127
1.6	Removing and installing oil pressure switch F1	128
1.7	Checking oil pressure switch F1 and oil pressure	128
1.8	Engine oil	130
1.9	Checking oil level	130
19	Cooling	131
1	Cooling system	131
1.1	Connection diagram - coolant hoses	131
1.2	Draining and filling cooling system	133
1.3	Coolant pump - exploded view	138
1.4	Removing and installing coolant pump	139
1.5	Thermostat and rear coolant pipe - exploded view	140
1.6	Removing and installing map-controlled engine cooling system thermostat F265	141
1.7	Removing and installing thermostat housing and coolant pipe (rear)	144
1.8	Removing and installing coolant temperature sender G62	147
1.9	Removing and installing radiator outlet coolant temperature sender G83	148
1.10	Removing and installing radiator	149
1.11	Checking cooling system for leaks	153
1.12	Removing and installing radiator fan V7	155
26	Exhaust system	156
1	Silencers	156

1.1	Silencers - exploded view	156
1.2	Removing and installing starter catalytic converter	158
1.3	Removing and installing front exhaust pipe	159
1.4	Removing and installing main catalytic converter and centre silencer	160
1.5	Separating main catalytic converter and centre silencer	161
1.6	Checking exhaust system for leaks	163
2	Exhaust manifold	164
2.1	Exhaust manifold - exploded view	164
2.2	Removing and installing exhaust manifold	165
3	Exhaust gas recirculation system	167
3.1	Exhaust gas recirculation system - exploded view	167
3.2	Removing and installing exhaust gas recirculation valve N18 with exhaust gas recirculation potentiometer G212	168