

## Contents

<b>23 - Mixture preparation - injection</b> .....	<b>1</b>
<b>1 Safety precautions and rules for cleanliness</b> .....	<b>1</b>
1.1 Safety precautions .....	1
1.2 Rules for cleanliness .....	1
1.3 To avoid injury and/or damage to the injection and glow plug system, note the following: .....	2
<b>2 Injection system</b> .....	<b>3</b>
2.1 Fitting locations overview, engine code AMF .....	3
2.2 Fitting locations overview, engine code ANY .....	5
2.3 Fitting locations overview, engine codes BHC and ATL .....	6
2.4 Air cleaner - exploded view of components .....	9
2.5 Removing and installing air filter element .....	11
2.6 Removing and installing air mass meter G70 .....	12
2.7 Intake manifold for vehicles with engine code letters AMF, BHC - exploded view .....	12
2.8 Removing and installing intake manifold - vehicles with engine code letters AMF, BHC ..	13
2.9 Intake manifold for vehicles with engine code letters ATL - exploded view .....	16
2.10 Removing and installing intake manifold - vehicles with engine code letters ATL .....	17
2.11 Unit injector - exploded view .....	22
2.12 Removing and installing unit injector .....	22
2.13 Removing and installing O-rings for unit injector .....	26
2.14 Removing and installing electrical wiring harness for unit injectors and glow plugs .....	27
<b>3 Engine control unit</b> .....	<b>29</b>
3.1 Wiring and component check with test box V.A.G 1598/31 .....	29
3.2 Renewing diesel direct injection system control unit J248 .....	30
<b>28 - Glow plug system</b> .....	<b>32</b>
<b>1 Checking glow plug system</b> .....	<b>32</b>
1.1 Checking glow plugs (engine code AMF, ANY, BHC) .....	32
1.2 Checking glow plugs (engine code ATL) .....	33
1.3 Removing and installing glow plugs .....	34