

## Contents

<b>00 - Technical data</b>	<b>1</b>
1 Engine number	1
2 Engine data	2
3 Contact corrosion!	3
4 Safety precautions	4
5 Rules for cleanliness	6
6 Checking for leaks in the fuel system	7
<b>10 - Removing and installing engine</b>	<b>8</b>
1 Detaching bonnet	8
2 Removing engine	9
3 Separating engine and gearbox	26
4 Securing engine to assembly stand	27
5 Installing engine	29
6 Assembly mountings	33
6.1 Engine mounting with cover for engine mounting - exploded view	33
6.2 Removing and installing engine mounting with cover for engine mounting	33
6.3 Engine mounting without cover for engine mounting - exploded view	36
6.4 Removing and installing engine mounting without cover for engine mounting	37
6.5 Removing and installing pendulum support	40
<b>13 - Crankshaft group</b>	<b>41</b>
1 Cylinder block (pulley end)	41
1.1 Poly V-belt drive - exploded view	41
1.2 Removing and installing poly V-belt	42
1.3 Removing and installing vibration damper	43
1.4 Removing and installing bracket for ancillaries	44
2 Sealing flanges and dual-mass flywheel	47
2.1 Sealing flanges and dual-mass flywheel - exploded view	47
2.2 Renewing crankshaft oil seal (pulley end)	48
2.3 Removing and installing sealing flange (pulley end)	50
2.4 Removing and installing dual-mass flywheel	53
2.5 Removing and installing sealing flange (gearbox end)	54
3 Balance shaft and retaining frame	57
3.1 Balance shaft and retaining frame - exploded view	57
3.2 Removing and installing balance shaft and retaining frame	58
4 Crankshaft	63
4.1 Crankshaft - exploded view	63
4.2 Crankshaft dimensions	64
4.3 Removing and installing drive chain sprocket	65
5 Pistons and conrods	67
5.1 Pistons and conrods - exploded view	67
5.2 Checking piston projection at "TDC"	69
5.3 Piston and cylinder dimensions	71
<b>15 - Cylinder head, valve gear</b>	<b>72</b>
1 Cylinder head	72
1.1 Cylinder head - exploded view	72
1.2 Removing and installing cylinder head cover	74
1.3 Removing and installing cylinder head	77



1.4	Checking compression	97
<b>2</b>	<b>Toothed belt drive with hydraulically damped tensioning roller</b>	<b>100</b>
2.1	Toothed belt drive - exploded view	100
2.2	Removing and installing toothed belt	102
<b>3</b>	<b>Toothed belt drive with friction-damped tensioning roller</b>	<b>114</b>
3.1	Toothed belt drive - exploded view	114
3.2	Removing and installing toothed belt	116
<b>4</b>	<b>Servicing valve gear</b>	<b>127</b>
4.1	Valve gear - exploded view	127
4.2	Checking axial clearance of camshaft	129
4.3	Renewing camshaft oil seal	129
4.4	Removing and installing camshaft	132
4.5	Checking hydraulic bucket tappets	135
4.6	Renewing valve stem oil seals	136
4.7	Valve dimensions	140
4.8	Checking valve guides	140
4.9	Machining valve seats	141
4.10	Checking valves	143
<b>17 - Lubrication</b>		<b>144</b>
<b>1</b>	<b>Lubrication system</b>	<b>144</b>
1.1	Lubrication system - exploded view	144
1.2	Removing and installing sump	146
1.3	Oil pump and retaining frame - exploded view	149
1.4	Removing and installing oil pump	151
1.5	Oil filter bracket with oil cooler - exploded view	152
1.6	Removing and installing oil filter bracket	154
1.7	Removing and installing oil pressure switch F1	157
1.8	Checking oil pressure and oil pressure switch F1	158
1.9	Engine oil	159
1.10	Checking oil level	159
<b>19 - Cooling</b>		<b>161</b>
<b>1</b>	<b>Cooling system</b>	<b>161</b>
1.1	Diagram of coolant hose connections	161
1.2	Draining and filling cooling system	163
1.3	Removing and installing coolant pump	168
1.4	Removing and installing thermostat	169
1.5	Checking thermostat	170
1.6	Removing and installing radiator	170
1.7	Checking cooling system for leaks	175
1.8	Removing and installing radiator fan V7	177
<b>21 - Turbocharging/supercharging</b>		<b>179</b>
<b>1</b>	<b>Checking charge air system with turbocharger</b>	<b>179</b>
1.1	Test requirements for checking turbocharging system	179
1.2	Effects of leaks in charge air system	179
1.3	Checking charge pressure	180
1.4	Diagram of vacuum hose connections	182
<b>2</b>	<b>Servicing charge air system with turbocharger</b>	<b>185</b>
2.1	Turbocharger for vehicles with code letters AMF - exploded view	185
2.2	Removing and installing turbocharger - vehicles with engine code letters AMF	186
2.3	Turbocharger for vehicles with engine code letters ATL, BHC - exploded view	192
2.4	Removing and installing turbocharger - vehicles with engine code letters ATL, BHC	194
2.5	Fitting air pipes/hoses with plug-in connectors	202

2.6	Charge air cooler - exploded view .....	202
2.7	Removing and installing charge air cooler .....	203
<b>26</b>	<b>- Exhaust system .....</b>	<b>204</b>
<b>1</b>	<b>Removing and installing parts of exhaust system .....</b>	<b>204</b>
1.1	Silencer - exploded view .....	204
1.2	Separating catalytic converter and rear silencer .....	205
1.3	Removing and installing catalytic converter .....	206
1.4	Removing and installing exhaust manifold - vehicles with engine code letters AMF .....	209
1.5	Removing and installing exhaust manifold - vehicles with engine code letters ATL, BHC .....	209
1.6	Checking exhaust system for leaks .....	209
<b>2</b>	<b>Exhaust gas recirculation system .....</b>	<b>210</b>
2.1	Diagram of vacuum hose connections .....	210
2.2	Exhaust gas recirculation system for vehicles with engine code letters AMF, BHC - exploded view .....	212
2.3	Exhaust gas recirculation system for vehicles with engine code letters ATL - exploded view .....	213
2.4	Removing and installing exhaust gas recirculation cooler - vehicles with engine code letters ATL .....	214
2.5	Checking exhaust gas recirculation .....	218
2.6	Checking mechanical exhaust gas recirculation valve .....	220