

Contents

20	Fuel supply system	1
1	Contact corrosion!	1
2	Notes for working on fuel supply system	2
2.1	Safety precautions when working on the fuel supply system	2
2.2	Rules for cleanliness	2
3	Fuel supply system	4
3.1	Overview: fuel tank with components	4
3.2	Removing, installing and checking gravity valve	6
3.3	Draining fuel tank	6
3.4	Removing and installing fuel tank with components	8
3.5	Fuel delivery unit and fuel gauge senders - exploded view of components	11
3.6	Checking fuel pump (electrical test)	13
3.7	Checking fuel pump delivery rate - MPI engine to 04.2002	15
3.8	Checking fuel pump delivery rate - MPI engine from 05.2002	18
3.9	Checking fuel pump delivery rate - FSI engine	20
3.10	Removing and installing fuel delivery unit	23
3.11	Checking fuel gauge sender G	25
3.12	Removing and installing fuel gauge sender G	27
4	Servicing fuel filter	29
4.1	Fuel filter for a fuel system with fuel return pipe - exploded view of components	29
4.2	Removing and installing fuel filter for a fuel system with fuel return pipe	29
4.3	Fuel filter for fuel system without fuel return pipe - exploded view	30
4.4	Removing and installing the fuel filter for a fuel system without fuel return pipe	31
5	Servicing components of activated charcoal filter system	33
5.1	Removing and installing activated charcoal filter	33
6	Servicing accelerator mechanism	35
6.1	Removing and installing accelerator pedal module with accelerator pedal sender	36
6.2	Adjusting accelerator pedal stop - vehicles with left-hand drive	36