

## Contents

<b>20</b>	<b>Fuel supply system</b> .....	<b>1</b>
1	<b>Contact corrosion!</b> .....	<b>1</b>
<b>2</b>	<b>Notes for working on fuel supply system</b> .....	<b>2</b>
2.1	Safety precautions when working on the fuel supply system .....	2
2.2	Rules for cleanliness .....	2
<b>3</b>	<b>Fuel supply system</b> .....	<b>3</b>
3.1	20 ltr. fuel tank with components - exploded view .....	3
3.2	34 ltr. fuel tank with components - exploded view .....	5
3.3	42 ltr. fuel tank with components - exploded view .....	7
3.4	Draining fuel tank .....	8
3.5	Removing and installing fuel tank .....	10
3.6	Fuel collector and fuel gauge sender - exploded view of components .....	14
3.7	Checking fuel gauge sender G .....	15
3.8	Removing and installing fuel gauge sender G .....	18
<b>4</b>	<b>Servicing tandem pump</b> .....	<b>21</b>
4.1	Checking tandem pump .....	21
4.2	Removing and installing tandem pump .....	23
<b>5</b>	<b>Servicing fuel cooler</b> .....	<b>27</b>
5.1	Removing and installing fuel cooler .....	27
<b>6</b>	<b>Servicing fuel filter</b> .....	<b>28</b>
6.1	Fuel filter on vehicles up to 04.2002 - exploded view of components .....	28
6.2	Removing and installing fuel filter on vehicles up to 04.2002 .....	29
6.3	Fuel filter on vehicles from 05.2002 onwards - exploded view of components .....	30
6.4	Removing and installing fuel filter on vehicles from 05.2002 onwards .....	31
6.5	Removing and installing fuel change-over valve .....	33
<b>7</b>	<b>Checking fuel system for leaks</b> .....	<b>35</b>
7.1	Checking for leaks .....	35
<b>8</b>	<b>Servicing accelerator mechanism</b> .....	<b>39</b>
8.1	Overview: accelerator mechanism .....	39
8.2	Removing and installing accelerator pedal module with accelerator position sender .....	40
8.3	Adjusting accelerator pedal stop - vehicles with left-hand drive .....	40