

001 - Basic equipment	1-30
1. Basic equipment	1-3
2. Earth connections	4
3. Earth connections	5
4. Starter, alternator, ignition/starter switch, X contact relief relay	6
5. Lighting switch, turn signal switch, headlight dipper/flasher switch, parking light switch, front and rear fog light switch	7
6. Switches and instruments light regulator, headlight range control adjuster	8
7. Intermittent wiper switch, windscreen washer pump switch, automatic intermittent wash/wipe relay	9
8. Intermittent wiper control, automatic intermittent wash/wipe relay, heater element for washer jet	10
9. Rear left fog light bulb, left tail light bulb, rear left turn signal bulb, left brake light bulb	11
10. Right tail light bulb, rear right turn signal bulb, right reversing light bulb, high level brake light bulb, number plate lights	12
11. Battery, fuses on fuse box, 12 V socket	13
12. Horn plate, horn/dual tone horn, dual tone horn relay, ashtray light bulb, cigarette lighter	14
13. Fuses on fuse box, diagnostic connector	15
14. Fuses on fuse box	16
15. Fuses on fuse box, glove box light	17
16. Twin filament bulb for right headlight, right side light bulb, front right turn signal bulb, right headlight range control motor	18
17. Twin filament bulb for left headlight, left side light bulb, front left turn signal bulb, left headlight range control motor	19
18. Hazard warning light switch, hazard warning light relay	20
19. Handbrake warning switch, bonnet contact switch, convenience system central control unit, luggage compartment light, left	21
20. Control unit with display in dash panel insert, warning lamps	22
21. Control unit with display in dash panel insert, fuel gauge sender, coolant temperature sender	23
22. Control unit with display in dash panel insert, oil pressure switch, oil temperature gauge, oil level/oil temperature sender	24
23. Control unit with display in dash panel insert, ABS with EDL control unit, ABS warning lamp	25
24. Belt switch - driver's side, brake fluid level warning contact, brake lining/pad wear sender, front left	26
25. Control unit with display in dash panel insert, immobilizer reading coil, ambient temperature sensor	27
26. Fresh air blower switch, power steering sensor, power steering control unit, fresh air blower with overheating fuse series resistor	28
27. Heater/heat output switch, fresh air/air recirculating flap switch, additional heating button (ECON)	29
28. Heated rear window switch, heated rear window relay, heated rear window	30
002 - Basic equipment for 1.2 litre TDI, engine code ANY	31-59
1. Basic equipment for 1.2 litre TDI, engine code ANY	31-33
2. Earth connections	34
3. Earth connections	35
4. Ignition/starter switch, X contact relief relay, consumer switch-off relay	36
5. Light switch, turn signal switch, headlight dipper/flasher switch, parking light switch, front and rear fog light switch	37
6. Switches and instruments light regulator, headlight range control adjuster	38
7. Intermittent wiper switch, washer pump switch, automatic intermittent wash/wipe relay	39
8. Intermittent wiper control, automatic intermittent wash/wipe relay, heater element for washer jet	40
9. Reversing light switch, rear left fog light bulb, left tail light bulb, rear left turn signal bulb, left brake light bulb	41
10. Right tail light bulb, rear right turn signal bulb, right reversing light bulb, high level brake light bulb, number plate lights	42
11. Battery, starter, alternator, starter inhibitor and reversing light relay, voltage stabiliser	43
12. Voltage stabiliser, 12 V socket	44
13. Horn plate, horn/dual tone horn, dual tone horn relay, ashtray light bulb, cigarette lighter	45
14. Fuses on fuse box	46
15. Fuses on fuse box	47
16. Fuses on fuse box, glove box light	48
17. Twin filament bulb for right headlight, right side light bulb, front right turn signal bulb, right headlight range control motor	49
18. Twin filament bulb for left headlight, left side light bulb, front left turn signal bulb, left headlight range control motor	50
19. Hazard warning light switch, hazard warning light relay	51
20. Handbrake warning switch, handbrake warning lamp control unit, luggage compartment light, left	52
21. Control unit with display in dash panel insert, warning lamps	53

22. Fuel gauge sender, coolant temperature sender, control unit with display in dash panel insert	54
23. Immobilizer reading coil, oil pressure switch, ambient temperature sensor, speedometer sender	55
24. ABS with EDL control unit, control unit with display in dash panel insert	56
25. Belt switch (driver s side), brake fluid level warning contact, brake lining/pad wear sender, front left	57
26. Fresh air blower switch, power steering control unit, fresh air blower with overheating fuse series resistor	58
27. Heated rear window switch, fresh air/air recirculating flap switch, heated rear window relay	59
003 - 1.6 litre FSI engine (81 kW - Motronic - 4-cylinder), engine code BAD	60-74
1. 1.6 litre FSI engine (81 kW - Motronic - 4-cylinder), engine code BAD	60-62
2. Battery, starter, alternator, ignition/starter switch, fuses on fuse box	63
3. Fuel pump relay, Motronic control unit, Motronic current supply relay, air mass meter fuse, engine control unit fuse	64
4. Brake light switch, clutch pedal switch, Motronic control unit, injectors	65
5. Inlet camshaft timing adjustment valve -1-, fuel pressure regulating valve, fuel metering valve, intake manifold flap air flow control valve	66
6. Air mass meter, exhaust gas temperature sender -1-, brake servo pressure sensor, Motronic control unit	67
7. NOx sender, Motronic control unit, NOx sensor control unit	68
8. Heater/heat output switch, lambda probe, activated charcoal filter system solenoid valve 1 (pulsed), lambda probe heater	69
9. Cruise control system switch, accelerator pedal position senders, Motronic control unit, throttle valve module	70
10. Coolant temperature senders, engine speed sender, Hall sender, knock sensor I, intake manifold pressure sender	71
11. Thermo-switch for coolant circulation, exhaust gas recirculation potentiometer, fuel pressure sender, intake manifold flap potentiometer	72
12. Motronic control unit, ignition coils with output stage, spark plug connector, spark plugs	73
13. Oil pressure switch, fuel pump (pre-supply pump), oil level/oil temperature sender, control unit with display in dash panel insert	74
004 - 1.4 litre fuel injection engine (55 kW - Magneti Marelli - 4-cylinder), engine code BBY	75-86
1. 1.4 litre fuel injection engine (55 kW - Magneti Marelli - 4-cylinder), engine code BBY	75-76
2. Battery, starter, alternator, ignition/starter switch, fuses on fuse box	77
3. Fuel pump relay, airbag control unit, 4LV (injection system) control unit, fuses on fuse box	78
4. Lambda probe, lambda probe downstream of catalytic converter, injectors, activated charcoal filter system solenoid valve 1 (pulsed)	79
5. Exhaust gas recirculation potentiometer, throttle valve module, heater element (crankcase breather)	80
6. Cruise control system switch, brake light switch, accelerator pedal position senders, 4LV (injection system) control unit	81
7. Coolant temperature senders, engine speed sender, Hall sender, knock sensor, intake manifold pressure sender	82
8. 4LV (injection system) control unit, ignition coils with output stage, spark plug connector, spark plugs	83
9. Air conditioning system/Climatronic operating and display unit, clutch pedal switch, 4LV (injection system) control unit	84
10. Oil pressure switch, fuel pump (pre-supply pump), oil level/oil temperature sender, control unit with display in dash panel insert	85
11. Oil pressure switch, fuel pump (pre-supply pump), oil level/oil temperature sender, control unit with display in dash panel insert	86
005 - Radiator fan control - 350W	87-90
1. Radiator fan control - 350W	87-88
2. Battery, ignition/starter switch, radiator fan control unit, radiator fan control unit fuse	89
3. Air conditioning system/Climatronic operating and display unit, Motronic control unit, radiator fan control unit, radiator fan	90
006 - 1.2 litre unit injector, TDI engine (45 kW - 3-cylinder), engine code ANY	91-104
1. 1.2 litre unit injector, TDI engine (45 kW - 3-cylinder), engine code ANY	91-93
2. Battery, starter, alternator, ignition/starter switch	94
3. Additional heater fuse, fuses on fuse box	95
4. Relay for glow plugs, diesel direct injection system control unit, terminal 30 voltage supply relay, glow plugs - (engine)	96
5. Kick-down switch, idling switch, coolant temperature senders, accelerator pedal position sender, diesel direct injection system control unit	97
6. Brake light switch, diesel direct injection system control unit, heater element (crankcase breather), unit injector solenoid valves	98
7. Engine speed sender. fuel temperature sender. diesel direct injection system control unit.	99

electronic manual gearbox control unit	
8. Hall sender, exhaust gas recirculation valve, charge pressure control solenoid valve, throttle butterfly valve, engine control unit fuse	100
9. Air mass meter, intake manifold pressure sender, intake manifold temperature sender, diesel direct injection system control unit	101
10. Air conditioning system/Climatronic operating and display unit, airbag control unit, diesel direct injection system control unit	102
11. Radiator fan control unit, low heat output relay, high heat output relay, additional heating heater element	103
12. Oil pressure switch, speedometer sender, oil level/oil temperature sender, control unit with display in dash panel insert	104
007 - 1.4 litre unit injector, TDI engine (55 kW - 3-cylinder), engine code AMF	105-118
1. 1.4 litre unit injector, TDI engine (55 kW - 3-cylinder), engine code AMF	105-106
2. Battery, starter, alternator, ignition/starter switch	107
3. Additional heater fuse, fuses on fuse box	108
4. Relay for glow plugs, diesel direct injection system control unit, terminal 30 voltage supply relay, glow plugs - (engine)	109
5. Kick-down switch, idling switch, coolant temperature senders, accelerator pedal position sender, diesel direct injection system control unit	110
6. Cruise control system switch, fuel temperature sender, airbag control unit, diesel direct injection system control unit	111
7. Diesel direct injection system control unit, heater element (crankcase breather), unit injector solenoid valves	112
8. Air mass meter, intake manifold pressure sender, intake manifold temperature sender, diesel direct injection system control unit	113
9. Clutch pedal switch, Hall sender, exhaust gas recirculation valve, charge pressure control solenoid valve, throttle butterfly valve, engine control unit fuse	114
10. Air conditioning system/Climatronic operating and display unit, additional heating button (ECON), brake light switch, engine speed sender	115
11. Heater control unit, glow plug with flame monitor, combustion air blower, metering pump	116
12. Low heat output relay, high heat output relay, additional air heater control unit, additional heating heater element	117
13. Oil pressure switch, oil level/oil temperature sender, control unit with display in dash panel insert	118
008 - 5-speed manual gearbox 085 DS	119-127
1. 5-speed manual gearbox 085 DS	119-120
2. Battery, ignition/starter switch, starter inhibitor and reversing light relay, voltage stabiliser, hydraulic pump relay fuse	121
3. Electronic manual gearbox control unit, handbrake warning lamp control unit, ignition key withdrawal lock control unit	122
4. Start/Stop operation switch, reversing light switch, convenience system central control unit, consumer switch-off relay	123
5. Selector lever gate detector switch, selector lever detector switch for N, selector lever detector switch for stopped, selector lever lock solenoid	124
6. Brake pressure switch, gear detector potentiometer -1-, gearbox hydraulic pressure sender, gearbox hydraulic pump relay	125
7. Gearbox speed sender, clutch travel sender, electronic manual gearbox control unit, selector lever valve 1	126
8. Diesel direct injection system control unit, control unit with display in dash panel insert, electronic manual gearbox control unit	127
009 - Airbags for driver and front passenger with belt tensioners and side airbags	128-134
1. Airbags for driver and front passenger with belt tensioners and side airbags	128-129
2. Airbag coil connector/return spring with slip ring, airbag igniter - driver's side, airbag igniter 1 - front passenger's side, belt tensioner igniter 1 - driver's side	130
3. Airbag disabling key switch - front passenger's side, airbag control unit, curtain airbag igniter - driver's side, curtain airbag igniter - front passenger's side	131-132
4. Side airbag crash sensor - driver's side, side airbag crash sensor - front passenger's side, side airbag igniter - driver's side, side airbag igniter - front passenger's side	133
5. Hazard warning light relay, Motronic control unit, diesel direct injection system control unit, 4LV (injection system) control unit, convenience system central control unit	134
010 - Anti-lock brake system (ABS) MK60 with electronic stabilisation program (ESP)	135-142
1. Anti-lock brake system (ABS) MK60 with electronic stabilisation program (ESP)	135-136
2. Battery, ignition/starter switch, ABS with EDL control unit, ABS control unit fuse 1	137
3. Rear right speed sensor, front right speed sensor, rear left speed sensor, front left speed sensor, steering angle sender	138
4. ESP sensor unit. front right ABS inlet valve. front right ABS outlet valve. electronic	139

stabilisation program switch valve -1-, electronic stabilisation program high pressure valve -1-	
5. ABS with EDL control unit	140
6. Traction control system switch, brake light switch, ABS with EDL control unit, brake pressure sender -1-, ABS hydraulic pump	141
7. Front left brake lining/pad wear sender, ABS with EDL control unit, control unit with display in dash panel insert	142
011 - Sliding/tilting sunroof	143-145
1. Sliding/tilting sunroof	143-144
2. Sunroof switch, sliding sunroof adjustment control unit, convenience system central control unit, sliding sunroof motor	145
012 - Multi-function steering wheel	146-150
1. Multi-function steering wheel	146-147
2. Battery, ignition/starter switch, multi-function steering wheel control unit, multi-function steering wheel fuse	148
3. Operating unit in steering wheel, airbag coil connector/return spring with slip ring, airbag control unit, multi-function steering wheel control unit	149
4. Control unit with display in dash panel insert, multi-function steering wheel control unit	150
013 - Trailer socket	151-155
1. Trailer socket	151-152
2. Side light switch, brake light switch, trailer socket	153
3. Ignition/starter switch, parking light switch, reversing light switch, trailer socket	154
4. Turn signal switch, front and rear fog light switch, hazard warning light relay, convenience system central control unit, trailer operation warning lamp	155
014 - Radiator fan control - 80W (without air conditioner)	156-158
1. Radiator fan control - 80W (without air conditioner)	156-157
2. Battery, ignition/starter switch, radiator fan thermo-switch, radiator fan	158
015 - Radiator fan control - 60 W/100 W (without air conditioning system)	159-161
1. Radiator fan control - 60 W/100 W (without air conditioning system)	159-160
2. Battery, ignition/starter switch, radiator fan thermo-switches, radiator fan	161
016 - Radiator fan control - 350 W (with air conditioning system)	162-165
1. Radiator fan control - 350 W (with air conditioning system)	162-163
2. Battery, radiator fan control unit, radiator fan control unit fuse, radiator fan	164
3. Air conditioning system/Climatronic operating and display unit, radiator fan thermo-switches, radiator fan control unit	165
017 - Automatic anti-dazzle interior mirror	166-168
1. Automatic anti-dazzle interior mirror	166-167
2. Ignition/starter switch, reversing light switch, front interior light, automatic anti-dazzle interior mirror	168
018 - CAN bus wires	169-176
1. CAN bus wires	169
2. Motronic control unit, diesel direct injection system control unit, electronic manual gearbox control unit, 4LV (injection system) control unit	170
3. Steering angle sender, ABS with EDL control unit, diesel direct injection system control unit, power steering control unit	171
4. Control unit with display in dash panel insert	172
5. Air conditioning system/Climatronic operating and display unit, door control unit - driver's side, door control unit - front passenger's side, rear left door control unit	173
6. Convenience system central control unit, parking aid control unit, radio	174
7. Navigation system with CD drive control unit, multi-function steering wheel control unit, telephone/telematics control unit	175
8. Navigation operating electronics control unit, navigation/TV tuner, navigation interface	176
019 - Convenience systems	177-195
1. Convenience systems	177-179
2. Battery	180
3. Electric window single fuse, electric window single fuse 2	181
4. Interior monitor switch, tank filler flap remote release switch, central locking and anti-theft alarm system aerial	182
5. Bonnet contact switch, anti-theft alarm ultra-sonic sensor, control unit with display in dash panel insert, convenience system central control unit	183
6. Glass breakage sensor - rear window, anti-theft alarm system horn, hazard warning light relay, airbag control unit, convenience system central control unit	184
7. Convenience system central control unit, front interior light, reading light - front passenger's side, left luggage compartment light, rear interior light	185
8. Handbrake warning switch, rear lid contact switch, vanity mirror light bulb, rear lid release motor	186
9. Rear left door contact switch. rear left central locking lock unit (without rear electric	187

windows), convenience system central control unit	
10. Rear right door contact switch, rear right central locking lock unit (without rear electric windows), convenience system central control unit	188
11. Rear electric window isolation switch, front left electric window switch, rear right electric window switch (driver), door control unit - driver side	189
12. Door contact switch - driver's side, central locking lock unit - driver's side, door control unit - driver's side	190
13. Mirror adjustment switch, interior locking switch - driver side, heated exterior mirror - driver's side	191
14. Door contact switch - front passenger's side, central locking lock unit - front passenger's side, door control unit - front passenger's side	192
15. Electric window switch in front passenger's door, mirror adjustment motor - front passenger's side, heated exterior mirror - front passenger's side	193
16. Rear left electric window switch (in door), rear left central locking lock unit, rear left door control unit	194
17. Rear right electric window switch (in door), rear right central locking lock unit, rear right door control unit	195
020 - Diagnostic connector	196-199
1. Diagnostic connector	196-197
2. Ignition/starter switch	198
3. Control unit with display in dash panel insert	199
021 - Parking aid, rear	200-203
1. Parking aid, rear	200-201
2. Ignition/starter switch, reversing light switch, parking aid control unit	202
3. Rear left parking aid sender, rear right parking aid sender, rear parking aid warning buzzer	203
022 - Driver information system	204-209
1. Driver information system	204-205
2. Ignition/starter switch, bulb check warning unit, twin filament bulb for left headlight	206
3. Lighting switch, right tail light bulb, left tail light bulb, left brake light bulb, right brake light bulb	207
4. Brake light switch, bulb check warning unit, right side light bulb, trailer socket	208
5. Function selection switch, washer fluid warning contact, control unit with display in dash panel insert	209
023 - Provision for mobile phone	210-215
1. Provision for mobile phone	210-211
2. Telephone microphone, mobile phone operating electronics control unit	212
3. Navigation system with CD drive control unit, navigation operating electronics control unit, radio, telephone/navigation systems loudspeaker	213
4. Mobile phone operating electronics control unit, mobile telephone	214
5. Mobile phone operating electronics control unit, telephone aerial, aerial amplifier for mobile phone	215
024 - Air conditioning system	216-224
1. Air conditioning system	216-217
2. Ignition/starter switch, X contact relief relay	218
3. Air conditioning system/Climatronic operating and display unit, fresh air blower control unit, air conditioning system compressor regulating valve	219
4. Temperature flap control motor potentiometer, central flap control motor potentiometer, defroster flap control motor potentiometer	220
5. Fresh air intake duct temperature sensor, sunlight penetration photosensor, evaporator out-flow temperature sender	221
6. Air conditioning system/Climatronic operating and display unit, high pressure sender, heated rear window	222
7. Radiator fan control unit, radiator fan control unit fuse, radiator fan	223
8. Radiator fan thermo-switches, Motronic control unit, radiator fan control unit	224
025 - Air conditioning system for 1.2 litre TDI engine, engine code ANY	225-233
1. Air conditioning system for 1.2 litre TDI engine, engine code ANY	225-226
2. Ignition/starter switch, X contact relief relay, consumer switch-off relay	227
3. Starter inhibitor and reversing light relay, electronic manual gearbox control unit, voltage stabiliser	228
4. Air conditioning system/Climatronic operating and display unit, fresh air blower control unit, fresh air blower	229
5. Air conditioning system/Climatronic operating and display unit, control unit with display in dash panel insert	230
6. Temperature flap control motor potentiometer, central flap control motor potentiometer, defroster flap control motor potentiometer	231
7. High pressure sender. fresh air intake duct temperature sensor. sunlight penetration photosensor.	232

evaporator out-flow temperature sender	
8. Radiator fan thermo-switches, radiator fan control unit, radiator fan control unit fuse, radiator fan	233
026 - Navigation system (NS LOW)	234-239
1. Navigation system (NS LOW)	234-235
2. Ignition/starter switch, reversing light switch, navigation system with CD drive control unit	236
3. Navigation system with CD drive control unit, mobile phone operating electronics control unit, telephone/telematics control unit, radio	237
4. Control unit with display in dash panel insert, navigation system with CD drive control unit	238
5. Function selection switch II, control unit with display in dash panel insert	239
027 - Radio sound systems (radio generation II)	240-251
1. Radio sound systems (radio generation II)	240-241
2. Ignition/starter switch, voltage stabiliser	242
3. Front loudspeakers	243
4. Passive loudspeakers, rear	244
5. Active loudspeakers, rear	245
6. Bose loudspeakers, front	246
7. Bose loudspeakers, rear	247
8. CD changer	248
9. Mobile phone operating electronics control unit, telephone/telematics control unit	249
10. Control unit with display in dash panel insert	250
11. Aerial	251
028 - Radio navigation system (RNS-D)	252-265
1. Radio navigation system (RNS-D)	252-253
2. Ignition/starter switch, navigation operating electronics control unit	254
3. Reversing light switch, ABS with EDL control unit, mobile phone operating electronics control unit, telephone/telematics control unit	255
4. Front loudspeakers	256
5. Passive loudspeakers, rear	257
6. Active loudspeakers, rear	258
7. Bose loudspeakers, front	259
8. Bose loudspeakers, rear	260
9. CD changer	261
10. Navigation/TV tuner	262
11. Lighting switch, navigation/TV tuner, navigation interface	263
12. Control unit with display in dash panel insert	264
13. Aerial	265
029 - Electric lumbar support adjustment	266-268
1. Electric lumbar support adjustment	266-267
2. Driver's seat lumbar support adjustment switch, front passenger's seat lumbar support adjustment switch, seat adjustment fuse	268
030 - Headlight washer system	269-272
1. Headlight washer system	269-270
2. Ignition/starter switch, automatic intermittent wash/wipe relay, headlight washer system pump	271
3. Intermittent wiper switch, washer pump switch (automatic wash/wipe and headlight washer system)	272
031 - Seat heating	273-277
1. Seat heating	273-274
2. Ignition/starter switch, consumer switch-off relay, fuses	275
3. Heated driver's seat regulator, driver's seat temperature sensor, heated driver's seat cushion, heated driver's seat backrest, driver's seat cushion lateral support heater	276
4. Heated front passenger's seat regulator, front passenger's seat temperature sensor, heated front passenger's seat cushion, heated front passenger's seat backrest, front passenger's seat cushion lateral support heater	277
032 - Daytime driving lights	278-285
1. Daytime driving lights	278-279
2. Ignition/starter switch, X contact relief relay	280
3. Lighting switch, control unit with display in dash panel insert	281
4. Headlight dipper/flasher switch, switches and instruments light regulator, headlight range control adjuster	282
5. Bulb check warning unit, twin filament bulb for right headlight, right tail light bulb, right side light bulb	283
6. Bulb check warning unit, twin filament bulb for left headlight, left side light bulb, left tail light bulb	284
7. Bulb check warning unit, twin filament bulb/sealed beam insert - left, tail light bulb - left, fuses	285
033 - Telematics	286-295

1. Telematics	286-287
2. Telephone/telematics control unit, fuses	288
3. Telephone/telematics control unit, aerials	289
4. Telematics operating unit, telephone/telematics control unit, additional loudspeaker for telematics	290
5. Telephone handset, telephone/telematics control unit	291
6. Telephone/telematics control unit, fax unit	292
7. Telephone/telematics control unit, telephone microphone	293
8. Telephone/telematics control unit, CAN bus	294
9. Function selection switch II	295
034 - Fog lights	296-299
1. Fog lights	296-297
2. Battery, ignition/starter switch, X contact relief relay	298
3. Lighting switch, front and rear fog light switch, fog light bulbs	299
035 - Basic equipment	300-329
1. Basic equipment	300-302
2. Earth connections	303
3. Earth connections	304
4. Starter, alternator, ignition/starter switch, X contact relief relay	305
5. Light switch, turn signal switch, headlight dipper/flasher switch, parking light switch, front and rear fog light switch	306
6. Switches and instruments light regulator, headlight range control adjuster	307
7. Intermittent wiper switch, washer pump switch, automatic intermittent wash/wipe relay	308
8. Intermittent wiper control, automatic intermittent wash/wipe relay, heater element for washer jet	309
9. Rear left fog light bulb, left tail light bulb, rear left turn signal bulb, left brake light bulb	310
10. Right tail light bulb, rear right turn signal bulb, right reversing light bulb, high level brake light bulb, number plate lights	311
11. Battery, fuses on fuse box, 12 V socket	312
12. Horn plate, horn/dual tone horn, dual tone horn relay, ashtray light bulb, cigarette lighter	313
13. Fuses on fuse box, diagnostic connector	314
14. Fuses on fuse box	315
15. Fuses on fuse box, glove box light	316
16. Twin filament bulb for right headlight, right side light bulb, front right turn signal bulb, right headlight range control motor	317
17. Twin filament bulb for left headlight, left side light bulb, front left turn signal bulb, left headlight range control motor	318
18. Hazard warning light switch, hazard warning light relay	319
19. Handbrake warning switch, bonnet contact switch, convenience system central control unit, luggage compartment light, left	320
20. Control unit with display in dash panel insert, warning lamps	321
21. Control unit with display in dash panel insert, fuel gauge sender, coolant temperature sender	322
22. Control unit with display in dash panel insert, oil pressure switch, oil temperature gauge, oil level/oil temperature sender	323
23. Control unit with display in dash panel insert, ABS with EDL control unit, ABS warning lamp	324
24. Belt switch (driver s side), brake fluid level warning contact, brake lining/pad wear sender, front left	325
25. Control unit with display in dash panel insert, immobilizer reading coil, ambient temperature sensor	326
26. Fresh air blower switch, power steering sensor, power steering control unit, fresh air blower with overheating fuse series resistor	327
27. Heater/heat output switch, fresh air/air recirculating flap switch	328
28. Heated rear window switch, heated rear window relay, heated rear window	329
036 - Fog lights	330-333
1. Fog lights	330-331
2. Battery, ignition/starter switch, X contact relief relay	332
3. Lighting switch, front and rear fog light switch, fog light bulbs	333
037 - Basic equipment for 1.2 litre TDI, engine code ANY	334-362
1. Basic equipment for 1.2 litre TDI, engine code ANY	334-336
2. Earth connections	337
3. Earth connections	338
4. Ignition/starter switch, X contact relief relay, consumer switch-off relay	339
5. Light switch, turn signal switch, headlight dipper/flasher switch, parking light switch, front and rear fog light switch	340
6. Switches and instruments light regulator, headlight range control adjuster	341
7. Intermittent wiper switch, washer pump switch, automatic intermittent wash/wipe relay	342
8. Intermittent wiper control. automatic intermittent wash/wipe relay. heater element for washer jet	343

9. Reversing light switch, rear left fog light bulb, left tail light bulb, rear left turn signal bulb, left brake light bulb	344
10. Right tail light bulb, rear right turn signal bulb, right reversing light bulb, high level brake light bulb, number plate lights	345
11. Battery, starter, alternator, starter inhibitor and reversing light relay, voltage stabiliser	346
12. Voltage stabiliser, 12 V socket	347
13. Horn plate, horn/dual tone horn, dual tone horn relay, ashtray light bulb, cigarette lighter	348
14. Fuses on fuse box	349
15. Fuses on fuse box	350
16. Fuses on fuse box, glove box light	351
17. Twin filament bulb for right headlight, right side light bulb, front right turn signal bulb, right headlight range control motor	352
18. Twin filament bulb for left headlight, left side light bulb, front left turn signal bulb, left headlight range control motor	353
19. Hazard warning light switch, hazard warning light relay	354
20. Handbrake warning switch, handbrake warning lamp control unit, luggage compartment light, left	355
21. Control unit with display in dash panel insert, warning lamps	356
22. Fuel gauge sender, coolant temperature sender, control unit with display in dash panel insert	357
23. Immobilizer reading coil, oil pressure switch, ambient temperature sensor, speedometer sender	358
24. ABS with EDL control unit, control unit with display in dash panel insert	359
25. Belt switch (driver s side), brake fluid level warning contact, brake lining/pad wear sender, front left	360
26. Fresh air blower switch, power steering control unit, fresh air blower with overheating fuse series resistor	361
27. Heated rear window switch, fresh air/air recirculating flap switch, heated rear window relay	362
038 - 1.4 litre unit injector, TDI engine (55 kW - 3-cylinder), engine code BHC	363-374
1. 1.4 litre unit injector, TDI engine (55 kW - 3-cylinder), engine code BHC	363-364
2. Battery, starter, alternator, ignition/starter switch	365
3. Relay for glow plugs, diesel direct injection system control unit, terminal 30 voltage supply relay, glow plugs - (engine)	366
4. Kick-down switch, idling switch, coolant temperature senders, accelerator pedal position sender, diesel direct injection system control unit	367
5. Cruise control system switch, fuel temperature sender, airbag control unit, diesel direct injection system control unit	368
6. Diesel direct injection system control unit, heater element (crankcase breather), unit injector solenoid valves	369
7. Air mass meter, intake manifold pressure sender, intake manifold temperature sender, diesel direct injection system control unit	370
8. Clutch pedal switch, Hall sender, exhaust gas recirculation valve, charge pressure control solenoid valve, engine control unit fuse, intake manifold flap motor	371
9. Air conditioning system/Climatronic operating and display unit, brake light switch, engine speed sender	372
10. Control unit with display in dash panel insert, radiator fan control unit, additional air heater control unit	373
11. Oil pressure switch, oil level/oil temperature sender, control unit with display in dash panel insert	374
039 - 1.4 litre unit injector, TDI engine (55 kW - 3-cylinder), engine code AMF	375-386
1. 1.4 litre unit injector, TDI engine (55 kW - 3-cylinder), engine code AMF	375-376
2. Battery, starter, alternator, ignition/starter switch	377
3. Relay for glow plugs, diesel direct injection system control unit, terminal 30 voltage supply relay, glow plugs (engine)	378
4. Kick-down switch, idling switch, coolant temperature senders, accelerator pedal position sender, diesel direct injection system control unit	379
5. Cruise control system switch, fuel temperature sender, airbag control unit, diesel direct injection system control unit	380
6. Diesel direct injection system control unit, heater element (crankcase breather), unit injector solenoid valves	381
7. Air mass meter, intake manifold pressure sender, intake manifold temperature sender, diesel direct injection system control unit	382
8. Clutch pedal switch, Hall sender, exhaust gas recirculation valve, charge pressure control solenoid valve, throttle butterfly valve, engine control unit fuse	383
9. Air conditioning system/Climatronic operating and display unit, brake light switch, engine speed sender	384
10. Control unit with display in dash panel insert, radiator fan control unit, additional air heater control unit	385
11. Oil pressure switch. oil level/oil temperature sender. control unit with disolvav in dash panel	386

insert	
040 - 1.2 litre unit injector, TDI engine (45 kW - 3-cylinder), engine code ANY	387-400
1. 1.2 litre unit injector, TDI engine (45 kW - 3-cylinder), engine code ANY	387-389
2. Battery, starter, alternator, ignition/starter switch	390
3. Additional heater fuse, fuses on fuse box	391
4. Relay for glow plugs, diesel direct injection system control unit, terminal 30 voltage supply relay, glow plugs - (engine)	392
5. Kick-down switch, idling switch, coolant temperature senders, accelerator pedal position sender, diesel direct injection system control unit	393
6. Brake light switch, diesel direct injection system control unit, heater element (crankcase breather), unit injector solenoid valves	394
7. Engine speed sender, fuel temperature sender, diesel direct injection system control unit, electronic manual gearbox control unit	395
8. Hall sender, exhaust gas recirculation valve, charge pressure control solenoid valve, throttle butterfly valve, engine control unit fuse	396
9. Air mass meter, intake manifold pressure sender, intake manifold temperature sender, diesel direct injection system control unit	397
10. Air conditioning system/Climatronic operating and display unit, airbag control unit, diesel direct injection system control unit	398
11. Radiator fan control unit, low heat output relay, high heat output relay, additional heating heater element	399
12. Oil pressure switch, speedometer sender, oil level/oil temperature sender, control unit with display in dash panel insert	400
041 - 1.6 litre FSI engine (81 kW - Motronic - 4-cylinder), engine code BAD	401-415
1. 1.6 litre FSI engine (81 kW - Motronic - 4-cylinder), engine code BAD	401-403
2. Battery, starter, alternator, ignition/starter switch, fuses on fuse box	404
3. Fuel pump relay, Motronic control unit, Motronic current supply relay, air mass meter fuse, engine control unit fuse	405
4. Brake light switch, clutch pedal switch, Motronic control unit, injectors	406
5. Inlet camshaft timing adjustment valve -1-, fuel pressure regulating valve, fuel metering valve, intake manifold flap air flow control valve	407
6. Air mass meter, exhaust gas temperature sender -1-, brake servo pressure sensor, Motronic control unit	408
7. NOx sender, Motronic control unit, NOx sensor control unit	409
8. Heater/heat output switch, lambda probe, activated charcoal filter system solenoid valve 1 (pulsed), lambda probe heater	410
9. Cruise control system switch, accelerator pedal position senders, Motronic control unit, throttle valve module	411
10. Coolant temperature senders, engine speed sender, Hall sender, knock sensor I, intake manifold pressure sender	412
11. Thermo-switch for coolant circulation, exhaust gas recirculation potentiometer, fuel pressure sender, intake manifold flap potentiometer	413
12. Motronic control unit, ignition coils with output stage, spark plug connector, spark plugs	414
13. Oil pressure switch, fuel pump (pre-supply pump), oil level/oil temperature sender, control unit with display in dash panel insert	415
042 - Radiator fan control - 350W	416-419
1. Radiator fan control - 350W	416-417
2. Battery, ignition/starter switch, radiator fan control unit, radiator fan control unit fuse	418
3. Air conditioning system/Climatronic operating and display unit, Motronic control unit, radiator fan control unit, radiator fan	419
043 - Radiator fan control - 60W/100W (without air conditioner)	420-422
1. Radiator fan control - 60W/100W (without air conditioner)	420-421
2. Battery, ignition/starter switch, radiator fan thermo-switches, radiator fan	422
044 - Radiator fan control - 350W (with air conditioner)	423-426
1. Radiator fan control - 350W (with air conditioner)	423-424
2. Battery, radiator fan control unit, radiator fan control unit fuse, radiator fan	425
3. Air conditioning system/Climatronic operating and display unit, radiator fan thermo-switches, radiator fan control unit	426
045 - Convenience systems	427-444
1. Convenience systems	427-429
2. Battery, electric window single fuse	430
3. Interior monitor switch, tank filler flap remote release switch, central locking and anti-theft alarm system aerial	431
4. Bonnet contact switch, anti-theft alarm ultra-sonic sensor, control unit with display in dash panel insert, convenience system central control unit	432
5. Glass breakage sensor - rear window. anti-theft alarm svstem horn. hazard warnina light relav.	433

airbag control unit, convenience system central control unit	
6. Convenience system central control unit, front interior light, reading light - front passenger s side, left luggage compartment light, rear interior light	434
7. Handbrake warning switch, rear lid contact switch, vanity mirror light bulb, rear lid release motor	435
8. Rear left door contact switch, rear left central locking lock unit (without rear electric windows), convenience system central control unit	436
9. Rear right door contact switch, rear right central locking lock unit (without rear electric windows), convenience system central control unit	437
10. Rear electric window isolation switch, front electric window switches, rear electric window switches, door control unit, driver s side	438
11. Door contact switch - driver s side, central locking lock unit - driver s side, door control unit - driver s side	439
12. Mirror adjustment switch, interior locking switch - driver s side, heated exterior mirror - driver s side	440
13. Door contact switch - front passenger s side, central locking lock unit - front passenger s side, door control unit - front passenger s side	441
14. Electric window switch in front passenger s door, mirror adjustment motor - front passenger s side, heated exterior mirror - front passenger s side	442
15. Rear left electric window switch (in door), rear left central locking lock unit, rear left door control unit	443
16. Rear right electric window switch (in door), rear right central locking lock unit, rear right door control unit	444
046 - Airbags for driver and front passenger with belt tensioners and side airbags	445-450
1. Airbags for driver and front passenger with belt tensioners and side airbags	445-446
2. Airbag coil connector/return spring with slip ring, airbag igniter - driver's side, airbag igniter 1 - front passenger's side, belt tensioner igniter -1- - driver's side	447
3. Airbag disabling key switch - front passenger's side, airbag control unit, curtain airbag igniter - driver's side, curtain airbag igniter - front passenger's side	448
4. Side airbag crash sensor - driver's side, side airbag crash sensor - front passenger's side, side airbag igniter - driver's side, side airbag igniter - front passenger's side	449
5. Hazard warning light relay, Motronic control unit, diesel direct injection system control unit, 4LV (injection system) control unit, convenience system central control unit	450
047 - CAN bus wires	451-458
1. CAN bus wires	451
2. Motronic control unit, diesel direct injection system control unit, electronic manual gearbox control unit, 4LV (injection system) control unit	452
3. Steering angle sender, ABS with EDL control unit, diesel direct injection system control unit, power steering control unit	453
4. Control unit with display in dash panel insert	454
5. Air conditioning system/Climatronic operating and display unit, door control unit - driver's side, door control unit - front passenger's side, rear left door control unit	455
6. Convenience system central control unit, parking aid control unit, radio	456
7. Navigation system with CD drive control unit, multi-function steering wheel control unit, telephone/telematics control unit	457
8. Navigation operating electronics control unit, navigation/TV tuner, navigation interface	458
048 - Driver information system	459-464
1. Driver information system	459-460
2. Ignition/starter switch, bulb check warning unit, twin filament bulb for left headlight, right headlight range control motor	461
3. Lighting switch, right tail light bulb, left tail light bulb, left brake light bulb, right brake light bulb	462
4. Brake light switch, bulb check warning unit, right side light bulb, trailer socket	463
5. Function selection switch, washer fluid warning contact, control unit with display in dash panel insert	464
049 - Air conditioner	465-473
1. Air conditioner	465-466
2. Ignition/starter switch, X contact relief relay	467
3. Air conditioning system/Climatronic operating and display unit, fresh air blower control unit, air conditioning system compressor regulating valve	468
4. Temperature flap control motor potentiometer, central flap control motor potentiometer, defroster flap control motor potentiometer	469
5. Fresh air intake duct temperature sensor, sunlight penetration photosensor, evaporator out-flow temperature sender	470
6. Air conditioning system/Climatronic operating and display unit, high pressure sender, heated rear window	471

7. Radiator fan control unit, radiator fan control unit fuse, radiator fan	472
8. Radiator fan thermo-switches, Motronic control unit, radiator fan control unit	473
050 - Air conditioner for 1.2 litre TDI engine, engine code ANY	474-482
1. Air conditioner for 1.2 litre TDI engine, engine code ANY	474-475
2. Ignition/starter switch, X contact relief relay, consumer switch-off relay	476
3. Starter inhibitor and reversing light relay, electronic manual gearbox control unit, voltage stabiliser	477
4. Air conditioning system/Climatronic operating and display unit, fresh air blower control unit, fresh air blower	478
5. Air conditioning system/Climatronic operating and display unit, control unit with display in dash panel insert	479
6. Temperature flap control motor potentiometer, central flap control motor potentiometer, defroster flap control motor potentiometer	480
7. High pressure sender, fresh air intake duct temperature sensor, sunlight penetration photosensor, evaporator out-flow temperature sender	481
8. Radiator fan thermo-switches, radiator fan control unit, radiator fan control unit fuse, radiator fan	482
051 - Daytime driving lights	483-489
1. Daytime driving lights	483-484
2. Ignition/starter switch, X contact relief relay	485
3. Lighting switch, control unit with display in dash panel insert	486
4. Headlight dipper/flasher switch, switches and instruments light regulator, headlight range control adjuster	487
5. Bulb check warning unit, twin filament bulb for right headlight, right tail light bulb, right side light bulb	488
6. Bulb check warning unit, twin filament bulb for left headlight, left side light bulb, left tail light bulb	489
052 - 1.4 litre unit injector, TDI engine (66 kW - 3-cylinder), engine code ATL	490-501
1. 1.4 litre unit injector, TDI engine (66 kW - 3-cylinder), engine code ATL	490-491
2. Battery, starter, alternator, ignition/starter switch	492
3. Automatic glow period control unit, diesel direct injection system control unit, terminal 30 voltage supply relay, glow plug 1	493
4. Kick-down switch, idling switch, coolant temperature senders, accelerator pedal position sender, diesel direct injection system control unit	494
5. Cruise control system switch, fuel temperature sender, airbag control unit, diesel direct injection system control unit	495
6. Diesel direct injection system control unit, heater element (crankcase breather), unit injector solenoid valves	496
7. Air mass meter, intake manifold pressure sender, intake manifold temperature sender, diesel direct injection system control unit	497
8. Clutch pedal switch, Hall sender, exhaust gas recirculation valve, charge pressure control solenoid valve, intake manifold flap motor	498
9. Air conditioning system/Climatronic operating and display unit, brake light switch, engine speed sender	499
10. Control unit with display in dash panel insert, radiator fan control unit, additional air heater control unit	500
11. Oil pressure switch, oil level/oil temperature sender, control unit with display in dash panel insert	501
053 - Electric lumbar support adjustment	502-503
1. Electric lumbar support adjustment	502
2. Driver s seat lumbar support adjustment switch, front passenger s seat lumbar support adjustment switch, seat adjustment fuse	503
054 - Seat heating	504-507
1. Seat heating	504
2. Ignition/starter switch, fuses	505
3. Heated driver s seat regulator, driver s seat temperature sensor, heated driver s seat cushion, heated driver s seat backrest, driver s seat lateral support heater	506
4. Heated front passenger s seat regulator, front passenger s seat temperature sensor, heated front passenger s seat cushion, heated front passenger s seat backrest, front passenger s seat lateral support heater	507
201 - -Fitting Locations: Connector points, relay carriers, fuse carrier	508-524
1. Fitting locations overview	508
2. -Fitting Locations: Connector points, relay carriers, fuse carrier	509
3. -Fitting Locations: Connector points, relay carriers, fuse carrier	510
4. -Fitting Locations: Connector points, relay carriers, fuse carrier	511
5. -Fitting Locations: Connector points. relay carriers. fuse carrier	512

6. -Fitting Locations: Connector points, relay carriers, fuse carrier	513
7. -Fitting Locations: Connector points, relay carriers, fuse carrier	514
8. -Fitting Locations: Connector points, relay carriers, fuse carrier	515
9. -Fitting Locations: Connector points, relay carriers, fuse carrier	516
10. -Fitting Locations: Connector points, relay carriers, fuse carrier	517
11. -Fitting Locations: Connector points, relay carriers, fuse carrier	518
12. -Fitting Locations: Connector points, relay carriers, fuse carrier	519
13. -Fitting Locations: Connector points, relay carriers, fuse carrier	520
14. -Fitting Locations: Connector points, relay carriers, fuse carrier	521
15. -Fitting Locations: Connector points, relay carriers, fuse carrier	522
16. -Fitting Locations: Connector points, relay carriers, fuse carrier	523
17. -Fitting Locations: Connector points, relay carriers, fuse carrier	524
202 - -Fitting locations: List of earth points	525-526
1. List of earth points	525
2. -Fitting locations: List of earth points	526
203 - -Fitting locations: Fitting locations of individual control units	527-532
1. Fitting locations overview	527
2. -Fitting locations: Fitting locations of individual control units	528
3. -Fitting locations: Fitting locations of individual control units	529
4. -Fitting locations: Fitting locations of individual control units	530
5. -Fitting locations: Fitting locations of individual control units	531
6. -Fitting locations: Fitting locations of individual control units	532
204 - -Fitting locations: Components for radio sound system Chorus	533-535
1. Fitting locations overview	533
2. -Fitting locations: Components for radio sound system Chorus	534
3. -Fitting locations: Components for radio sound system Chorus	535
205 - -Fitting locations: Components for radio sound system Concert	536-540
1. Fitting locations overview	536
2. -Fitting locations: Components for radio sound system Concert	537
3. -Fitting locations: Components for radio sound system Concert	538
4. -Fitting locations: Components for radio sound system Concert	539
5. -Fitting locations: Components for radio sound system Concert	540
206 - -Fitting locations: Components for radio sound system Concert with Bose sound system	541-545
1. Fitting locations overview	541
2. -Fitting locations: Components for radio sound system Concert with Bose sound system	542
3. -Fitting locations: Components for radio sound system Concert with Bose sound system	543
4. -Fitting locations: Components for radio sound system Concert with Bose sound system	544
5. -Fitting locations: Components for radio sound system Concert with Bose sound system	545
207 - -Fitting locations: Components for navigation system 'NS Low' (7Q9)	546-550
1. Fitting locations overview	546
2. -Fitting locations: Components for navigation system 'NS Low' (7Q9)	547
3. -Fitting locations: Components for navigation system 'NS Low' (7Q9)	548
4. -Fitting locations: Components for navigation system 'NS Low' (7Q9)	549
5. -Fitting locations: Components for navigation system 'NS Low' (7Q9)	550
208 - -Fitting locations: Components for telephone/mobile phone	551-555
1. Fitting locations overview	551
2. -Fitting locations: Components for telephone/mobile phone	552
3. -Fitting locations: Components for telephone/mobile phone	553
4. -Fitting locations: Components for telephone/mobile phone	554
5. -Fitting locations: Components for telephone/mobile phone	555