

## Contents

<b>1</b>	<b>Notes on servicing</b>	<b>1</b>
1.1	Overview of engines	1
1.2	Diesel engines	3
<b>2</b>	<b>Delivery Inspection</b>	<b>4</b>
2.1	Delivery Inspection	4
<b>3</b>	<b>LongLife Service</b>	<b>5</b>
3.1	Audi A3 as from chassis number 8LYA 000 001	5
<b>4</b>	<b>Description of work</b>	<b>7</b>
4.1	Lights, electrical equipment, switches, displays and other driver-operated controls: checking operation	7
4.2	Vehicle keys: checking operation	7
4.3	Windscreen wiper/washer system and headlight washer system: checking jet settings and operation	8
4.4	Windscreen wiper/washer system: checking jet settings, adjusting jets if necessary	8
4.5	Headlight washer system: checking jet settings	9
4.6	Wiper blades: checking park position and checking for damage	9
4.7	Electric windows: checking positions	11
4.8	Air conditioner: checking operation and setting temperature to 22 °C	11
4.9	Radio / Navigation System Plus (Chorus, Concert, Symphony): deactivating transport mode	11
4.10	Radio /Radio Navigation System Plus: activating anti-theft coding by entering fixed code number	14
4.11	Self-diagnosis: interrogating fault memory with V.A.G 1551 or VAS 5051	15
4.12	Instrument cluster: setting the language	17
4.13	Service interval display: resetting	18
4.14	Service interval display: resetting LongLife Service as from model year 2000 > Y	21
4.15	Service interval display: resetting Inspection Service (fixed interval) as from model year 2000 > Y	37
4.16	Door arresters, lock cylinders and bonnet arrester hook: lubricating	50
4.17	Sliding sunroof: checking operation, cleaning guide rails and spraying with lubricating spray	51
4.18	Telematics: renewing emergency backup battery	51
4.19	Battery: checking fluid level	52
4.20	Battery: checking "no load" voltage before starting the engine for the first time (only applies to stock vehicles)	54
4.21	Battery: checking that battery cables are securely fitted	55
4.22	Battery: performing load test	56
4.23	Engine cover panel: removing	57
4.24	Engine (from above and below) and engine compartment: visual check for leaks and damage	58
4.25	Windscreen and headlight washer system: topping up with washer fluid	59
4.26	Cooling system: checking antifreeze and topping up with coolant if necessary	59
4.27	Air cleaner: cleaning housing and renewing filter element	61
4.28	Noise insulation: removing	61
4.29	Spark plugs: renewing	62
4.30	Hydraulic system: checking for leaks, checking hydraulic fluid level and topping up if necessary	64
4.31	Fuel filter: renewing (TDI engines)	65
4.32	Dust and pollen filter: renewing	66
4.33	Toothed belt for camshaft drive: checking for damage, measuring width of toothed belt (TDI engines up to and including model year 1999 X)	67
4.34	Toothed belt for camshaft drive: renewing (TDI engines)	67
4.35	Poly V-belt: renewing	68
4.36	Toothed belt: renewing	68
4.37	Transport locks: removing locking elements for front suspension struts	68



4.38	Manual gearbox/final drive: checking oil level, topping up with oil if necessary	69
4.39	Haldex coupling: changing oil	70
4.40	Haldex coupling: renewing oil filter	71
4.41	Final drive (automatic gearbox): checking oil level, topping up with oil if necessary	72
4.42	Engine oil: draining or extracting, changing oil filter	73
4.43	Brake system: visual check for leaks and damage	75
4.44	Brake pads: checking thickness	76
4.45	Underseal: visual check for damage	76
4.46	Plenum chamber: checking and cleaning water drain	76
4.47	Track rod ball joints: checking play, security and boots	77
4.48	Tyres: checking condition, wear pattern, tread depth and correcting inflation pressures.	77
4.49	Winter tyres (factory-fitted)	78
4.50	Wheel bolts: tightening to specified torque	79
4.51	Engine oil: filling up	79
4.52	Engine: checking oil level	81
4.53	Brake fluid level (depends on brake pad wear): checking	81
4.54	Brake fluid: changing (every 2 years)	82
4.55	Headlights: checking settings and adjusting if necessary	87
4.56	Road test	95
<b>5</b>	<b>Type plate, vehicle identification number</b>	<b>96</b>
5.1	Information encoded in vehicle identification number:	96
5.2	Vehicle data sticker	96
5.3	Engine code and engine number	96
<b>6</b>	<b>Lifting the vehicle</b>	<b>98</b>
<b>7</b>	<b>Tow-starting/towing</b>	<b>99</b>
7.1	Front towing eye	99