

Contents

00 - Technical data	1
1 Technical data	1
1.1 Technical data	1
1.2 Running gear	1
1.3 PR no./running gear assignment	1
1.4 Wheels, tyres	2
1.5 Steering	2
2 Prescribed disposal procedure for oil-filled components	3
2.1 Prescribed disposal procedure for oil-filled components	3
2.2 Releasing gas from front gas-filled shock absorber	3
2.3 Releasing gas from rear gas-filled shock absorber	5
2.4 Draining power-assisted steering box	6
3 Checking shock absorbers	7
3.1 Checking shock absorbers	7
3.2 Shock absorber leakage	7
3.3 Checking shock absorber following removal	8
3.4 Checking shock absorber on shock tester	8
40 - Front suspension	12
1 Servicing front suspension	12
1.1 Servicing front suspension	12
1.2 Exploded view of components: Subframe, anti-roll bar, wishbone - Audi A3	12
1.3 Exploded view of components: Subframe, anti-roll bar, wishbone - Audi S3	17
1.4 Repairing thread in longitudinal member	22
1.5 Front left vehicle level sender -G78 for headlight range control - Front-wheel drive vehicles	23
1.6 Front left vehicle level sender -G78 for headlight range control - Four-wheel drive vehicles	25
1.7 Removing and installing anti-roll bar	27
1.8 Checking ball joint	30
1.9 Removing and installing ball joint	32
1.10 Removing and installing front wishbone	35
1.11 Replacing wishbone bonded rubber bushes	37
1.12 Replacing wishbone bonded rubber bushes - Audi A3	38
1.13 Replacing wishbone bonded rubber bushes - Audi S3 with solid bush	42
1.14 Replacing wishbone bonded rubber bushes - Audi S3 with recessed bush	45
1.15 Removing and installing subframe - Audi A3	49
1.16 Removing and installing subframe - Audi S3	53
1.17 Replacing subframe bonded rubber bushes - Audi A3	58
1.18 Replacing subframe bonded rubber bushes - Audi S3	60
1.19 Exploded view of front cross-piece	63
1.20 Removing and installing cross-piece	64
2 Wheel bearing housing	66
2.1 Wheel bearing housing	66
2.2 Exploded view of wheel bearing housing components Audi A3	67
2.3 Exploded view of wheel bearing housing components Audi S3	73
2.4 Replacing front wheel bearing with wheel bearing housing fitted	78
2.5 Removing and installing wheel bearing housing	86
2.6 Replacing front wheel bearing with wheel bearing housing removed	92
3 Exploded view of suspension strut components	97
3.1 Exploded view of suspension strut components	97
3.2 Removing and installing suspension strut	101
3.3 Removing and installing coil spring	105
4 Servicing front drive shafts	107



4.1	Servicing front drive shafts	107
4.2	Unfastening and tightening twelve-point nut of drive shaft bolted joint	108
4.3	Slackening off and tightening collared bolt of drive shaft bolted joint	109
4.4	Removing and installing drive shafts	110
4.5	Servicing front drive shaft with constant velocity joint	114
4.6	Servicing drive shaft with triple roller joint AAR 2000	128
4.7	Servicing drive shaft with triple roller joint AAR 2900	139
4.8	Servicing drive shaft with triple roller joint AAR 3300i	152
42	- Rear suspension	163
1	Servicing rear axle - Front-wheel drive vehicles	163
1.1	Servicing rear axle - Front-wheel drive vehicles	163
1.2	Exploded view of rear axle components	164
1.3	Vehicle level sender -G76 for headlight range control	173
1.4	Removing and installing rear axle	173
1.5	Replacing bonded rubber bush	176
1.6	Removing and installing hydraulic bonded rubber bush	179
1.7	Removing and installing shock absorber/spring	184
1.8	Dismantling and assembling shock absorber	187
1.9	Exploded view of rear wheel bearing components	189
1.10	Removing and installing wheel bearing/wheel hub unit	191
2	Servicing rear axle - Four-wheel drive vehicles	194
2.1	Servicing rear axle - Four-wheel drive vehicles	194
2.2	Exploded view of rear axle components	195
2.3	Rear left vehicle level sender -G76 for headlight range control	197
2.4	Removing and installing anti-roll bar	198
2.5	Exploded view of spring and shock absorber	200
2.6	Removing and installing spring	204
2.7	Removing and installing shock absorber	208
2.8	Exploded view of trailing arm and transverse link	211
2.9	Change from ball joints to bonded rubber bushes	216
2.10	Replacing bonded rubber bush for trailing arm	218
2.11	Removing and installing ball joints	221
2.12	Removing and installing trailing arm	224
2.13	Removing and installing transverse link	228
2.14	Replacing wheel bearing	231
2.15	Exploded view of subframe with final drive	237
2.16	Removing and installing subframe with final drive	240
2.17	Replacing subframe bonded rubber bushes	245
2.18	Replacing final drive bonded rubber bushes	248
3	Servicing rear drive shafts	250
3.1	Servicing rear drive shafts	250
3.2	Unfastening and tightening twelve-point nut of drive shaft bolted joint	250
3.3	Removing and installing drive shafts	251
3.4	Servicing drive shaft with constant velocity joint	253
44	- Wheels, Tyres, Wheel alignment	267
1	Wheels and tyres	267
1.1	Wheels and tyres	267
1.2	Light alloy wheel with trim cap	268
1.3	Light alloy wheel with hub cap	270
1.4	Balancing wheels on vehicle	271
1.5	Wheel change/wheel fitting instructions	272
2	Wheel alignment	273
2.1	Wheel alignment	273
2.2	Test requirements:	274
2.3	Wheel alignment specifications - Audi A3 with front-wheel drive	275

2.4	Wheel alignment specifications - Audi A3 with four-wheel drive275
2.5	Wheel alignment specifications - Audi S3277
2.6	Measurement procedure279
2.7	Balancing out camber at front axle - Audi A3280
2.8	Adjusting camber at front axle - Audi S3281
2.9	Checking rear axle camber - Front-wheel drive vehicles282
2.10	Adjusting rear axle camber - Four-wheel drive vehicles282
2.11	Balancing out rear axle toe - Front-wheel drive vehicles283
2.12	Adjusting rear axle toe - Four-wheel drive284
2.13	Adjusting front axle toe285
48	- Steering286
1	Steering column and steering wheel with airbag286
1.1	Steering column and steering wheel with airbag286
1.2	Exploded view of components286
1.3	Checking steering column for damage287
1.4	Safety precautions when working on airbag288
1.5	Removing and installing airbag unit288
1.6	Measures to be taken after servicing289
1.7	Removing and installing airbag steering wheel289
1.8	Removing and installing coil connector with slip ring and steering angle sender -G85291
1.9	Removing and installing steering column294
1.10	Removing and installing ignition lock housing302
2	Servicing power steering306
2.1	Servicing power steering306
2.2	Rules for cleanliness307
2.3	Exploded view of power-assisted steering box307
2.4	Removing and installing track rod end316
2.5	Adjusting power-assisted steering box318
2.6	Removing and installing power-assisted steering box319
3	Vane pump328
3.1	Vane pump328
3.2	Exploded view for bottom-mounted vane pump329
3.3	Exploded view for top-mounted vane pump333
3.4	Checking delivery pressure of vane pump335
3.5	Exploded view: Fluid reservoir341
4	Removing and installing vane pump343
4.1	Removing and installing vane pump343
4.2	Vehicles with bottom-mounted vane pump343
4.3	Vehicles with top-mounted vane pump348