

Contents

01 - Self-diagnosis	1
1 Radio system self-diagnosis (as of MY 98)	1
1.1 General	1
1.2 Safety precautions	1
1.3 Starting radio system self-diagnosis	1
1.4 Interrogating control unit version	3
1.5 Interrogating fault memory	3
1.6 Radio system fault table	4
1.7 Final control diagnosis	8
1.8 Erasing fault memory	10
1.9 End of output	10
1.10 Encoding control unit	10
1.11 Reading measured value block	13
1.12 Adaption	18
2 Self-diagnosis of navigation system II-D (Navigation System Plus RNS 4.1) (as of week 36/00)	24
2.1 General	24
2.2 Fault messages on navigation system display	24
2.3 Safety precautions	26
2.4 Starting self-diagnosis of navigation system II-D	26
2.5 Interrogating control unit version	27
2.6 Interrogating fault memory	28
2.7 Fault table for navigation system II-D	29
2.8 Final control diagnosis	31
2.9 Erasing fault memory	32
2.10 End of output	33
2.11 Reading measured value block	33
2.12 Function status register	36
2.13 Adaption	37
3 Self-diagnosis of navigation system III (as of week 29/99)	48
3.1 General	48
3.2 Safety precautions	48
3.3 Starting self-diagnosis of navigation system III	49
3.4 Interrogating control unit version	50
3.5 Interrogating fault memory	50
3.6 Fault table for navigation system III	51
3.7 Final control diagnosis	54
3.8 Erasing fault memory	55
3.9 End of output	55
3.10 Reading measured value block	56
3.11 Function status register	59
3.12 Adaption	60
4 Self-diagnosis of navigation system Nav IV (BNS 4.0) as of week 04/01	66
4.1 General	66
4.2 Safety precautions	66
4.3 Starting self-diagnosis of navigation system BNS 4.0 (Nav IV)	67
4.4 Interrogating control unit version	68
4.5 Interrogating fault memory	68
4.6 Fault table for navigation system IV	69
4.7 Final control diagnosis	71
4.8 Erasing fault memory	72
4.9 End of output	73
4.10 Reading measured value block	73

4.11	Function status register	77
4.12	Adaption	77
5	Multi-function steering wheel self-diagnosis	86
5.1	General	86
5.2	Safety precautions	87
5.3	Starting self-diagnosis of multi-function steering wheel	87
5.4	Interrogating control unit version	88
5.5	Interrogating fault memory	89
5.6	Fault table for multi-function steering wheel	90
5.7	Final control diagnosis	91
5.8	Erasing fault memory	92
5.9	End of output	93
5.10	Encoding control unit	93
5.11	Reading measured value block	94
6	Telematics self-diagnosis	97
6.1	General	97
6.2	Notes on system release	97
6.3	Safety precautions	97
6.4	Starting self-diagnosis of telematics system	98
6.5	Interrogating control unit version	99
6.6	Interrogating fault memory	99
6.7	Fault table for telematics system	100
6.8	Final control diagnosis	104
6.9	Erasing fault memory	105
6.10	End of output	105
6.11	Encoding control unit	105
6.12	Reading measured value block	107
6.13	Adaption	111
7	Telephone self-diagnosis	118
7.1	General	118
7.2	Safety precautions	118
7.3	Starting telephone self-diagnosis	118
7.4	Interrogating control unit version	119
7.5	Interrogating fault memory	120
7.6	Telephone fault table	121
7.7	Final control diagnosis	123
7.8	Erasing fault memory	124
7.9	End of output	124
7.10	Encoding control unit	124
7.11	Reading measured value block	126
7.12	Adaption	128
8	Self-diagnosis of TV tuner	131
8.1	General	131
8.2	Safety precautions	131
8.3	Starting self-diagnosis of TV tuner	131
8.4	Interrogating control unit version	132
8.5	Interrogating fault memory	133
8.6	Fault table for TV tuner	134
8.7	Final control diagnosis	135
8.8	Erasing fault memory	136
8.9	End of output	137
8.10	Encoding control unit	137
8.11	Reading measured value block	138
9	Connecting up vehicle diagnostic, testing and information system VAS 5051 or fault reader V.A.G 1551 and selecting functions	141

9.1	Test conditions	141
9.2	Procedure	141