

Contents

68	Interior equipment	1
1	Storage compartments/covers	1
1.1	Storage compartments/covers	1
1.2	Removing and installing glove compartment	1
1.3	Removing and installing glove compartment lock	3
1.4	Removing and installing intermediate lid of glove compartment	4
1.5	Removing and installing glove compartment lid	5
1.6	Removing driver's storage compartment	5
1.7	Removing and installing lower section of centre console	7
1.8	Removing and installing centre armrest	11
1.9	Cut-out for centre armrest	12
1.10	Removing and installing upper section of centre console	12
1.11	Dash panel centre section 2001 > - exploded view	14
1.12	Removing and installing centre section of dash panel	16
1.13	Removing and installing storage compartment in dash panel centre section	19
1.14	Removing and installing storage compartment trim	19
1.15	Removing and installing ashtray in dash panel centre section	20
1.16	Removing and installing switch panel trim	21
1.17	Removing and installing cup holder	21
2	Interior rear-view mirror	22
2.1	Interior rear-view mirror	22
2.2	Removing interior rear-view mirror	22
2.3	Installing interior rear-view mirror	22
2.4	Removing interior rear-view mirror (automatic anti-glare mirror)	23
2.5	Installing interior rear-view mirror (automatic anti-glare mirror)	23
2.6	Checking function of automatic anti-glare interior rear-view mirror	23
2.7	Cementing retainer plate for interior rear-view mirror	24
69	Passenger protection	26
1	Seat belts	26
1.1	Seat belts	26
1.2	Safety regulations for handling pyrotechnic belt tensioners	26
1.3	Disposal of pyrotechnic belt tensioners	26
1.4	Seat belt attachment points (layout)	28
1.5	1 - Removing and installing three-point seat belt with belt height adjuster and belt tensioner	29
1.6	2 - Anchorage point for belt buckle	34
1.7	Removing and installing Recaro seat belt buckle	35
1.8	3 - Anchorage point for outer floor panel	35
1.9	4 - Removing and installing rear three-point seat belt	37
1.10	4 - Removing and installing rear three-point seat belt MY 1998 > (with belt tensioner)	40
1.11	5 - Anchorage points for centre floor panel	44
2	Seat belts, 5-door vehicles	45
2.1	Seat belts, 5-door vehicles	45
2.2	Seat belt attachment points (layout)	45
2.3	1 - Removing and installing three-point seat belt with belt height adjuster and belt tensioner	47
2.4	2 - Anchorage point for belt buckle	52
2.5	3 - Anchorage point for outer floor panel	52
2.6	4 - Removing and installing rear three-point seat belt	54
2.7	5 - Anchorage points for centre floor panel	57
2.8	6 - Removing and installing rear centre three-point seat belt	58
3	Checking seat belts	62
3.1	Checking seat belts	62



3.2	Checking child-seat restraint function for additional child seats (not for driver's seat belt) . .	63
3.3	Checking belt-fastened sensor for rear three-point belts with belt tensioner	63
4	Airbag safety precautions	63
4.1	Airbag safety precautions	63
4.2	Safety precautions when working on airbag	63
4.3	Additional safety precautions for side airbag	64
4.4	Additional safety precautions for head airbag	65
4.5	Replacing airbag units after accident	65
5	Repairing airbag	68
5.1	Repairing airbag	68
5.2	Fitting locations overview	68
5.3	Removing and installing airbag control unit	70
6	Repairing driver's airbag	72
6.1	Repairing driver's airbag	72
6.2	Removing and installing driver's airbag > MY 1998	72
6.3	Removing and installing driver's airbag unit MY1998 ä	74
6.4	Removing and installing steering wheel	78
6.5	Removing and installing driver's airbag with sports steering wheel MY 1998 ä	79
6.6	Removing and installing sports steering wheel	82
6.7	Removing and installing self-cancelling ring with slip ring > MY 1998	83
6.8	Removing and installing self-cancelling ring with slip ring from sports steering wheel > MY 1998	86
6.9	Removing and installing self-cancelling ring with slip ring	88
7	Passenger's airbag	90
7.1	Passenger's airbag	90
7.2	Removing and installing passenger's airbag	90
7.3	Removing and installing key switch for passenger airbag	93
8	Side airbag	94
8.1	Side airbag	94
8.2	Removing and installing side airbag	95
8.3	Removing and installing side airbag for Recaro seat	100
8.4	Airbag cable routing for Recaro seat	103
8.5	Removing and installing sensor for lateral accelerator	104
9	Repairing head airbag	105
9.1	Repairing head airbag	105
9.2	Removing and installing head airbag - 3-door vehicles	105
9.3	Removing and installing head airbag - 5-door vehicles	114
70 - Trim/Insulation		122
1	Door trims (3-door vehicles)	122
1.1	Door trims (3-door vehicles)	122
1.2	Assembly overview	122
1.3	Removing and installing front door trim	124
1.4	Removing and installing front door trim insulation	126
1.5	Adjusting release button	127
1.6	Removing and installing door trim attachments	128
2	Front door trims (5-door vehicles)	131
2.1	Front door trims (5-door vehicles)	131
2.2	Assembly overview	131
2.3	Removing and installing front door trim	134
2.4	Removing and installing outer adapter	136
2.5	Removing and installing adapter	137
2.6	Removing and installing upper section of grip moulding	137
2.7	Removing and installing lower section of grip moulding	138
2.8	Unplugging connectors for window lifter switch and mirror adjuster switch on driver's side	138

2.9	Unplugging connectors for window lifter switch on passenger's side	139
2.10	Routing of wiring in door trim - overview	140
2.11	Adjusting release button	141
2.12	Removing and installing treble loudspeaker	141
2.13	Removing bass speaker	141
2.14	Removing and installing door warning light and footwell light	142
2.15	Removing central locking switch	142
2.16	Removing window lifter switch unit on driver's side	143
2.17	Removing and installing passenger's window lifter switch	143
2.18	Removing mirror adjuster switch	143
2.19	Removing interior door handle	144
2.20	Removing and installing front door trim insulation	144
2.21	Replacing speaker trim (standard, Bose)	145
3	Rear door trims (5-door vehicles)	146
3.1	Rear door trims (5-door vehicles)	146
3.2	Fitting locations - exploded view	146
3.3	Removing and installing rear door trim	148
3.4	Removing and installing outer adapter	150
3.5	Removing and installing adapter	151
3.6	Removing and installing upper section of grip moulding	151
3.7	Removing and installing lower section of grip moulding	152
3.8	Unplugging connectors for window lifter switch	152
3.9	Removing and installing window lifter switch	153
3.10	Adjusting release button	153
3.11	Replacing speaker trim (standard, Bose)	153
3.12	Removing speaker	154
3.13	Removing and installing door warning light and footwell light	154
3.14	Removing interior door handle	154
3.15	Removing and installing rear door trim insulation	155
4	Dash panel	156
4.1	Dash panel	156
4.2	Fitting locations - exploded view	156
4.3	Removing and installing dash-panel	159
4.4	Removing and installing steering column switch	163
4.5	Removing and installing steering column surround	164
4.6	Removing and installing dash panel central tube	165
5	Roof trim without head airbag	175
5.1	Roof trim without head airbag	175
5.2	Removing and installing moulded headliner and sun visors	175
6	Roof trim with head airbag	182
6.1	Roof trim with head airbag	182
6.2	Removing and installing moulded headliner and sun visors	182
7	Trims	189
7.1	Trims	189
7.2	Removing and installing handbrake lever trim	189
7.3	Removing and installing foot rest	190
7.4	Removing Bowden cable	190
7.5	Removing and installing lower A-pillar trim	190
7.6	Removing and installing upper A-pillar trim	191
7.7	Removing and installing B-pillar trim	192
7.8	Removing and installing rear side trim	194
7.9	Removing and installing rear cross-panel trim	194
7.10	Removing and installing roof panel trim	195
7.11	Luggage compartment side trim	196
7.12	Removing and installing tailgate trim	197
7.13	Removing D-pillar trim	198



7.14	Removing sill panels	199
7.15	Removing and installing floor covering	199
8	Trims for 5-door vehicles	202
8.1	Trims for 5-door vehicles	202
8.2	Removing and installing upper B-pillar trim	202
8.3	Removing and installing lower B-pillar trim	206
8.4	Removing sill panels	209
8.5	Removing and installing upper C/D-pillar trim	210
8.6	Luggage compartment side trim	211
8.7	Removing and installing rear wheel housing trim	213
9	Trims with head airbag	214
9.1	Trims with head airbag	214
9.2	Removing and installing upper A-pillar trim	214
9.3	Removing and installing upper B-pillar trim	217
9.4	Removing and installing D-pillar trim	221
10	Trims for 5-door vehicles with head airbag	224
10.1	Trims for 5-door vehicles with head airbag	224
10.2	Removing and installing upper B-pillar trim	224
10.3	Removing and installing upper C-pillar trim	229
10.4	Removing and installing D-pillar trim	231
72 - Seat frames		234
1	Front seats (3-door vehicles)	234
1.1	Front seats (3-door vehicles)	234
1.2	Tools	234
1.3	Removing and installing front seat cover	235
1.4	Removing and installing rear cover on front seat rail (inboard side)	236
1.5	Removing and installing rear cover on front seat rail (outboard side)	238
1.6	Removing and installing seat up to 01.1999	240
1.7	Removing and installing seats of 01.1999	244
1.8	Connecting airbag adapter VAS 5094	248
1.9	Removing and installing front seat backrest	252
1.10	Removing seat height adjustment lever	257
1.11	Installing retaining clip	258
1.12	Removing backrest adjuster wheel	258
1.13	Removing release handle with cover plate	259
1.14	Dismantling drawer	259
1.15	Removing drawer frame	260
1.16	Removing and installing seat height adjuster unit	261
1.17	Servicing longitudinal seat adjustment mechanism	264
1.18	Removing rear slides	265
2	Front seats (5-door vehicles)	266
2.1	Front seats (5-door vehicles)	266
2.2	Tools	266
2.3	Removing and installing front seat cover	267
2.4	Removing and installing rear cover on front seat rail (inboard side)	268
2.5	Removing and installing rear cover on front seat rail (outboard side)	270
2.6	Removing and installing seat	272
2.7	Connecting airbag adapter VAS 5094	276
2.8	Removing and installing front seat backrest	278
2.9	Removing inner fitting panels	283
2.10	Removing and installing seat height adjuster unit	284
2.11	Removing Bowden cable cover	287
2.12	Removing and installing longitudinal seat adjustment Bowden cable	287
2.13	Removing rear slides	290
3	Front sports seat	291



3.1	Front sports seat	291
3.2	Tools	291
3.3	Removing and installing front seat cover	292
3.4	Removing and installing rear cover on front seat rail (tunnel side)	294
3.5	Removing and installing rear cover on front seat rail (outboard side)	296
3.6	Removing and installing sports seat	298
3.7	Connecting airbag adapter VAS 5094	302
3.8	Removing and installing front seat backrest	305
3.9	Converting backrest from sports to standard seat	310
3.10	Converting seat pan from sports to standard seat	311
3.11	Removing and installing seat height adjuster handle	312
3.12	Installing retaining clip	313
3.13	Removing backrest adjuster wheel	313
3.14	Removing release handle with cover plate	314
3.15	Dismantling drawer	314
3.16	Removing drawer frame	315
3.17	Removing inner fitting panels	315
3.18	Removing and installing seat height adjuster unit	316
3.19	Removing Bowden cable cover	319
3.20	Removing and installing longitudinal seat adjustment Bowden cable	319
3.21	Removing rear slides	322
3.22	Removing and installing 2-way lumbar support	323
3.23	Removing and installing lumbar support motor with gear unit	324
3.24	Removing and installing backrest motor with gear unit	326
3.25	Seat wiring assignment	329
3.26	Backrest wiring assignment	330
4	Recaro seat	331
4.1	Recaro seat	331
4.2	Tools	331
4.3	Removing and installing front seat cover	332
4.4	Removing and installing rear cover on front seat rail (inboard side)	334
4.5	Removing and installing rear cover on front seat rail (outboard side)	336
4.6	Removing and installing Recaro seat	338
4.7	Connecting airbag adapter VAS 5094	342
4.8	Removing and installing backrest	346
4.9	Removing and installing backrest shell	349
4.10	Removing and installing seat cushion	351
4.11	Removing and installing seat extension	354
4.12	Removing and installing seat side panels	357
4.13	Removing and installing seat side panel brackets	361
4.14	Removing and installing switch unit	362
4.15	Removing and installing fitting panels	367
4.16	Removing and installing spring trim	369
4.17	Removing and installing 2-way lumbar support	371
4.18	Removing and installing lumbar support motor with gear unit	372
4.19	Removing and installing backrest motor with gear unit	374
4.20	Removing and installing seat height adjustment motor	377
4.21	Removing and installing head restraint	379
4.22	Removing and installing head restraint guide	380
4.23	Removing and installing and disassembling underbody	382
4.24	Removing and installing seat rails	386
4.25	Removing and installing memory module	389
4.26	Removing and installing EASY ENTRY Bowden cable	391
4.27	Adjusting EASY ENTRY Bowden cable	393
4.28	Removing transfer rod	394
4.29	Adjusting transfer rod	395
4.30	Recaro seat cable routing - seat pan	396



4.31	Recaro backrest cable routing	402
5	Rear seat	403
5.1	Rear seat	403
5.2	Removing seat and backrest (split)	403
5.3	Removing seat bench (non-split)	405
5.4	Removing backrest (non-split)	406
5.5	Removing bracket for backrest (non-split)	407
74	- Seats - Upholstery, Covers	408
1	Front seat covers and upholstery	408
1.1	Front seat covers and upholstery	408
1.2	Removing and installing seat cover and upholstery	408
1.3	Removing and installing seat cover and upholstery	410
1.4	Removing and installing backrest cover	416
1.5	Removing and installing seat cover and upholstery	418
2	Covers and upholstery for sports seat	419
2.1	Covers and upholstery for sports seat	419
2.2	Removing and installing cover and upholstery for seat pan	419
2.3	Removing and installing backrest cover and upholstery	422
2.4	Removing and installing backrest cover	428
2.5	Removing and installing head restraint fabric and upholstery	430
3	Covers and upholstery Recaro seat	431
3.1	Covers and upholstery Recaro seat	431
3.2	Removing and installing seat cover and upholstery	431
3.3	Removing and installing cover and upholstery for seat extension	434
3.4	Removing and installing seat cover and upholstery	436
3.5	Removing and installing head restraint cover and upholstery	441
3.6	Removing and installing seat heating element	443
3.7	Removing and installing seat extension heating element	445
3.8	Removing and installing backrest heating element	447
4	Rear seat covers and upholstery	448
4.1	Rear seat covers and upholstery	448
4.2	Removing and installing seat cover and upholstery	448
4.3	Removing and installing cover and upholstery for seat bench (non-split)	451
4.4	Removing and installing seat cover and upholstery	453
4.5	Removing and installing cover and upholstery for backrest (non-split)	455
4.6	Removing and installing cover and upholstery for backrest (with third three-point belt)	457