

Contents

50 - Body front	1
1 Body, front	1
1.1 Body, front	1
1.2 Removing and installing lock carrier with ancillary components	1
1.3 Removing and installing wing (except S3)	4
1.4 Removing and installing tubular member (except S3)	6
1.5 Removing and installing wing (S3)	8
1.6 Removing and installing additional reinforcement (except S3)	11
1.7 Removing and installing noise insulation, ribbed belt protection and engine shield trim (S3)	12
1.8 Removing and installing noise insulation, ribbed belt protection and engine shield trim (S3 - Brazil)	15
1.9 Removing and installing front and rear heat shields for tunnel (S3)	18
2 Heat shields	19
2.1 Heat shields	19
2.2 Removing and installing front and rear heat shields for tunnel (S3)	19
55 - Bonnet, Flaps	21
1 Bonnet	21
1.1 Bonnet	21
1.2 Removing and installing bonnet lock cable	21
1.3 Removing and installing bonnet	23
1.4 Bonnet seals	26
2 Tailgate	27
2.1 Tailgate	27
2.2 Removing and installing tailgate	27
2.3 Adjusting tailgate	28
2.4 Removing and installing tailgate hinge	30
2.5 Removing and installing tailgate seal	30
2.6 Removing gas-filled strut	31
2.7 Tailgate joint dimensions	31
2.8 Removing and installing tailgate lock	32
2.9 Removing and installing locking system	34
2.10 Removing and installing grip panel	35
2.11 Removing, installing and adjusting striker	38
57 - Front doors/Door components/Central locking system	39
1 Front door	39
1.1 Front door	39
1.2 Removing and installing front door and door subframe	39
1.3 Removing and installing window lifter and window	45
1.4 Removing and installing impact bar	49
1.5 Removing and installing front door lock with operating elements up to VIN 8L XA 000 000	51
1.6 Removing and installing front door handle	53
1.7 Removing and installing front door lock with operating elements from VIN 8L XA 000 001	57
1.8 Removing and installing cover for door lock	60
1.9 Removing and installing operating rods for front door lock	62
1.10 Front door handle - exploded view	64
1.11 Removing door handle	67
1.12 Front door handle pre-assembly	69
1.13 Adjusting door	72
1.14 Removing and installing window lifter motor	72



2	Central locking, 3-door vehicles	74
2.1	Central locking, 3-door vehicles	74
2.2	Central locking - assembly overview (3-door vehicles)	74
2.3	-A- pillar connector	76
2.4	Line routing	76
3	Central locking, 5-door vehicles	79
3.1	Central locking, 5-door vehicles	79
3.2	Central locking - assembly overview (5-door vehicles)	79
3.3	Line routing	80
3.4	Detaching connector	81
3.5	Repairing damaged line	82
3.6	Removing and installing tailgate actuator	82
3.7	Removing and installing actuator for fuel tank flap	83
3.8	Removing and installing pump for central locking system	83
58 - Rear doors/Door components		85
1	Rear door	85
1.1	Rear door	85
1.2	Removing and installing rear door and door subframe	85
1.3	Removing and installing window lifter motor	87
1.4	Removing and installing door components	90
1.5	Removing and installing window lifter and door window from/to door subframe	92
1.6	Adjusting rear window	95
1.7	Removing and installing rear window seal	96
1.8	Removing and installing inner door seal	98
1.9	Removing and installing rear door handle	100
1.10	Removing and installing operating rods for rear door lock	102
1.11	Rear door handle pre-assembly	103
1.12	Adjusting door - adjustment sequence	104
1.13	Adjusting door subframe	105
60 - Sliding/tilting roof		107
1	Servicing sun roof up to approx. 10.97 (Rockwell)	107
1.1	Servicing sun roof up to approx. 10.97 (Rockwell)	107
1.2	Assembly overview	107
1.3	Removing and installing sun roof	112
1.4	Adjusting sun roof panel	113
1.5	Replacing seal for sun roof panel	114
1.6	Adjusting seal for sun roof panel	115
1.7	Removing and installing sliding headlining	115
1.8	Removing and installing sun roof motor	116
1.9	Adjusting zero position (motor)	116
1.10	Checking and adjusting zero setting (guide plate)	117
1.11	Removing and installing guide plate	117
2	Servicing sun roof from approx. 10.97 (Webasto)	119
2.1	Servicing sun roof from approx. 10.97 (Webasto)	119
2.2	Assembly overview	119
2.3	Removing and installing wind deflector	121
2.4	Removing and installing sun roof cover (assembly overview)	122
2.5	Removing and installing trim	124
2.6	Removing and installing sun roof	125
2.7	Adjusting sun roof panel	125
2.8	Replacing panel seal	126
2.9	Adjusting zero position (motor)	126
2.10	Checking and adjusting zero setting (guide plate)	127
3	Water drain hoses	128

3.1	Water drain hoses	128
3.2	Cleaning water drain hoses	128
63	- Bumpers	129
1	Front bumper	129
1.1	Front bumper	129
1.2	Removing and installing front bumper	129
2	Removing and installing spoiler	132
2.1	Removing and installing spoiler	132
3	Rear bumper	133
3.1	Rear bumper	133
3.2	Removing and installing rear bumper	133
64	- Glazing	136
1	Flush-bonded windows	136
1.1	Flush-bonded windows	136
1.2	Removing and installing flush-bonded windows - general	136
1.3	Repair work using special tool VAS 1993	138
1.4	Materials	138
1.5	Minimum setting times	138
2	Removing and installing windscreen	139
2.1	Removing and installing windscreen	139
2.2	Assembly overview	139
2.3	Removing windscreen	140
2.4	Installing fastening strip for water collector moulding	143
2.5	Installing windscreen	144
2.6	Preparation for windscreen installation	145
2.7	Minimum setting times	147
3	Removing and installing rear window	148
3.1	Removing and installing rear window	148
3.2	Assembly overview	148
3.3	Removing an intact rear window	150
3.4	Removing a broken rear window	152
3.5	Preparation for rear window installation	152
3.6	Installation instructions	154
4	Removing and installing side window - 3-door vehicles	154
4.1	Removing and installing side window - 3-door vehicles	154
4.2	Assembly overview	154
4.3	Removing and installing tilt mechanism	155
5	Removing and installing side window - 5-door vehicles	157
5.1	Removing and installing side window - 5-door vehicles	157
5.2	Assembly overview	157
5.3	Removing an intact window	158
5.4	Installing an intact window	159
5.5	Installing new side window	159
66	- Exterior equipment	161
1	Roof strips	161
1.1	Roof strips	161
1.2	Removing and installing roof joint strip	161
2	Trims	163
2.1	Trims	163
2.2	Removing and installing -B- pillar trim, 3-door vehicles	163
2.3	Removing and installing -B- pillar trim, 5-door vehicles	164
3	Protective strips	168



3.1	Protective strips	168
3.2	Replacing side protective strips	168
3.3	Door and side panel moulding (except S3)	169
3.4	Removing and installing door moulding (S3)	170
3.5	Removing and installing side panel cover (S3)	172
3.6	Removing and installing sill panel (except S3)	174
3.7	Removing and installing sill cladding (S3)	175
3.8	Removing and installing bracket (S3)	178
3.9	Removing and installing end cap (S3)	180
3.10	Removing and installing sill panel (S3)	182
4	Wheel housing liners	184
4.1	Wheel housing liners	184
4.2	Removing and installing front wheel housing liner (except S3)	184
4.3	Removing and installing front wheel housing liner (S3)	185
4.4	Removing and installing rear wheel housing liner (except S3)	187
4.5	Removing and installing sill panel cover (except S3)	188
4.6	Removing and installing rear wheel housing liner (S3)	189
5	Rear-view mirror	190
5.1	Rear-view mirror	190
5.2	Removing and installing rear-view mirror	190
5.3	Replacing exterior mirror housing	193
5.4	Replacing electrical mirror adjuster unit	193
6	Spoiler for tailgate (S3)	194
6.1	Spoiler for tailgate (S3)	194
6.2	Removing and installing spoiler	194
7	Removing and installing rear heat shield for floor (S3)	197
7.1	Removing and installing rear heat shield for floor (S3)	197