

## Contents

|  |           |
|--|-----------|
| <b>00 - Technical data, materials</b> .....                      | <b>1</b>  |
| <b>1 Vehicle identification data</b> .....                       | <b>1</b>  |
| 1.1 Type plate and vehicle identification number .....           | 1         |
| 1.2 Vehicle data sticker .....                                   | 1         |
| <b>2 Body dimensions</b> .....                                   | <b>2</b>  |
| 2.1 Floor group, front .....                                     | 2         |
| 2.2 Floor group, centre .....                                    | 3         |
| 2.3 Floor group, rear .....                                      | 4         |
| 2.4 Body - front .....   | 5         |
| 2.5 Body - centre (3-door model) .....                           | 7         |
| 2.6 Body - centre (5-door model) .....                           | 8         |
| 2.7 Body - rear .....  | 9         |
| <b>3 Body panel gaps/shut lines</b> .....                        | <b>10</b> |
| 3.1 Body - front .....   | 10        |
| 3.2 Body - centre .....  | 11        |
| 3.3 Body - centre (5-door model) .....                           | 12        |
| 3.4 Body - rear .....  | 13        |
| <b>4 Laser welding (3 + 5-door model)</b> .....                  | <b>14</b> |
| <b>5 Corrosion protection</b> .....                              | <b>15</b> |
| <b>6 Foam-filled cavities</b> .....                              | <b>16</b> |
| <b>7 Bonded joints</b> .....                                     | <b>17</b> |
| 7.1 Bonded joints .....  | 17        |
| 7.2 Spot-welded bonded joints .....                              | 17        |
| 7.3 Inspecting and repairing bonded joints .....                 | 17        |
| 7.4 Repair methods for replacing body parts .....                | 17        |
| <b>8 Repair methods for bonded joints</b> .....                  | <b>19</b> |
| 8.1 Body - front .....   | 19        |
| 8.2 Body - centre (3-door model) .....                           | 20        |
| 8.3 Body - centre (5-door model) .....                           | 22        |
| 8.4 Body - centre .....  | 24        |
| 8.5 Body - rear .....  | 25        |
| <b>9 Straightening jig</b> .....                                 | <b>27</b> |
| 9.1 Portal gauge .....   | 38        |
| <b>50 - Body - front</b> .....                                   | <b>41</b> |
| <b>1 Engine console - Renewal</b> .....                          | <b>41</b> |
| 1.1 Procedure .....  | 41        |
| <b>2 Intermediate piece</b> .....                                | <b>43</b> |
| 2.1 Procedure .....  | 43        |
| <b>3 Upper wheel housing longitudinal member - Renewal</b> ..... | <b>45</b> |
| 3.1 Procedure .....  | 45        |
| <b>4 Front wheel housing - Renewal</b> .....                     | <b>47</b> |
| 4.1 Procedure .....  | 47        |
| <b>5 Front wheel housing - Partial renewal</b> .....             | <b>49</b> |
| 5.1 Procedure .....  | 49        |
| <b>6 Front longitudinal member - Renewal</b> .....               | <b>51</b> |
| 6.1 Procedure .....  | 51        |
| <b>7 Front longitudinal member - Partial renewal</b> .....       | <b>53</b> |
| 7.1 Procedure .....  | 53        |
| <b>8 Impact absorber mounting with towing eye</b> .....          | <b>55</b> |



|   |                 |            |
|---|-----------------|------------|
| 8.1   | Procedure ..... | 55         |
| <b>51 - Body - centre .....</b>                           |                 | <b>57</b>  |
| <b>1 Roof - Renewal .....</b>                             |                 | <b>57</b>  |
| 1.1   | Procedure ..... | 57         |
| <b>2 Roof side member - Renewal .....</b>                 |                 | <b>60</b>  |
| 2.1   | Procedure ..... | 60         |
| <b>3 Cross panel - Renewal .....</b>                      |                 | <b>63</b>  |
| 3.1   | Procedure ..... | 63         |
| <b>4 Front roof cross member - Renewal .....</b>          |                 | <b>65</b>  |
| 4.1   | Procedure ..... | 65         |
| <b>5 Rear roof frame - Renewal .....</b>                  |                 | <b>67</b>  |
| 5.1   | Procedure ..... | 67         |
| <b>6 A-pillar - Renewal .....</b>                         |                 | <b>69</b>  |
| 6.1   | Procedure ..... | 69         |
| <b>7 Inner A-pillar - Renewal .....</b>                   |                 | <b>71</b>  |
| 7.1   | Procedure ..... | 71         |
| <b>8 A-pillar reinforcement (inner) - Renewal .....</b>   |                 | <b>73</b>  |
| 8.1   | Procedure ..... | 73         |
| <b>9 B-pillar (3-door) - Renewal .....</b>                |                 | <b>75</b>  |
| 9.1   | Procedure ..... | 75         |
| <b>10 Inner B-pillar (5-door) - Renewal .....</b>         |                 | <b>77</b>  |
| 10.1  | Procedure ..... | 77         |
| <b>11 B-pillar (3-door) - Renewal .....</b>               |                 | <b>80</b>  |
| 11.1  | Procedure ..... | 80         |
| <b>12 B-pillar (5-door) - Renewal .....</b>               |                 | <b>82</b>  |
| 12.1  | Procedure ..... | 82         |
| <b>13 Outer side member (3-door) - Renewal .....</b>      |                 | <b>84</b>  |
| 13.1  | Procedure ..... | 84         |
| <b>14 Outer side member (5-door) - Renewal .....</b>      |                 | <b>86</b>  |
| 14.1  | Procedure ..... | 86         |
| <b>15 Inner side member (3-door) - Renewal .....</b>      |                 | <b>88</b>  |
| 15.1  | Procedure ..... | 88         |
| <b>16 Inner side member (5-door) - Renewal .....</b>      |                 | <b>90</b>  |
| 16.1  | Procedure ..... | 90         |
| <b>17 Floor panel - Renewal .....</b>                     |                 | <b>92</b>  |
| 17.1  | Procedure ..... | 92         |
| <b>53 - Body - rear .....</b>                             |                 | <b>95</b>  |
| <b>1 Rear cross panel (top section) - Renewal .....</b>   |                 | <b>95</b>  |
| 1.1   | Procedure ..... | 95         |
| <b>2 Rear cross panel (top section) - Renewal .....</b>   |                 | <b>97</b>  |
| 2.1   | Procedure ..... | 97         |
| <b>3 Rear cross panel (inner section) - Renewal .....</b> |                 | <b>99</b>  |
| 3.1   | Procedure ..... | 99         |
| <b>4 Tail light mounting - Renewal .....</b>              |                 | <b>101</b> |
| 4.1   | Procedure ..... | 101        |
| <b>5 Reinforcement for tail light mounting .....</b>      |                 | <b>104</b> |
| 5.1   | Procedure ..... | 104        |
| <b>6 Rain channel - Renewal .....</b>                     |                 | <b>106</b> |
| 6.1   | Procedure ..... | 106        |
| <b>7 Luggage compartment floor - Renewal .....</b>        |                 | <b>108</b> |

|           |   |            |
|-----------|---|------------|
| 7.1       | Procedure   | 108        |
| <b>8</b>  | <b>Luggage compartment floor - Partial renewal</b>      | <b>110</b> |
| 8.1       | Procedure   | 110        |
| <b>9</b>  | <b>Rear longitudinal member - Partial renewal</b>       | <b>112</b> |
| 9.1       | Procedure   | 112        |
| <b>10</b> | <b>Rear longitudinal member reinforcement - Renewal</b> | <b>114</b> |
| 10.1      | Procedure   | 114        |
| <b>11</b> | <b>Side panel (3-door) - Renewal</b>                    | <b>116</b> |
| 11.1      | Procedure   | 116        |
| <b>12</b> | <b>Side panel (5-door) - Renewal</b>                    | <b>120</b> |
| 12.1      | Procedure   | 120        |
| <b>13</b> | <b>Wheel housing reinforcement - Renewal</b>            | <b>122</b> |
| 13.1      | Procedure   | 122        |
| <b>14</b> | <b>Rear wheel housing (3-door) - Partial renewal</b>    | <b>124</b> |
| 14.1      | Procedure   | 124        |
| <b>15</b> | <b>Rear wheel housing - Partial renewal</b>             | <b>126</b> |
| 15.1      | Procedure   | 126        |
| <b>16</b> | <b>Rear wheel housing liner (5-door) - Renewal</b>      | <b>128</b> |
| 16.1      | Procedure   | 128        |