

## Contents

<b>01 - Self-diagnosis</b> .....	<b>1</b>
<b>1 Connecting fault reader V.A.G 1551</b> .....	<b>1</b>
1.1 Connecting fault reader V.A.G 1551 .....	1
<b>2 Self-diagnosis of airbag system BTU (Basic Triggering Unit) with and without side airbag</b> ..	<b>2</b>
2.1 Self-diagnosis of airbag system BTU (Basic Triggering Unit) with and without side airbag ..	2
2.2 General notes .....	2
2.3 Initiating self-diagnosis of airbag system .....	3
2.4 Interrogating fault memory .....	5
2.5 Fault table for BTU airbag system .....	5
2.6 Interrogating airbag control unit version .....	15
2.7 Final control diagnosis up to production date CW 27. 1999 .....	16
2.8 Final control diagnosis as from production date CW 27. 1999 .....	17
2.9 Encoding airbag control unit .....	18
2.10 Reading measured value block .....	20
2.11 Summary of measured value blocks .....	21
2.12 Adaption: Disabling and activating passenger airbag unit .....	25
<b>3 Self-diagnosis of central locking system</b> .....	<b>27</b>
3.1 Self-diagnosis of central locking system .....	27
3.2 General notes .....	27
3.3 Initiating self-diagnosis of the central locking system .....	28
3.4 Interrogating fault memory .....	30
3.5 Fault table for the central locking .....	31
3.6 Interrogating control unit version .....	35
3.7 Final control diagnosis .....	36
3.8 Encoding control unit .....	38
3.9 Standard coding table for vehicles > 1997: .....	39
3.10 Standard coding table for vehicles 1998 > : .....	39
3.11 Standard coding table for vehicles 18.00 ä: .....	39
3.12 Reading measured value block .....	41
3.13 Measured value block overview .....	41
3.14 Matching or deleting vehicle key for radio remote control .....	44
<b>4 Ultrasonic interior monitor self-diagnosis</b> .....	<b>46</b>
4.1 Ultrasonic interior monitor self-diagnosis .....	46
4.2 General notes .....	46
4.3 Initiating self-diagnosis of the interior monitor .....	46
4.4 Interrogating fault memory .....	47
4.5 Fault table for interior monitor: .....	48
4.6 Interrogating control unit version .....	50
4.7 Functional test of interior monitor .....	51
4.8 Final control diagnosis .....	51
4.9 Encoding control unit .....	53
4.10 Reading measured value block .....	54
4.11 Measured value block overview .....	55
4.12 Adaption .....	55
4.13 Erasing fault memory .....	56
4.14 End of output .....	57