

Contents

00 - Technical data	1
1 Gearbox identification	1
2 Code letters, allocation, transmission ratios, capacities	2
2.1 Calculating ratio "i"	3
3 Transmission layout	4
4 General repair instructions	5
4.1 Special tools	5
4.2 Components	5
30 - Clutch	8
1 Servicing clutch mechanism	8
1.1 Pedal cluster - exploded view of components	9
1.2 Removing and installing clutch pedal switch F36 (square housing)	10
1.3 Removing and installing clutch pedal switch F36 (round housing)	10
1.4 Removing and installing over-centre spring - LHD vehicles	11
1.5 Removing and installing over-centre spring - RHD vehicles	12
1.6 Removing and installing clutch pedal	12
1.7 Hydraulics - exploded view of components	13
1.8 Removing and installing clutch master cylinder	14
1.9 Removing and installing clutch slave cylinder	17
1.10 Bleeding clutch system	19
2 Servicing clutch release mechanism	21
3 Servicing clutch	22
3.1 Clutch - exploded view of components	22
3.2 Removing and installing clutch	23
34 - Controls, housing	26
1 Servicing selector mechanism	26
1.1 Installation position of selector mechanism	26
1.2 Gear knob and boot - exploded view of components	28
1.3 Removing and installing gear knob with gear lever boot	29
1.4 Gear lever and selector housing - exploded view of components	29
1.5 Selector cables - exploded view of components	32
1.6 Removing and installing selector mechanism	35
1.7 Adjusting selector mechanism	37
2 Removing and installing gearbox	40
2.1 Removing gearbox	40
2.2 Transporting gearbox	48
2.3 Installing gearbox	49
3 Removing and installing bevel box	55
4 Gear oil in manual gearbox with bevel box	60
4.1 Checking gear oil level in manual gearbox with bevel box and filling up.	60
5 Dismantling and assembling gearbox	61
5.1 General layout of gearbox	61
5.2 Exploded view	62
5.3 Removing and installing gearbox housing cover and 5th gear	63
5.4 Dismantling and assembling gearbox housing and selector mechanism	64
5.5 Removing and installing input shaft, output shaft (pinion shaft), differential and selector forks	65
5.6 Dismantling and assembling gearbox housing cover, gearbox housing, selector mechanism, input shaft, output shaft (pinion shaft), differential and selector forks	66
6 Servicing gearbox housing and clutch housing	77



7	Dismantling and assembling selector mechanism in gearbox	83
8	Dismantling and assembling selector forks	87
35 - Gears, shafts		92
1	Servicing input shaft	92
1.1	Dismantling and assembling input shaft	92
1.2	Adjusting input shaft	99
2	Servicing output shaft	103
2.1	Dismantling and assembling output shaft	103
2.2	Adjusting output shaft	117
3	Dismantling and assembling reverse shaft	121
39 - Final drive - front differential		124
1	Renewing oil seals and needle bearings	124
1.1	Renewing flange shaft oil seal (left-side) (with gearbox installed)	124
1.2	Removing and installing flange shaft (right-side)/drive flange with output shaft	126
1.3	Renewing oil seal for flange shaft (right-side)/drive flange with output shaft (with gearbox installed)	128
1.4	Renewing needle bearings (polygon bearings) for flange shaft/drive flange (right-side) with gearbox installed	128
1.5	Renewing output flange oil seal on bevel box (bevel box removed)	130
2	Servicing differential	133
2.1	Dismantling and assembling differential	133
3	Adjusting differential	141
3.1	Table of adjustments	141
3.2	Adjusting differential	141
3.3	Servicing bevel box	144
4	Adjusting bevel box	159
4.1	Determining thickness of shim "S4" when renewing output flange	161
4.2	Adjusting shaft bevel gear	162
4.3	Adjusting bevel gear	167