

Contents

00 - Technical data	1
1 Gearbox identification	1
1.1 Location on gearbox	1
1.2 Code letters, allocation, transmission ratios, capacities	1
2 Transmission layout	9
3 Calculating ratio "i"	11
4 General repair instructions	12
30 - Clutch	15
1 Servicing clutch mechanism	15
1.1 Checking hydraulic clutch mechanism	16
1.2 Exploded view - pedal cluster	17
1.3 Removing and installing clutch pedal switch F36 (square housing)	18
1.4 Removing and installing clutch pedal switch F36 (round housing)	19
1.5 Removing and installing over-centre spring (LHD vehicles)	19
1.6 Removing and installing over-centre spring (RHD vehicles)	20
1.7 Removing and installing clutch pedal (LHD vehicles)	21
1.8 Exploded view - hydraulic system	22
1.9 Removing and installing master cylinder	23
1.10 Removing and installing slave cylinder	27
1.11 Bleeding clutch system	29
2 Servicing clutch release mechanism	32
3 Servicing clutch	34
3.1 Fault-finding on power transmission - complaints regarding defects on the clutch and clutch mechanism	34
3.2 Servicing clutch - exploded view	39
3.3 Removing and installing clutch	40
34 - Controls, housing	42
1 Servicing selector mechanism up to 09.98	42
1.1 Installation position of selector mechanism up to 09.98	42
1.2 Removing and installing selector cables up to 09.98	44
1.3 Servicing selector housing up to 09.98	46
1.4 Removing and installing selector mechanism up to 09.98	48
1.5 Servicing gear lever up to 09.98	50
1.6 Adjusting selector mechanism up to 09.98	52
2 Servicing selector mechanism from 09.98	56
2.1 Installation position of selector mechanism from 09.98	56
2.2 Removing and installing gear knob and boot from 09.98	58
2.3 Servicing gear lever and selector housing from 09.98	59
2.4 Removing and installing selector cables - exploded view from 09.98	61
2.5 Removing and installing selector mechanism from 09.98	64
2.6 Adjusting selector mechanism from 09.98	68
3 Removing and installing gearbox	72
3.1 Removing gearbox	74
3.2 Installing gearbox	81
3.3 Removing and installing gearbox mounting	86
3.4 Removing and installing gearbox bracket	90
3.5 Removing and installing pendulum support	94
4 Checking gearbox oil	95
5 Dismantling and assembling gearbox	96
5.1 General layout of gearbox	96



5.2	Exploded view	97
5.3	Removing and installing gearbox housing cover and 5th gear	98
5.4	Dismantling and assembling gearbox housing and selector mechanism	99
5.5	Removing and installing input shaft, output shaft (pinion shaft), differential and selector forks	100
5.6	Dismantling and assembling sequence	100
6	Servicing gearbox housing and clutch housing	112
7	Dismantling and assembling selector mechanism on gearbox up to 09.98	119
8	Dismantling and assembling selector mechanism on gearbox from 09.98	122
9	Dismantling and assembling selector forks	126
35 - Gears, shafts		131
1	Input shaft	131
1.1	Dismantling and assembling input shaft	131
1.2	Modified springs for 5th gear synchromesh from gearbox build date 05 11 1	138
1.3	Adjusting input shaft	138
1.4	Table of shims	141
2	Output shaft (pinion shaft)	143
2.1	Dismantling and assembling output shaft (pinion shaft)	143
2.2	1st gear synchromesh modified as of gearbox build date 02 05 0	155
2.3	Adjusting output shaft	157
3	Dismantling and assembling reverse shaft	161
39 - Final drive - differential		164
1	Renewing flange shaft oil seals (gearbox installed)	164
1.1	Renewing flange shaft oil seal (left-side)	164
1.2	Renewing flange shaft oil seal (right-side) - separate oil seal and sleeve	165
1.3	Renewing flange shaft oil seal (right-side) - combined oil seal and sleeve	168
2	Table of adjustments	171
3	Differential	172
3.1	Dismantling and assembling differential	172
3.2	Adjusting differential	179