

## Contents

<b>00 - Technical data</b> .....	<b>1</b>
<b>1 Gearbox identification</b> .....	<b>1</b>
1.1 Location of identification on gearbox up to 06.99 .....	1
1.2 Location of identification on gearbox from 07.99 onwards .....	2
1.3 Code letters, allocation, transmission ratios, capacities .....	2
<b>2 Transmission layout</b> .....	<b>4</b>
<b>3 Calculating ratio "i"</b> .....	<b>6</b>
<b>4 General repair instructions</b> .....	<b>7</b>
<b>30 - Clutch</b> .....	<b>10</b>
<b>1 Servicing clutch mechanism</b> .....	<b>10</b>
1.1 Checking hydraulic clutch mechanism .....	11
1.2 Exploded view - pedal cluster .....	12
1.3 Removing and installing clutch pedal switch F36 (square housing) .....	13
1.4 Removing and installing clutch pedal switch F36 (round housing) .....	14
1.5 Removing and installing over-centre spring (LHD vehicles) .....	14
1.6 Removing and installing over-centre spring (RHD vehicles) .....	15
1.7 Removing and installing clutch pedal (LHD vehicles) .....	16
1.8 Exploded view - hydraulic system .....	17
1.9 Removing and installing master cylinder .....	18
1.10 Removing and installing slave cylinder .....	21
1.11 Bleeding clutch system .....	22
<b>2 Servicing clutch</b> .....	<b>24</b>
2.1 Fault-finding on power transmission - complaints regarding defects on the clutch and clutch mechanism .....	24
2.2 Exploded view - servicing clutch .....	29
2.3 Removing and installing clutch .....	30
<b>34 - Controls, housing</b> .....	<b>33</b>
<b>1 Servicing selector mechanism</b> .....	<b>33</b>
1.1 Installation position of selector mechanism .....	33
1.2 Exploded view - selector housing/gear lever .....	36
1.3 Removing and installing selector housing/selector rod .....	37
1.4 Removing and installing gear lever in selector housing .....	39
1.5 Exploded view - selector linkage and pivot points on gearbox .....	40
1.6 Adjusting selector mechanism .....	45
<b>2 Removing and installing gearbox</b> .....	<b>49</b>
2.1 Removing gearbox .....	51
2.2 Installing gearbox .....	56
2.3 Removing and installing gearbox mounting .....	62
2.4 Removing and installing gearbox bracket .....	64
2.5 Removing and installing pendulum support .....	68
<b>3 Checking gearbox oil</b> .....	<b>69</b>
<b>4 Dismantling and assembling gearbox</b> .....	<b>70</b>
4.1 General layout of gearbox .....	70
4.2 Exploded view .....	71
4.3 Exploded view - removing and installing gearbox housing cover and 5th gear .....	72
4.4 Exploded view - removing and installing gearbox housing and selector shaft .....	73
4.5 Exploded view - Removing and installing input shaft, output shaft (pinion shaft), differential and selector forks .....	75
4.6 Dismantling and assembling sequence .....	76
<b>5 Servicing gearbox housing and selector shaft</b> .....	<b>94</b>



6	<b>Servicing clutch housing</b> .....	99
7	<b>Servicing gearbox housing cover</b> .....	104
<b>35</b>	<b>- Gears, shafts</b> .....	<b>109</b>
1	<b>Input shaft</b> .....	109
1.1	Dismantling and assembling input shaft .....	109
2	<b>Output shaft (pinion shaft)</b> .....	117
2.1	Dismantling and assembling output shaft (pinion shaft) .....	117
2.2	Adjusting output shaft .....	122
<b>39</b>	<b>- Final drive - differential</b> .....	<b>127</b>
1	<b>Renewing flange shaft oil seals (gearbox installed)</b> .....	127
1.1	Removing flange shaft oil seals .....	127
1.2	Installing flange shaft oil seals .....	128
2	<b>Table of adjustments</b> .....	130
3	<b>Differential</b> .....	131
3.1	Exploded view - dismantling and assembling differential .....	131
3.2	Adjusting differential .....	139