

## Contents

<b>00</b>	<b>Technical data</b> .....	<b>1</b>
1	<b>Gearbox identification</b> .....	1
2	<b>Code letters, allocation, transmission ratios, capacities</b> .....	2
2.1	Calculating ratio "i" .....	5
3	<b>Rear final drive identification</b> .....	6
4	<b>Transmission layout</b> .....	7
5	<b>General repair instructions</b> .....	9
5.1	Contact corrosion .....	9
5.2	Special tools .....	9
5.3	Components .....	9
<b>30</b>	<b>Clutch</b> .....	<b>13</b>
1	<b>Servicing clutch mechanism</b> .....	<b>13</b>
1.1	Pedal cluster - exploded view of components .....	14
1.2	Removing and installing clutch pedal switch F36 (square housing) .....	15
1.3	Removing and installing clutch pedal switch F36 (round housing) .....	15
1.4	Removing and installing over-centre spring .....	16
1.5	Removing and installing clutch pedal .....	17
1.6	Hydraulics - exploded view of components .....	19
1.7	Removing and installing clutch master cylinder .....	21
1.8	Removing and installing clutch slave cylinder (release bearing with hydraulic actuator) ..	24
1.9	Bleeding clutch system .....	24
2	<b>Servicing clutch release mechanism</b> .....	<b>26</b>
2.1	Clutch release mechanism - exploded view of components .....	26
2.2	Renewing input shaft oil seal .....	26
3	<b>Servicing conventional clutch</b> .....	<b>28</b>
3.1	Conventional clutch - exploded view of components .....	28
3.2	Removing and installing conventional clutch .....	29
4	<b>Servicing self-adjusting clutch "LuK version"</b> .....	<b>33</b>
4.1	Exploded view of components .....	33
4.2	Removing and installing self-adjusting clutch .....	34
<b>34</b>	<b>Controls, housing</b> .....	<b>37</b>
1	<b>Servicing selector mechanism</b> .....	<b>37</b>
1.1	Installation position of selector mechanism .....	37
1.2	Gear lever knob and boot - exploded view of components .....	39
1.3	Gear lever and selector housing - exploded view of components .....	40
1.4	Selector cables to 06.2001 - exploded view of components .....	42
1.5	Selector cables from 07.2001 - exploded view of components .....	44
1.6	Removing and installing selector mechanism .....	45
1.7	Adjusting selector mechanism .....	48
2	<b>Removing gearbox</b> .....	<b>52</b>
2.1	Installing gearbox .....	62
2.2	Transporting gearbox .....	70
2.3	Removing and installing gearbox mounting .....	70
2.4	Removing and installing pendulum support .....	73
3	<b>Removing and installing bevel box with gearbox installed</b> .....	<b>75</b>
4	<b>Checking gear oil level in manual gearbox with bevel box and filling up.</b> .....	<b>82</b>
5	<b>Dismantling and assembling gearbox</b> .....	<b>83</b>
5.1	Gearbox - exploded view of components .....	83
5.2	Gearbox - exploded view .....	84



5.3	Dismantling and assembling gearbox housing and selector mechanism	85
5.4	Dismantling and assembling input shaft, output shafts (pinion shafts), differential, bevel box and selector rods	86
5.5	Dismantling and assembling gearbox housing, selector mechanism, input shaft, output shafts (pinion shafts), differential, bevel box and selector rods	88
<b>6</b>	<b>Servicing gearbox housing</b>	<b>95</b>
<b>7</b>	<b>Servicing clutch housing</b>	<b>100</b>
<b>8</b>	<b>Servicing selector mechanism in gearbox</b>	<b>105</b>
<b>9</b>	<b>Dismantling and assembling selector forks</b>	<b>108</b>
<b>35 - Gears, shafts</b>		<b>111</b>
<b>1</b>	<b>Dismantling and assembling input shaft</b>	<b>111</b>
1.1	Adjusting input shaft	118
<b>2</b>	<b>Dismantling and assembling output shaft for 1st - 4th gear</b>	<b>122</b>
2.1	Adjusting output shaft for 1st - 4th gear	134
<b>3</b>	<b>Dismantling and assembling output shaft for 5th, 6th and reverse gear</b>	<b>139</b>
3.1	Adjusting output shaft for 5th, 6th and reverse gear	151
<b>39 - Final drive - front differential</b>		<b>157</b>
<b>1</b>	<b>Renewing oil seals</b>	<b>157</b>
1.1	Renewing flange shaft oil seal (left-side)	157
1.2	Renewing flange shaft oil seal (right-side)	159
1.3	Renewing oil seal for bevel box output flange	163
<b>2</b>	<b>Servicing differential</b>	<b>167</b>
2.1	Dismantling and assembling differential	167
2.2	Table of adjustments	175
2.3	Adjusting differential	176
<b>3</b>	<b>Bevel box</b>	<b>180</b>
3.1	Dismantling and assembling bevel box	180
3.2	Renewing needle bearings (polygon bearings) for flange shaft (right-side) with bevel box installed	195
<b>4</b>	<b>Adjusting shaft bevel gear and bevel gear (final drive gear set)</b>	<b>201</b>
4.1	General notes	201
4.2	Adjustment and marking of final drive gear set	201
4.3	Position of shims	202
4.4	Adjustment overview (bevel box)	202
4.5	Recommended sequence for adjusting gear set	203
4.6	Determining thickness of shim "S4" when renewing output flange	203
4.7	Adjusting shaft bevel gear	204
4.8	Adjusting bevel gear	210
<b>5</b>	<b>Propshaft</b>	<b>216</b>
<b>6</b>	<b>Rear final drive</b>	<b>217</b>