

## Contents

<b>00 - Technical data</b> .....	<b>1</b>
<b>1 Gearbox identification</b> .....	<b>1</b>
1.1 Location on gearbox .....	1
<b>2 Notes on automatic gearbox 09A</b> .....	<b>2</b>
2.1 Repairing gearbox .....	2
<b>3 Capacities of planetary gearbox and final drive</b> .....	<b>4</b>
<b>4 Code letters, gearbox allocation, ratios, equipment</b> .....	<b>5</b>
<b>5 Safety precautions</b> .....	<b>8</b>
<b>6 Notes on tow-starting and towing</b> .....	<b>9</b>
<b>7 Repair instructions</b> .....	<b>10</b>
7.1 Contact corrosion! .....	10
7.2 General repair instructions .....	10
<b>8 Rules for cleanliness when working on the automatic gearbox</b> .....	<b>13</b>
<b>32 - Torque converter</b> .....	<b>14</b>
<b>1 Torque converter</b> .....	<b>14</b>
1.1 Identification of torque converter .....	14
1.2 Draining torque converter .....	14
1.3 Removing and installing torque converter oil seal .....	15
1.4 Installing torque converter .....	16
<b>37 - Controls, housing</b> .....	<b>17</b>
<b>1 Servicing selector mechanism</b> .....	<b>17</b>
1.1 Checking selector mechanism .....	17
1.2 Checking and adjusting selector lever cable .....	18
1.3 Checking ignition key removal lock .....	19
1.4 Removing and installing selector mechanism .....	19
1.5 Dismantling and assembling selector mechanism .....	23
1.6 Removing and installing selector lever handle .....	25
1.7 Removing and installing selector lever lock solenoid N110 .....	26
1.8 Removing and installing selector lever cable .....	28
1.9 Removing and installing locking cable .....	31
1.10 Adjusting locking cable .....	33
<b>2 Exploded view - ATF cooler</b> .....	<b>35</b>
2.1 Removing and installing ATF cooler .....	35
<b>3 ATF in gearbox</b> .....	<b>38</b>
3.1 Checking and topping up ATF level .....	38
3.2 Changing ATF or filling up after performing repairs .....	43
<b>4 Removing and installing gearbox</b> .....	<b>46</b>
4.1 Removing gearbox .....	46
4.2 Transporting automatic gearbox .....	53
4.3 Installing gearbox .....	54
4.4 Removing and installing gearbox mounting .....	57
4.5 Removing and installing pendulum support .....	60
<b>5 Securing gearbox to engine and gearbox support VAS 6095 or support clamp VW 313</b> ..	<b>62</b>
<b>6 Gearbox with selector elements</b> .....	<b>64</b>
<b>7 Exploded view - gearbox</b> .....	<b>66</b>
<b>8 Assembly sequence - dismantling and assembling gearbox</b> .....	<b>67</b>
8.1 Dismantling gearbox .....	67
8.2 Assembling gearbox .....	70



<b>38 - Gears, control</b>	<b>89</b>
<b>1 Housing cover for planetary gearing</b>	<b>89</b>
1.1 Exploded view	89
1.2 Pressure accumulator for brake „B4“	90
<b>2 1st to 3rd gear clutch „K1“</b>	<b>92</b>
2.1 Exploded view of „K1“ components	92
2.2 Dismantling and assembling „K1“ clutch housing	92
<b>3 Reverse gear clutch „K2“ and 3rd to 5th gear clutch „K3“</b>	<b>94</b>
3.1 Exploded view of „K2“ plates	94
3.2 Exploded view of „K3“ plates	95
3.3 Exploded view of „K2/K3“ clutch housing	95
<b>4 5th gear clutch „K4“</b>	<b>97</b>
4.1 Exploded view of „K4“ components (for work from above)	97
4.2 Exploded view of „K4“ components (for work from below)	99
<b>5 Removing and installing valve body</b>	<b>101</b>
5.1 Exploded view - valve body	101
5.2 Assembly sequence - removing and installing valve body	103
<b>6 Removing and installing senders in gearbox</b>	<b>109</b>
6.1 Removing and installing gearbox input speed sender G182	109
6.2 Removing and installing vehicle speed sender G68 and intermediate shaft speed sender G265	109
6.3 Removing and installing gearbox oil temperature sender (ATF) G93 with wiring harness	110
<b>7 Renewing oil seal for selector shaft</b>	<b>112</b>
<b>8 Removing, installing and adjusting multifunction switch F125</b>	<b>113</b>
<b>39 - Final drive - differential</b>	<b>115</b>
<b>1 Renewing oil seals for flange shafts</b>	<b>115</b>
1.1 Exploded view - flange shafts	115
1.2 Renewing oil seal for flange shaft (left-side)	115
1.3 Renewing oil seal for flange shaft (right-side)	118