

Contents

01 - Self-diagnosis, electrical checks	1
1 Self-diagnosis	1
1.1 Self-diagnosis function	1
1.2 Safety functions of gearbox control unit	2
2 Electrical/electronic components and fitting locations	3
2.1 Removing and installing automatic gearbox control unit J217	8
3 Performing self-diagnosis	10
3.1 Safety precautions	10
3.2 Connecting vehicle diagnostic, testing and information system VAS 505x and selecting functions	10
3.3 List of selectable functions	13
4 Interrogating fault memory	14
4.1 Interrogating fault memory	14
4.2 Fault tables	15
4.3 Fault tables: Fault codes 00258 up to 00545	15
4.4 Fault tables: Fault codes 00596 up to 65535	21
5 Erasing fault memory	27
6 Ending output	28
7 Basic setting	29
8 Measured values	30
8.1 Reading measured values	30
8.2 Overview of selectable display groups	30
8.3 Test table	31
9 Electrical check	39
9.1 Connecting adapter cable, (68-pin) V.A.G 1598/18A (test box) to automatic gearbox control unit J217	40
9.2 Test table	43
9.3 Overview of connectors between automatic gearbox control unit J217 and gearbox	49
9.4 Checking wiring between automatic gearbox control unit J217 and gearbox	49
9.5 Checking multi-function switch F125 with 8-pin connector	50
9.6 Checking vehicle speed sender G68 with 3-pin connector	52
9.7 Checking gearbox speed sender G38 with 2-pin connector	53
10 CAN bus	54
10.1 Checking a "two-wire bus system"	54
10.2 Two control units communicating via a "two-wire bus system"	55
10.3 Three or more control units communicating via a "two-wire bus system"	56