

## Contents

<b>01 - Self-diagnosis, electrical checks</b>	<b>1</b>
<b>1 Self-diagnosis</b>	<b>1</b>
1.1 Self-diagnosis function	1
1.2 Functions of automatic gearbox control unit J217	1
1.3 Safety functions of automatic gearbox control unit J217	2
<b>2 Electrical/electronic components and fitting locations</b>	<b>3</b>
2.1 Removing and installing automatic gearbox control unit J217	6
<b>3 Performing self-diagnosis</b>	<b>8</b>
3.1 Safety precautions	8
3.2 Connecting vehicle diagnostic tester and selecting functions	8
3.3 List of selectable functions	10
<b>4 Interrogating event memory</b>	<b>11</b>
4.1 Interrogating event memory	11
4.2 Fault tables	12
4.3 Fault tables: Fault codes 00258 to 00532	12
4.4 Fault tables: Fault codes 00652 to 65535	17
<b>5 Erasing event memory</b>	<b>20</b>
<b>6 Ending output</b>	<b>21</b>
<b>7 Initiating basic setting</b>	<b>22</b>
<b>8 Measured values</b>	<b>23</b>
8.1 Reading measured values	23
8.2 List of available display groups	23
8.3 Test table	24
<b>9 Electrical check</b>	<b>33</b>
9.1 Connecting adapter cable, (68-pin) V.A.G 1598/18A (test box) to automatic gearbox control unit J217	34
9.2 Test table	36
<b>10 CAN bus</b>	<b>41</b>
10.1 CAN bus	41
10.2 Checking a „two-wire bus system“	42
10.3 Two control units communicating via a „two-wire bus system“	43
10.4 Three or more control units communicating via a „two-wire bus system“	44