

Contents

01 - Self diagnosis	1
1 Self-diagnosis	1
1.1 Self-diagnosis	1
1.2 Technical data of self-diagnosis	1
1.3 Connecting fault reader V.A.G 1551 and selecting engine electronics control unit	1
2 Interrogating and erasing fault memory	3
2.1 Interrogating and erasing fault memory	3
2.2 Fault table	4
2.3 Fault codes 00282 to 16502	4
2.4 Fault codes 16505 to 18259	14
3 Final control diagnosis	23
3.1 Final control diagnosis	23
4 Basic setting	24
4.1 Basic setting	24
5 Coding control unit	26
5.1 Coding control unit	26
6 Reading measured value block	26
6.1 Reading measured value block	26
6.2 Display Groups 000 to 007	31
6.3 Display Groups 008 to 099	41
24 - Mixture preparation, Injection	52
1 Servicing Motronic injection system	52
1.1 Servicing Motronic injection system	52
1.2 Safety precautions	52
1.3 Rules for cleanliness	52
1.4 Technical data	53
1.5 Fitting locations overview	54
1.6 Wiring and component check with test box V.A.G 1598/22	56
1.7 Renewing engine control unit	57
1.8 Testing idling speed	58
1.9 Checking fuel pressure regulator and holding pressure	59
1.10 Testing injection quantity, leak-tightness and spray pattern of injectors	61
1.11 Checking injectors	63
1.12 Testing fuel pump relay and activation	65
1.13 Checking air mass meter	68
2 Testing lambda control	70
2.1 Testing lambda control	70
2.2 Poor performance after cold start	71
2.3 Testing operation	72
2.4 Checking Lambda probe heating	73
2.5 Testing lambda probe signal wiring and activation	74
2.6 Removing and installing lambda probe	76
3 Testing intake manifold change-over function	76
3.1 Testing intake manifold change-over function	76
3.2 Testing operation	76
3.3 Testing vacuum system	77
3.4 Testing intake manifold change-over valve	78
4 Testing fuel tank breather system	80
4.1 Testing fuel tank breather system	80
4.2 Testing solenoid valve 1 for activated charcoal filter	80
5 Testing throttle valve control part (vehicles without cruise control)	82

5.1	Testing throttle valve control part (vehicles without cruise control)	82
5.2	Function	82
5.3	Performing adaption of throttle valve control part (vehicles without cruise control)	83
5.4	Testing idling speed switch (vehicles without cruise control)	85
5.5	Testing throttle valve positioner sender and throttle valve potentiometer (vehicles without cruise control)	85
6	Testing throttle valve control part (vehicles with cruise control)	87
6.1	Testing throttle valve control part (vehicles with cruise control)	87
6.2	Function	87
6.3	Performing adaption of throttle valve control part (vehicles with cruise control)	87
6.4	Testing idling speed switch (vehicles with cruise control)	89
6.5	Testing throttle valve positioner sender and throttle valve potentiometer (vehicles with cruise control)	90
7	Testing auxiliary signals	92
7.1	Testing auxiliary signals	92
7.2	Testing air conditioner compressor shut-off	92
7.3	Testing engine speed adaption when air conditioner cuts in	93
7.4	Testing clutch pedal switch	94
7.5	Testing power steering pressure switch	96
7.6	Checking engine speed signal	97
7.7	Testing speed signal	97
7.8	Testing data exchange between Motronic, ABS and gearbox (CAN bus)	99
28 - Ignition system	101	
1	Testing ignition system	101
1.1	Testing ignition system	101
1.2	Safety precautions	101
1.3	Technical data for ignition system	101
1.4	Testing twin-spark ignition system with two ignition coils	101
1.5	Checking intake air temperature sender	103
1.6	Checking engine speed sender	104
1.7	Testing coolant temperature sender	106
1.8	Checking control unit voltage supply	108
1.9	Testing knock sensors	109
1.10	Checking Hall sender	111
2	Testing camshaft timing control	113
2.1	Testing camshaft timing control	113
2.2	Testing solenoid valve for camshaft adjustment	114