

## Contents

|           |  |           |
|-----------|--|-----------|
| <b>01</b> | <b>Self-diagnosis</b> .....  | <b>1</b>  |
| 1         | <b>Self-diagnosis of Motronic</b> .....  | <b>1</b>  |
| 1.1       | Self-diagnosis of Motronic .....   | 1         |
| 1.2       | Technical data on self-diagnosis .....   | 1         |
| 1.3       | Connecting up vehicle diagnostic, testing and information system VAS 5051 and selecting engine electronics control units ..... | 2         |
| 1.4       | Connecting up fault reader V.A.G 1551 and selecting engine electronics control unit .....                                      | 5         |
| 2         | <b>Interrogating and erasing fault memory</b> .....  | <b>7</b>  |
| 2.1       | Interrogating and erasing fault memory .....   | 7         |
| 2.2       | Fault table .....  | 9         |
| 3         | <b>Final control diagnosis</b> .....   | <b>19</b> |
| 3.1       | Final control diagnosis .....  | 19        |
| 4         | <b>Readiness code</b> .....  | <b>23</b> |
| 4.1       | Readiness code .....   | 23        |
| 4.2       | Reading out readiness code .....   | 23        |
| 4.3       | Generating readiness code .....  | 24        |
| 5         | <b>Basic setting</b> .....   | <b>29</b> |
| 5.1       | Basic setting .....  | 29        |
| 6         | <b>Encoding engine control unit</b> .....  | <b>31</b> |
| 6.1       | Encoding engine control unit .....   | 31        |
| 7         | <b>Reading measured value block</b> .....  | <b>32</b> |
| 7.1       | Reading measured value block .....   | 32        |
| <br>      |  |           |
| <b>24</b> | <b>Mixture preparation, Injection</b> .....  | <b>34</b> |
| 1         | <b>Servicing Motronic injection system</b> .....   | <b>34</b> |
| 1.1       | Servicing Motronic injection system .....  | 34        |
| 1.2       | Safety precautions .....   | 34        |
| 1.3       | Rules for cleanliness .....  | 34        |
| 1.4       | Technical data .....   | 35        |
| 1.5       | Exploded view of fitting locations .....   | 36        |
| 1.6       | Wiring and component check using test box V.A.G 1598/31 .....  | 42        |
| 1.7       | Procedure following interruption of power supply .....   | 43        |
| 1.8       | Replacing Motronic control unit -J220 .....  | 44        |
| 1.9       | Checking idling speed .....  | 51        |
| 1.10      | Checking system pressure, fuel pressure regulator and holding pressure .....   | 53        |
| 1.11      | Checking injection quantity, freedom from leaks and spray pattern of injectors .....   | 55        |
| 1.12      | Checking injectors .....   | 57        |
| 1.13      | Checking fuel pump relay -J17 and actuation .....  | 59        |
| 1.14      | Checking Motronic current supply relay -J271 .....   | 62        |
| 1.15      | Checking control unit power supply .....   | 63        |
| 1.16      | Checking air-mass meter -G70 .....   | 65        |
| 1.17      | Checking intake system for leaks (unmetered air) .....   | 69        |
| 1.18      | Checking intake-air temperature sender -G42 .....  | 70        |
| 1.19      | Checking coolant temperature sender -G62 .....   | 72        |
| 2         | <b>Checking lambda control</b> .....   | <b>73</b> |
| 2.1       | Checking lambda control .....  | 73        |
| 2.2       | Checking lambda probe and lambda control upstream of catalytic converter .....   | 73        |
| 2.3       | Checking ageing of lambda probe upstream of catalytic converter .....  | 79        |
| 2.4       | Checking lambda probe heater -Z19 for lambda probe upstream of catalytic converter .....                                       | 80        |
| 2.5       | Checking lambda probe and lambda control downstream of catalytic converter .....   | 83        |
| 2.6       | Checking lambda probe heater -Z29 for lambda probe downstream of catalytic converter .....                                     | 87        |
| 2.7       | Removing and installing lambda probe .....   | 90        |
| 3         | <b>Checking intake manifold changeover</b> .....   | <b>91</b> |



|                                       |   |            |
|---------------------------------------|---|------------|
| 3.1                                   | Checking intake manifold changeover . . . . .   | 91         |
| 3.2                                   | Checking operation . . . . .  | 91         |
| 3.3                                   | Checking intake manifold changeover solenoid valve -N156 . . . . .                      | 92         |
| 3.4                                   | Checking vacuum system . . . . .  | 94         |
| <b>4</b>                              | <b>Checking fuel tank breather system . . . . .</b>                                     | <b>96</b>  |
| 4.1                                   | Checking fuel tank breather system . . . . .  | 96         |
| 4.2                                   | Diagnosis of fuel tank breather system . . . . .  | 96         |
| 4.3                                   | Checking activated charcoal filter solenoid valve 1 -N80 . . . . .                      | 97         |
| <b>5</b>                              | <b>Checking exhaust gas recirculation system . . . . .</b>                              | <b>100</b> |
| 5.1                                   | Checking exhaust gas recirculation system . . . . .                                     | 100        |
| 5.2                                   | Adaption of exhaust gas recirculation valve . . . . .                                   | 100        |
| <b>6</b>                              | <b>Checking secondary air inlet valve -N112 . . . . .</b>                               | <b>101</b> |
| 6.1                                   | Checking secondary air inlet valve -N112 . . . . .                                      | 101        |
| 6.2                                   | Diagnosis of secondary air system . . . . .   | 101        |
| 6.3                                   | Checking secondary air inlet valve -N112 . . . . .                                      | 102        |
| 6.4                                   | Checking secondary air pump relay -J299 . . . . .                                       | 103        |
| <b>7</b>                              | <b>Checking electronic engine output control (electronic throttle) . . . . .</b>        | <b>106</b> |
| 7.1                                   | Checking electronic engine output control (electronic throttle) . . . . .               | 106        |
| 7.2                                   | Function of electronic throttle system . . . . .  | 106        |
| 7.3                                   | Checking throttle valve control part -J338 . . . . .                                    | 106        |
| 7.4                                   | Adaption of throttle valve control part . . . . .                                       | 107        |
| 7.5                                   | Checking throttle valve drive angle senders 1 and 2 -G187 and -G188 . . . . .           | 109        |
| 7.6                                   | Significance of EPC warning lamp (electric throttle control fault lamp -K132) . . . . . | 111        |
| <b>8</b>                              | <b>Checking accelerator pedal position sender -G79 and -G185 . . . . .</b>              | <b>113</b> |
| 8.1                                   | Checking accelerator pedal position sender -G79 and -G185 . . . . .                     | 113        |
| 8.2                                   | Learning kickdown function . . . . .  | 116        |
| 8.3                                   | Check brake light switch -F and brake pedal switch -F47 . . . . .                       | 117        |
| 8.4                                   | Checking clutch pedal switch -F36 . . . . .   | 120        |
| <b>9</b>                              | <b>Checking additional signals . . . . .</b>  | <b>123</b> |
| 9.1                                   | Checking additional signals . . . . .   | 123        |
| 9.2                                   | Checking engine-speed signal . . . . .  | 123        |
| 9.3                                   | Checking fuel consumption signal . . . . .  | 123        |
| 9.4                                   | Checking vehicle speed signal . . . . .   | 124        |
| 9.5                                   | Checking crash signal . . . . .   | 125        |
| 9.6                                   | Checking air conditioner compressor shutoff . . . . .                                   | 126        |
| 9.7                                   | Checking data exchange between engine, ABS, EDL and gearbox control units . . . . .     | 127        |
| 9.8                                   | Checking wire for fuel tank level signal . . . . .                                      | 128        |
| 9.9                                   | Checking power-assisted steering pressure switch -F88 . . . . .                         | 128        |
| <b>28 - Ignition system . . . . .</b> |   | <b>131</b> |
| <b>1</b>                              | <b>Checking ignition system . . . . .</b>   | <b>131</b> |
| 1.1                                   | Checking ignition system . . . . .  | 131        |
| 1.2                                   | General notes on ignition system . . . . .  | 131        |
| 1.3                                   | Safety precautions . . . . .  | 131        |
| 1.4                                   | Ignition system technical data . . . . .  | 131        |
| 1.5                                   | Identification of ignition connections at ignition coil . . . . .                       | 132        |
| 1.6                                   | Checking ignition coils . . . . .   | 132        |
| 1.7                                   | Checking engine speed sender -G28 . . . . .   | 135        |
| 1.8                                   | Checking knock control stop . . . . .   | 136        |
| 1.9                                   | Checking knock sensors 1 and 2 -G61 and -G66 . . . . .                                  | 137        |
| 1.10                                  | Checking Hall sender -G40 . . . . .   | 138        |
| <b>2</b>                              | <b>Checking camshaft timing control . . . . .</b>                                       | <b>141</b> |
| 2.1                                   | Checking camshaft timing control . . . . .  | 141        |
| 2.2                                   | Function of camshaft timing control . . . . .   | 141        |
| 2.3                                   | Checking camshaft adjustment solenoid valve -N205 . . . . .                             | 144        |
| 2.4                                   | Checking misfiring detection function . . . . .   | 148        |