

## Contents

<b>01 - Self-diagnosis</b> .....	<b>1</b>
<b>1 Self-diagnosis of Motronic system</b> .....	<b>1</b>
1.1 Self-diagnosis of Motronic system .....	1
1.2 Technical data for self-diagnosis .....	1
1.3 Safety precautions .....	1
1.4 Connecting vehicle diagnostic, testing and information system VAS 5051 or fault reader V.A.G 1551 and selecting functions .....	1
<b>2 Interrogating and erasing fault memory</b> .....	<b>4</b>
2.1 Interrogating and erasing fault memory .....	4
2.2 Fault table .....	5
<b>3 Final control diagnosis</b> .....	<b>14</b>
3.1 Final control diagnosis .....	14
<b>4 Basic setting</b> .....	<b>18</b>
4.1 Basic setting .....	18
<b>5 Coding control unit</b> .....	<b>19</b>
5.1 Coding control unit .....	19
5.2 Coding table .....	20
<b>6 Reading measured value block</b> .....	<b>20</b>
6.1 Reading measured value block .....	20
<b>24 - Mixture preparation, Injection</b> .....	<b>22</b>
<b>1 Servicing Motronic injection system</b> .....	<b>22</b>
1.1 Servicing Motronic injection system .....	22
1.2 Safety precautions .....	22
1.3 Rules for cleanliness .....	22
1.4 Technical data .....	23
1.5 Fitting locations overview .....	24
1.6 Dismantling and assembling air cleaner .....	35
1.7 Wiring and component check with test box V.A.G 1598/31 .....	36
1.8 Renewing engine control unit .....	38
1.9 Testing idling speed .....	39
1.10 Checking system pressure, fuel pressure regulator and holding pressure .....	41
1.11 Testing injectors .....	44
1.12 Dismantling and assembling fuel rail with injectors .....	49
1.13 Removing and installing injectors .....	52
1.14 Checking injection quantity, leak-tightness and spray pattern of injectors .....	54
1.15 Testing fuel pump relay -J17 and activation .....	56
1.16 Testing air mass meter -G70 .....	60
1.17 Checking intake air system for leaks (unmetered air) .....	64
<b>2 Testing lambda control</b> .....	<b>66</b>
2.1 Testing lambda control .....	66
2.2 Function of lambda control (before catalytic converter) .....	66
2.3 Testing lambda probe and lambda control (before catalytic converter) .....	67
2.4 Testing lambda probe and lambda control (after catalytic converter) - not on vehicles with engine code letters AJQ, AQA .....	73
2.5 Testing lambda probe heating -Z19 and -Z29 at lambda probes (before and after catalytic converter) .....	78
2.6 Removing and installing lambda probe .....	82
<b>3 Testing secondary air system-not on vehicles with engine code letters AJQ, AQA</b> .....	<b>84</b>
3.1 Testing secondary air system-not on vehicles with engine code letters AJQ, AQA .....	84
3.2 Testing secondary air inlet valve -N112 .....	87
3.3 Testing secondary air pump relay -J299 and activation .....	90
<b>4 Testing fuel tank breather</b> .....	<b>96</b>



4.1	Testing fuel tank breather . . . . .	96
4.2	Testing solenoid valve 1 for activated charcoal filter -N80 . . . . .	96
<b>5</b>	<b>Testing electronic engine power control (electronic throttle) . . . . .</b>	<b>100</b>
5.1	Testing electronic engine power control (electronic throttle) . . . . .	100
5.2	Operation of electronic throttle system . . . . .	100
5.3	Notes on EPC warning lamp (fault warning lamp for electronic throttle) in dash panel insert . . . . .	101
5.4	Testing electronic throttle warning lamp -K132 . . . . .	102
5.5	Testing throttle valve control part -J338 . . . . .	103
5.6	Performing adaption of throttle valve control part . . . . .	104
5.7	Testing angle senders for throttle valve drive . . . . .	106
5.8	Testing accelerator position senders . . . . .	110
5.9	"Learning" kickdown function . . . . .	114
<b>6</b>	<b>Testing auxiliary signals . . . . .</b>	<b>116</b>
6.1	Testing auxiliary signals . . . . .	116
6.2	Checking engine speed signal . . . . .	117
6.3	Testing fuel consumption signal for on-board computer . . . . .	117
6.4	Testing speed signal . . . . .	117
6.5	Testing air conditioner compressor shut-off . . . . .	118
6.6	Testing brake light switch and brake pedal switch . . . . .	119
6.7	Testing clutch pedal switch -F36 . . . . .	122
6.8	Testing power steering pressure switch -F88 . . . . .	124
6.9	Testing crash signal wiring - Vehicles from model year 2000 > . . . . .	126
6.10	Testing data exchange between engine control unit, gearbox control unit, ABS/EDL control unit and airbag control unit or dash panel insert . . . . .	127
<b>7</b>	<b>Vacuum system layout . . . . .</b>	<b>131</b>
7.1	Vacuum system layout . . . . .	131
<b>28</b>	<b>- Ignition system . . . . .</b>	<b>135</b>
<b>1</b>	<b>Testing ignition system . . . . .</b>	<b>135</b>
1.1	Testing ignition system . . . . .	135
1.2	General notes on ignition system . . . . .	135
1.3	Safety precautions . . . . .	135
1.4	Technical data . . . . .	135
1.5	Testing ignition coils with output stages . . . . .	136
1.6	Testing Motronic current supply relay -J271 - Vehicles model year 2000 > . . . . .	141
1.7	Testing intake air temperature sender -G42 . . . . .	146
1.8	Testing engine speed sender -G28 . . . . .	149
1.9	Testing coolant temperature sender -G62 . . . . .	152
1.10	Testing voltage supply for control unit . . . . .	156
1.11	Testing knock sensor control limit . . . . .	158
1.12	Testing knock sensors . . . . .	159
1.13	Testing Hall sender -G163 . . . . .	162