

Contents

01 - Self-diagnosis	1
1 Self-diagnosis of Motronic system	1
1.1 Technical data of self-diagnosis	1
1.2 Safety precautions	1
2 Fault table	2
2.1 Fault tables for faults 16395 / P0011 to 17624 / P1216	2
2.2 Fault tables for faults 17633 / P1225 to 19534 / P3078	9
2.3 Final control diagnosis	16
2.4 Basic setting	18
2.5 Encoding control unit	19
2.6 Reading measured value block	20
2.7 Readiness code	20
24 - Mixture preparation - injection	32
1 Servicing Motronic injection system	32
1.1 Safety precautions	32
1.2 Rules for cleanliness	32
1.3 Technical data	33
1.4 Overview of fitting locations	33
1.5 Air cleaner - exploded view	39
1.6 Removing and installing air filter element	40
1.7 Checking wiring and components with test box V.A.G 1598/31	41
1.8 Removing and installing engine control unit with and without protective housing	45
1.9 Exhaust emissions warning lamp K83 in dash panel insert	50
1.10 Checking exhaust emissions warning lamp K83	50
1.11 Checking idling speed	50
1.12 Checking system pressure, fuel pressure regulator and residual pressure	52
1.13 Checking injectors	55
1.14 Dismantling and assembling fuel rail with injectors - exploded view	57
1.15 Removing and installing injectors	59
1.16 Checking injection quantity and spray pattern of injectors; checking for leaks	60
1.17 Checking fuel pump relay J17 and activation	62
1.18 Checking air mass meter G70	66
1.19 Checking intake system for leaks (unmetered air)	69
1.20 Checking Lambda control function	69
1.21 Checking Lambda probe and Lambda control before catalytic converter	69
1.22 Checking ageing of Lambda probe before catalytic converter	74
1.23 Checking Lambda probe heater Z19 for Lambda probe G39	76
1.24 Checking Lambda probe and Lambda control after catalytic converter	78
1.25 Checking Lambda probe 1 heater after catalytic converter Z29 for Lambda probe after catalytic converter G130	82
1.26 Removing and installing Lambda probe	85
1.27 Checking solenoid valve 1 for activated charcoal filter N80	86
2 Checking electronic engine power control (electronic throttle)	89
2.1 Operation of electronic throttle system	89
2.2 Electronic power control fault lamp K132 in instrument cluster	89
2.3 Checking electronic power control fault lamp K132	90
2.4 Checking throttle valve module J338	90
2.5 Performing adaption of throttle valve module	91
2.6 Checking for contamination of throttle valve	93
2.7 Cleaning throttle valve module	95
2.8 Checking angle senders for throttle valve drive	96
2.9 Checking accelerator pedal position sender G79	98

2.10	Adapting kickdown function	100
2.11	Checking brake light switch F and brake pedal switch F47	102
2.12	Checking clutch pedal switch F36	104
3	Checking auxiliary signals	107
3.1	Checking engine speed signal	107
3.2	Checking road speed signal	107
3.3	Checking air conditioner compressor cut-out	108
3.4	Checking power assisted steering pressure switch F88	109
3.5	Checking crash signal wire	110
3.6	Checking fuel consumption signal for on-board computer	111
3.7	Checking tank level signal wire	111
3.8	Checking data exchange between the engine control unit and other control units with CAN capability	111
4	Vacuum system layout	115
28 - Ignition system		117
1	Checking ignition system	117
1.1	Safety precautions	117
1.2	Technical data	117
1.3	Checking ignition coils with output stages	118
1.4	Checking Motronic current supply relay J271	122
1.5	Checking intake air temperature sender G42	125
1.6	Checking engine speed sender G28	128
1.7	Checking coolant temperature sender G62	130
1.8	Checking control unit power supply	132
1.9	Checking knock control limit	134
1.10	Checking knock sensors	135
1.11	Checking Hall sender G40	137
1.12	Checking misfiring detection	140