

Contents

01 - Self-diagnosis	1
1 Self-diagnosis of Motronic system	1
1.1 Self-diagnosis of Motronic system	1
1.2 Technical data of self-diagnosis	1
1.3 Safety precautions	1
1.4 Connecting vehicle diagnostic, testing and information system VAS 5051 and select functions	1
2 Interrogating and erasing fault memory	5
2.1 Interrogating and erasing fault memory	5
2.2 Interrogating fault memory	5
2.3 Erase fault memory	6
2.4 End of output	7
2.5 Fault table	8
2.6 Fault codes 16395 - 17624	8
2.7 Fault codes 17633 - 18261	14
3 Final control diagnosis	20
3.1 Final control diagnosis	20
4 Basic setting	24
4.1 Basic setting	24
5 Encoding control unit	26
5.1 Encoding control unit	26
5.2 Encoding table	28
6 Reading measured value block	28
6.1 Reading measured value block	28
7 Readiness code	30
7.1 Readiness code	30
7.2 Reading out readiness code	31
7.3 Producing the readiness code	33
24 - Mixture preparation, Injection	45
1 Servicing Motronic injection system	45
1.1 Servicing Motronic injection system	45
1.2 Safety precautions	45
1.3 Rules for cleanliness	45
1.4 Technical data	46
1.5 Fitting locations overview	47
1.6 Dismantling and assembling air cleaner	58
1.7 Wiring and component check with test box V.A.G 1598/31	59
1.8 Procedure following interruption of voltage supply	64
1.9 Replacing engine control unit	64
1.10 Exhaust warning lamp -K83 in dash panel insert	73
1.11 Checking exhaust warning lamp -K83	73
1.12 Checking idling speed	74
1.13 Checking system pressure, fuel pressure regulator and holding pressure	77
1.14 Checking injectors	81
1.15 Dismantling and assembling fuel rail with injectors	85
1.16 Removing and installing injectors	89
1.17 Checking injection quantity, leak tightness and spray pattern of injectors	91
1.18 Checking pump relay -J17 and actuation	93
1.19 Checking air mass meter -G70	97
1.20 Checking intake air system for leaks (unmetered air)	101
2 Checking lambda control	104
2.1 Checking lambda control	104



2.2	Checking lambda probe and lambda control upstream of catalytic converter	104
2.3	Checking lambda probe ageing upstream of catalytic converter	110
2.4	Checking lambda probe heater -Z19 for lambda probe upstream of catalytic converter	112
2.5	Checking lambda probe and lambda control downstream of catalytic converter	115
2.6	Checking lambda probe heater -Z29 for lambda probe downstream of catalytic converter	122
2.7	Removing and installing lambda probe	125
3	Checking fuel tank breather	127
3.1	Checking fuel tank breather	127
3.2	Checking activated charcoal filter system solenoid valve 1 -N80	127
4	Checking electronic engine power control (electronic throttle)	130
4.1	Checking electronic engine power control (electronic throttle)	130
4.2	Function of the electronic throttle system	130
4.3	Fault lamp for electronic throttle in dash panel insert	131
4.4	Checking electronic throttle control fault lamp -K132	132
4.5	Checking throttle valve control part -J338	132
4.6	Performing adaption of throttle valve control part	132
4.7	Checking throttle valve for dirt	135
4.8	Cleaning throttle valve control part	138
4.9	Checking angle sender for throttle valve actuator	139
4.10	Checking accelerator position sender	143
4.11	Checking brake light switch and brake pedal switch	147
4.12	Checking clutch pedal switch -F36	151
5	Checking auxiliary signals	155
5.1	Checking auxiliary signals	155
5.2	Checking engine speed signal	155
5.3	Checking vehicle speed signal	156
5.4	Checking air conditioner compressor shut-off	158
5.5	Checking power steering pressure switch -F88	160
5.6	Checking wiring for crash signal	162
5.7	Checking consumption signal for vehicle computer	163
5.8	Checking fuel level signal wiring	163
5.9	Checking the data exchange between engine control unit and other CAN-capable control units	163
6	Vacuum diagram	168
6.1	Vacuum diagram	168
28	- Ignition system	173
1	Checking ignition system	173
1.1	Checking ignition system	173
1.2	General notes on ignition system	173
1.3	Safety precautions	173
1.4	Technical data	173
1.5	Checking ignition coils with output stages	174
1.6	Checking power supply relay for Motronic system -J271	179
1.7	Checking intake air temperature sender -G42	185
1.8	Checking engine speed sender -G28	189
1.9	Checking coolant temperature sender -G62	191
1.10	Checking control unit power supply	195
1.11	Checking knock control stop	196
1.12	Checking knock sensors	199
1.13	Checking Hall sender -G40	201
1.14	Checking misfire detection	204