

Contents

00 - Technical data	1
1 Technical data	1
1.1 Technical data	1
1.2 Engine number	1
1.3 Engine data	1
10 - Removing and installing engine	3
1 Removing and installing engine - Vehicles with front-wheel drive	3
1.1 Removing and installing engine - Vehicles with front-wheel drive	3
1.2 Removing	4
1.3 Separating engine from gearbox - vehicles with manual gearbox	19
1.4 Detaching engine from gearbox - vehicles with automatic gearbox	20
1.5 Attaching engine to repair stand	22
1.6 Installing	24
2 Removing and installing engine -vehicles with four-wheel drive-	32
2.1 Removing and installing engine -vehicles with four-wheel drive-	32
2.2 Removing	33
2.3 Detaching engine from gearbox.	49
2.4 Attaching engine to repair stand	50
2.5 Installing	51
3 Adjusting engine mounting	57
3.1 Adjusting engine mounting	57
13 - Crankshaft group	62
1 Dismantling and assembling engine	62
1.1 Dismantling and assembling engine	62
1.2 Removing and installing ribbed belt	62
1.3 Removing and installing vibration damper	66
1.4 Removing and installing ribbed belt	68
1.5 Removing and installing bracket for auxiliary assemblies	70
2 Toothed belt drive with hydraulically damped tensioning roller - Assembly overview	74
2.1 Toothed belt drive with hydraulically damped tensioning roller - Assembly overview	74
2.2 Removing and installing toothed belt	79
3 Toothed belt drive with friction-absorbing tensioning roller - Assembly overview	91
3.1 Toothed belt drive with friction-absorbing tensioning roller - Assembly overview	91
3.2 Removing and installing toothed belt	96
4 Removing and installing sealing flanges and flywheel/drive plate	108
4.1 Removing and installing sealing flanges and flywheel/drive plate	108
4.2 Replacing crankshaft oil seal on pulley end	111
4.3 Removing and installing front sealing flange	114
4.4 Removing and installing rear sealing flange	117
4.5 Removing and installing dual mass flywheel/drive plate	120
5 Removing and installing crankshaft	124
5.1 Removing and installing crankshaft	124
5.2 Crankshaft dimensions	129
5.3 Removing and installing chain sprocket	129
6 Dismantling and assembling pistons and conrods	130
6.1 Dismantling and assembling pistons and conrods	130
6.2 Different conrods	130
6.3 Cracked conrods	131
6.4 Sawn conrods	135
6.5 Checking piston projection at TDC	143
6.6 Piston and cylinder dimensions	144



15 - Cylinder head, Valve gear	145
1 Cylinder head - overview	145
1.1 Cylinder head - overview	145
1.2 Removing and installing cylinder head cover	151
2 Removing and installing cylinder head -vehicles with front-wheel drive-	154
2.1 Removing and installing cylinder head -vehicles with front-wheel drive-	154
2.2 Removing cylinder head	155
2.3 Installing cylinder head	166
3 Removing and installing cylinder head -Vehicles with four-wheel drive-	170
3.1 Removing and installing cylinder head -Vehicles with four-wheel drive-	170
3.2 Removing cylinder head	171
3.3 Installing cylinder head	181
4 Removing and installing intake manifold	185
4.1 Removing and installing intake manifold	185
4.2 Intake manifold - assembly overview -engine codes ASZ, ATD-	186
4.3 Removing and installing intake manifold -engine codes ASZ, ATD-	187
4.4 Intake manifold - assembly overview -engine code AXR-	190
4.5 Removing and installing intake manifold -engine code AXR-	194
4.6 Checking compression	198
5 Servicing valve gear	200
5.1 Servicing valve gear	200
5.2 Checking camshaft axial play	207
5.3 Removing and installing oil seal for camshaft	209
5.4 Removing and installing camshaft	212
5.5 Checking hydraulic bucket tappets	218
5.6 Replacing valve stem seals	219
5.7 Reworking valve seats	222
5.8 Checking valve guides	224
5.9 Checking valves	225
17 - Lubrication	226
1 Removing and installing parts of the lubrication system	226
1.1 Removing and installing parts of the lubrication system	226
1.2 Part I	227
1.3 Part II	231
1.4 Removing and installing oil pan	235
1.5 Removing and installing oil pump	239
1.6 Checking oil pressure and oil pressure switch	240
1.7 Engine oil	242
1.8 Checking oil level	242
19 - Cooling system	244
1 Removing and installing parts of the cooling system	244
1.1 Removing and installing parts of the cooling system	244
1.2 Parts of the cooling system -engine codes ASZ, ATD-	245
1.3 Parts of the cooling system -engine code AXR-	247
1.4 Draining and filling cooling system	250
1.5 Removing and installing coolant pump	254
1.6 Removing and installing, checking coolant thermostat	255
1.7 Removing and installing coolant pipe	256
1.8 Radiator and radiator fan - Assembly overview	261
1.9 Removing and installing radiator	264
1.10 Checking cooling system for leaks	268
21 - Charging	270

1	Checking charge air system with turbocharger	270
1.1	Checking charge air system with turbocharger	270
1.2	Test requirements for checking exhaust turbocharging	272
1.3	Effects of leakages on charge air system	272
1.4	Checking turbocharger and boost pressure control system	273
1.5	Checking boost pressure	273
1.6	Checking linkage and vacuum unit for boost pressure control	276
1.7	Checking vacuum pressure actuation to turbocharger	278
1.8	Connection diagram for boost pressure control -engine codes ASZ, ATD-	281
1.9	Connection diagram for boost pressure control -engine code AXR-	283
1.10	Hose connection diagram for solenoid valves at bulkhead	285
1.11	Checking solenoid valve for boost pressure limitation -N75	287
1.12	Checking intake manifold pressure sender -G71	289
2	Servicing charge air system with turbocharger	292
2.1	Servicing charge air system with turbocharger	292
2.2	Rules for cleanliness	292
2.3	Removing and installing turbocharger - overview	293
2.4	Removing and installing turbocharger - vehicles with front-wheel drive -engine code AXR-	299
2.5	Removing and installing turbocharger - vehicles with front-wheel drive -engine coded ASZ, ATD-	306
2.6	Removing and installing turbocharger - vehicles with four-wheel drive -engine code ASZ-	311
2.7	Removing and installing parts of charge air cooling system	316
2.8	Removing and installing charge air cooler (intercooler)	319
26	Exhaust system	323
1	Removing and installing parts of exhaust system	323
1.1	Removing and installing parts of exhaust system	323
2	Exhaust system -vehicles with front-wheel drive-	324
2.1	Exhaust system -vehicles with front-wheel drive-	324
2.2	Assembly overview	324
2.3	Separating intermediate pipe and rear silencer	329
2.4	Removing and installing front exhaust pipe with catalytic converter	330
2.5	Stress free alignment of exhaust system	331
2.6	Checking exhaust system for leaks	333
3	Exhaust system -vehicles with four-wheel drive-	334
3.1	Exhaust system -vehicles with four-wheel drive-	334
3.2	Assembly overview	334
3.3	Separating centre and rear silencers	338
3.4	Removing and installing front exhaust pipe	340
3.5	Stress free alignment of exhaust system	346
3.6	Check exhaust system for leaks	346
4	Exhaust gas recirculation system	346
4.1	Exhaust gas recirculation system	346
4.2	Parts of the exhaust gas recirculation system - assembly overview -engine codes ASZ, ATD-	347
4.3	Parts of the exhaust gas recirculation system - assembly overview -engine code AXR-	349
4.4	Connection diagram for exhaust gas recirculation -engine codes ASZ, ATD-	353
4.5	Connection diagram for exhaust gas recirculation -engine code AXR-	355
4.6	Hose connection diagram for solenoid valves at bulkhead	357
4.7	Checking mechanical EGR valve	359
4.8	Checking exhaust gas recirculation	360
4.9	Checking EGR valve -N18	362
4.10	Cooling for exhaust gas recirculation -engine code AXR-	366
4.11	Checking exhaust gas recirculation changeover	367
4.12	Checking valve 2 for exhaust gas recirculation -N213	368