

Contents

20	Fuel supply system	1
	1 General repair instructions	1
	1.1 Safety precautions	1
	1.2 Rules for cleanliness	2
	1.3 Test conditions	3
	1.4 Contact corrosion!	3
	2 Fuel tank - vehicles with front-wheel drive	4
	2.1 Fuel tank with attached components - exploded view	4
	2.2 Draining fuel tank	7
	2.3 Removing and installing fuel tank with attached components	8
	3 Fuel delivery unit and fuel gauge sender - vehicles with front-wheel drive	12
	3.1 Fuel delivery unit and fuel gauge sender - exploded view	12
	3.2 Checking fuel pump (electrical test)	13
	3.3 Checking fuel pump delivery rate	15
	3.4 Removing and installing fuel delivery unit	17
	3.5 Checking fuel gauge sender G	19
	3.6 Removing and installing fuel gauge sender G	21
	4 Fuel tank - vehicles with four-wheel drive	22
	4.1 Fuel tank with attached components - exploded view	22
	4.2 Draining fuel tank	25
	4.3 Removing and installing fuel tank with attached components	26
	5 Fuel delivery unit and fuel gauge senders - vehicles with four-wheel drive	30
	5.1 Fuel delivery unit, fuel gauge senders and suction-jet pump - exploded view	30
	5.2 Checking fuel pump (electrical test)	32
	5.3 Checking fuel pump delivery rate	35
	5.4 Removing and installing fuel delivery unit	36
	5.5 Checking fuel gauge sender G / G169	40
	5.6 Removing and installing fuel gauge sender G	41
	5.7 Removing and installing fuel gauge sender 2 G169	42
	5.8 Suction-jet pump: operation	42
	5.9 Removing and installing suction-jet pump	43
	6 Activated charcoal filter	45
	6.1 Activated charcoal filter system - exploded view	45
	7 Accelerator mechanism - vehicles with mechanical accelerator mechanism	46
	7.1 Mechanical accelerator mechanism - exploded view	46
	7.2 Removing and installing throttle cable	47
	7.3 Adjusting throttle cable	48
	7.4 Checking adjustment - vehicles with automatic gearbox	48
	8 Accelerator mechanism - vehicles with electronic power control (electronic throttle)	50
	8.1 Accelerator pedal module (left-hand drive vehicles) - exploded view	50
	8.2 Removing and installing accelerator pedal module with accelerator position sender G79 / G185 - left-hand drive vehicles	51
	8.3 Performing kick-down adaption - vehicles with automatic gearbox	51
	8.4 Accelerator mechanism on right-hand drive vehicles without accelerator pedal module - exploded view	53
	8.5 Adjusting accelerator position sender G79 - right-hand drive vehicles without accelerator pedal module	54