

Contents

20 - Fuel supply system	1
1 Notes for working on fuel supply system	1
1.1 Notes for working on fuel supply system	1
1.2 Safety precautions when working on the fuel supply system	1
1.3 Rules for cleanliness	1
2 Fuel supply system - front-wheel drive	2
2.1 Fuel supply system - front-wheel drive	2
2.2 Overview of components: fuel tank with attachments	3
2.3 Draining fuel tank	9
2.4 Removing and installing fuel tank with attachments	12
2.5 Overview of components: fuel take-off unit and fuel gauge sender	17
2.6 Removing and installing fuel take-off unit	20
2.7 Testing fuel gauge sender -G	23
2.8 Removing and installing fuel gauge sender -G	25
3 Fuel supply system - four-wheel drive	25
3.1 Fuel supply system - four-wheel drive	25
3.2 Overview of components: fuel tank with attachments	26
3.3 Draining fuel tank	32
3.4 Removing and installing fuel tank with attachments	38
3.5 Overview of components: fuel delivery unit and fuel gauge senders	43
3.6 Removing and installing fuel delivery unit	47
3.7 Testing fuel gauge sender	51
3.8 Removing and installing fuel gauge sender I (-G)	53
3.9 Removing and installing fuel gauge sender II -G169	54
3.10 Suction jet pump: operation	54
3.11 Removing and installing suction jet pump	55
4 Servicing tandem pump	56
4.1 Servicing tandem pump	56
4.2 Testing tandem pump	56
4.3 Removing and installing tandem pump	58
5 Fuel cooler	61
5.1 Fuel cooler	61
5.2 Removing and installing fuel cooler	61
6 Servicing fuel filter	63
6.1 Servicing fuel filter	63
6.2 Overview of fuel filter components	63
6.3 Removing and installing fuel filter	65
7 Bleeding fuel system	67
7.1 Bleeding fuel system	67
7.2 Vehicles with distributor-type injection pump	67
7.3 Vehicles with unit injector engine	69
8 Checking fuel system for leaks	69
8.1 Checking fuel system for leaks	69
8.2 Vehicles with distributor-type injection pump	70
8.3 Vehicles with unit injector engine	73
9 Servicing accelerator linkage - Vehicles with accelerator pedal position sender	77
9.1 Servicing accelerator linkage - Vehicles with accelerator pedal position sender	77
10 Servicing accelerator linkage - Vehicles with accelerator pedal module	79
10.1 Servicing accelerator linkage - Vehicles with accelerator pedal module	79
10.2 Removing and installing accelerator pedal module with accelerator position sender	80