

001 - Basic equipment	1-19
1. Basic equipment	1
2. Earth points, earth connections	2
3. Earth connections, battery, main fuse box, alternator	3
4. Ignition/starter switch, X-contact relief relay, starter inhibitor and reversing light relay	4
5. Light switch, left steering column switch	5
6. Illumination regulators - switches and instruments, windscreen washer/wiper system, headlight range control (not for headlight for gaseous discharge light)	6
7. Right steering column switch, windscreen washer/wiper system, rear wiper	7
8. Left tail light, left tail light, rear left turn signal, left brake light, left fog light bulb	8
9. Right tail light, rear right turn signal, right brake light, right reversing light, high level brake light	9
10. Signal horn, cigarette lighter, ashtray illumination bulb, dash panel vent illumination bulb, left and right washer jet heater element	10
11. Fuses	11
12. Fuses, headlight	12
13. Fuses, diagnostic connector, preparation for radio	13
14. Turn signal system and hazard warning lights system	14
15. Right footwell light, door contact switch, central locking motor	15
16. Combi-processor in dash panel insert, handbrake warning switch, warning lamps, oil level and oil temperature sender, oil pressure switch	16
17. Combi-processor in dash panel insert, ABS control unit with EDL, operating and display unit for air conditioning system, fuel gauge, coolant temperature gauge	17
18. Immobilizer reader coil, warning lamps, belt switch, coolant shortage indicator switch, brake pad wear sender	18
19. Fresh air blower without air conditioning system, heated rear window	19
002 - 1.6 litre fuel injection engine (Simos), 75 kW, 4-cylinder, engine code AVU	20-32
1. 1.6 litre fuel injection engine (Simos), 75 kW, 4-cylinder, engine code AVU	20-22
2. Battery, starter, alternator, fuses	23
3. Hall sender, injectors, intake manifold change-over valve, fuel pump relay, coolant temperature senders	24
4. Engine speed sender, Simos control unit, thermostat for engine cooling, knock sensor	25
5. Simos control unit, throttle valve control unit, exhaust gas recirculation valve	26
6. Simos control unit, brake light switch, accelerator pedal position senders, cruise control system switch, clutch pedal switch	27
7. Simos control unit, lambda probes, secondary air inlet valve, control and display unit for air conditioner/Climatronic	28
8. Simos control unit, ignition coil, secondary air system	29
9. Simos control unit, coolant temperature sender, radiator fan control unit, heating for passenger compartment	30
10. Fuses, fuel gauge sender, fuel pump, speedometer sender	31
11. Dash panel insert	32
003 - 1.8 litre fuel injection engine (Motronic), 154 kW, 4-cylinder, engine code AMK	33-45
1. 1.8 litre fuel injection engine (Motronic), 154 kW, 4-cylinder, engine code AMK	33
2. 1.8 litre fuel injection engine (Motronic), 154 kW, 4-cylinder, engine code AMK	34
3. Battery, starter, alternator, ignition/starter switch, fuses	35
4. Motronic control unit, fuel pump relay, injectors, solenoid valves, brake servo control unit, vacuum pump for brakes	36
5. Motronic control unit, knock sensors, engine speed sender, coolant temperature senders	37
6. Motronic control unit, throttle valve control unit, secondary air system, intake air temperature sender	38
7. Motronic control unit, accelerator pedal position senders, brake light switch, clutch pedal switch, cruise control system switch	39
8. Motronic control unit, air mass meter, charge air pressure sender, exhaust gas temperature sender -1-, Hall sender	40
9. Motronic control unit, lambda probes, solenoid valves	41
10. Motronic control unit, ignition coils	42
11. Motronic control unit, Motronic current supply relay, fuses	43
12. Radiator fan thermo-switches, fuel pump, fuses, coolant pump control unit	44
13. Dash panel insert, oil pressure switch, oil level/oil temperature sender, speedometer sender	45
004 - Anti-lock brake system (ABS) MK60 with electronic differential lock (EDL) and traction control system (ASR/TCS)	46-50
1. Anti-lock brake system (ABS) MK60 with electronic differential lock (EDL) and traction control system (ASR/TCS)	46-47
2. Battery, starter, speed sensors, ABS with EDL control unit	48
3. ABS with EDL control unit. traction control system switch. longitudinal acceleration sender	49

4. ABS with EDL control unit, ABS valves, differential lock valve 1, dash panel insert	50
005 - Driver information system	51-56
1. Driver information system	51
2. Fuses, left and right twin filament bulb	52
3. Brake light, tail light, fuses	53
4. On-board computer with auto-check system, door contact switch, dash panel insert	54
5. On-board computer with auto-check system, windscreen washer fluid level display, door contact switch	55
6. On-board computer with auto-check system, infotainment CAN bus, radio	56
006 - Seat heating (models with and without air conditioner)	57-59
1. Seat heating (models with and without air conditioner)	57
2. Voltage supply, seat heating on driver's side	58
3. Seat heating on front passenger's side	59
007 - Telephone	60-65
1. Telephone	60
2. Voltage supply, aerial connection	61
3. Telephone handset and hands-free microphone	62
4. Voice control system without radio	63
5. Voice control system with Audi radio	64
6. Voice control system with Bose sound system	65
008 - Anti-lock brake system MK60 (ABS) with electronic stability program (ESP)	66-71
1. Anti-lock brake system MK60 (ABS) with electronic stability program (ESP)	66-67
2. Voltage supply, brake light switch	68
3. Speed sensors, lateral acceleration sender, brake pressure sender -1-, yaw rate sender, longitudinal acceleration sender, ABS hydraulic pump	69
4. ABS hydraulic unit, switch valves	70
5. Steering angle sender, traction control system switch, warning lamps, dash panel insert	71
009 - Telematics (telephone with emergency call function)	72-80
1. Telematics (telephone with emergency call function)	72
2. Voltage supply, telephone/telematics control unit	73
3. Telephone/telematics control unit, telephone handset, fax unit	74
4. Telephone/telematics control unit, telephone microphone, additional loudspeaker for telematics	75
5. Telephone/telematics control unit, voice control system without radio, with radio or radio navigation system	76
6. Telephone/telematics control unit, voice control system with navigation system	77
7. Telephone/telematics control unit, aerials	78
8. Auto-check system, telephone/telematics control unit, telematics operating unit, dash panel insert	79
9. Auto-check system, function selection switch	80
010 - 1.9 litre turbo-diesel engine, 74 kW, TDI unit injector, 4-cylinder, engine code ATD	81-91
1. 1.9 litre turbo-diesel engine, 74 kW, TDI unit injector, 4-cylinder, engine code ATD	81
2. 1.9 litre turbo-diesel engine, 74 kW, TDI unit injector, 4-cylinder, engine code ATD	82
3. Battery, starter, alternator, main fuse box/battery	83
4. Fuse box, ignition/starter switch	84
5. Relay and control unit for diesel direct injection system, glow plugs (engine), relay for glow plugs, coolant heater elements	85
6. Intake manifold pressure sender, intake manifold temperature sender, air mass meter, diesel direct injection system control unit, valves for exhaust gas recirculation and intake manifold flap, charge pressure control solenoid valve	86
7. Coolant temperature senders, engine speed sender, fuel temperature sender, Hall sender, diesel direct injection system control unit	87
8. Kick-down switch, idling switch, accelerator pedal position sender, fuel pump relay, diesel direct injection system control unit, unit injector solenoid valves (cylinders No. 1 - 4)	88
9. Cruise control system switch, clutch pedal switch, cruise control system brake pedal switch (diesel direct injection system), diesel direct injection system control unit, heater element (crankcase breather)	89
10. Radiator fan thermo-switches, diesel direct injection system control unit, radiator fan run-on relay, radiator fan	90
11. Combi-processor in dash panel insert, fuel pump	91
011 - Air conditioner	92-103
1. Air conditioner	92-93
2. Voltage supply	94
3. Ambient temperature sensor, sunlight penetration photo sensor, fresh air blower control unit	95
4. Two-way valve for coolant cut-off valve, glove box light, heated rear window	96
5. Combi-processor in dash panel insert	97
6. Temperature flap control motor. footwell/defroster flap control motor	98

7. Central flap control motor, air flow flap control motor	99
8. Radiator fan control unit, Motronic control unit, diesel direct injection system control unit, Simos control unit	100
9. High pressure sender, continued coolant circulation pump	101
10. Battery, radiator fan thermo-switches	102
11. Radiator fan, radiator fan - right, air conditioning system magnetic coupling	103
012 - Radio sound systems	104-116
1. Radio sound systems	104
2. Voltage supply for radio sound systems and provision for radio	105
3. Dash panel insert, multi-function steering wheel to radios and provision for radio	106
4. Muting to radios and provision for radio	107-108
5. CD changer	109
6. Active loudspeakers front	110
7. Active loudspeakers rear	111
8. Bose sound system	112
9. Bose sound system	113
10. Loudspeakers to provision for radio	114
11. Aerials for radio Chorus and radio Concert	115
12. Aerials for radio Symphony	116
013 - Radio sound systems	117-130
1. Radio sound systems	117
2. Fuses	118
3. Auto-check system, combi-processor in dash panel insert	119
4. Auto-check system and multi-function steering wheel	120
5. Radio muting	121
6. CD changer	122
7. Front and rear loudspeakers	123
8. Rear active loudspeakers	124
9. Amplifier, bass loudspeaker on models with Bose sound system	125
10. Amplifier on models with Bose sound system	126
11. Roof aerial connection for radio Chorus, Concert, Symphony, on models with and without telephone, telematics or navigation system and auxiliary heater	127
12. Roof aerial connection for radio Chorus, Concert, Symphony, on models with auxiliary heater and telephone, telematics and navigation system	128
13. Aerials for radio Concert, Symphony with rear window aerials and aerial selection control unit	129
14. Aerials for radio Concert, Symphony with roof aerial and aerial selection control unit	130
014 - 5-speed automatic gearbox with Tiptronic (09A)	131-137
1. 5-speed automatic gearbox with Tiptronic (09A)	131-132
2. Fuse box, automatic gearbox control unit, starter inhibitor and reversing light relay	133
3. Automatic gearbox control unit, multi-function switch, gearbox speed senders	134
4. Automatic gearbox control unit, gearbox oil temperature sender, solenoid valves	135
5. Automatic gearbox control unit, brake pressure switch, Tiptronic switch, selector lever lock solenoid	136
6. Automatic gearbox control unit, combi-processor in dash panel insert	137
015 - Steering wheel with Tiptronic	138-141
1. Steering wheel with Tiptronic	138-139
2. Fuse box, operating unit in steering wheel, airbag coil connector/return spring with slip ring, horn plate, dual tone horn relay, airbag igniter - driver's side	140
3. Operating unit in steering wheel, Tiptronic switch, automatic gearbox control unit, +/- display illumination	141
016 - Multi-function steering wheel	142-148
1. Multi-function steering wheel	142-143
2. Fuses, operating unit in steering wheel, multi-function steering wheel control unit	144
3. Operating unit in steering wheel, airbag coil connector/return spring with slip ring, horn plate, dual tone horn relay, airbag igniter - driver's side, multi-function steering wheel control unit	145
4. Multi-function steering wheel control unit, automatic gearbox control unit, Tiptronic switch	146
5. Combi-processor in dash panel insert, multi-function steering wheel control unit	147
6. Auto-check system, combi-processor in dash panel insert, radio, earth connections	148
017 - Electric seat adjustment / seat heating for Recaro sport seats	149-157
1. Electric seat adjustment / seat heating for Recaro sport seats	149-150
2. Backrest adjustment and lumbar support adjustment for driver's seat	151
3. Height adjustment for driver's seat, side airbag	152
4. Backrest adjustment and lumbar support adjustment for front passenger's seat	153
5. Height adjustment for front passenger's seat, side airbag	154
6. Adjuster for heated driver's seat and front passenger's seat	155
7. Seat heating for driver's seat	156

8. Seat heating for front passenger's seat	157
018 - Headlights with gas discharge lamps, automatic headlight range control and headlight washer system, From model year 2001	158-161
1. Headlights with gas discharge lamps, automatic headlight range control and headlight washer system, From model year 2001	158
2. Headlights with gas discharge lamps, fuse box, bulb monitoring device	159
3. Control unit for headlight range control, vehicle level senders, headlight range control motors	160
4. Headlight washer system	161
019 - Diagnostic connector	162-163
1. Diagnostic connector	162
2. Diagnostic connector, ignition/starter switch, fuses	163
020 - Central locking system with interior lights switch-off delay and anti-theft alarm system with interior monitoring	164-171
1. Central locking system with interior lights switch-off delay and anti-theft alarm system with interior monitoring	164-165
2. Central locking system with interior lights switch-off delay and anti-theft alarm system with interior monitoring	166
3. Central locking system with interior lights switch-off delay and anti-theft alarm system with interior monitoring	167
4. Central locking system with interior lights switch-off delay and anti-theft alarm system with interior monitoring	168
5. Central locking system with interior lights switch-off delay and anti-theft alarm system with interior monitoring	169
6. Central locking system with interior lights switch-off delay and anti-theft alarm system with interior monitoring	170
7. Central locking system with interior lights switch-off delay and anti-theft alarm system with interior monitoring	171
021 - 1.6 litre fuel injection engine (Simos), 75 kW, 4-cylinder, engine code AVU	172-185
1. 1.6 litre fuel injection engine (Simos), 75 kW, 4-cylinder, engine code AVU	172-174
2. Battery, starter, alternator, fuses	175
3. Hall sender, injectors, intake manifold change-over valve, fuel pump relay, coolant temperature senders	176
4. Engine speed sender, Simos control unit, thermostat for engine cooling, knock sensor	177
5. Simos control unit, throttle valve control unit, exhaust gas recirculation valve	178
6. Simos control unit, accelerator pedal position senders, cruise control system switch, clutch pedal switch, brake light switch	179
7. Simos control unit, lambda probes, secondary air inlet valve, control and display unit for air conditioner/Climatronic	180
8. Simos control unit, ignition coil, Hall sender, power assisted steering pressure switch	181
9. Simos control unit, brake servo control unit, vacuum pump for brakes, secondary air pump motor, secondary air pump relay	182
10. Simos control unit, coolant temperature sender, heating for passenger compartment, radiator fan control unit	183
11. Fuses, fuel gauge sender, fuel pump	184
12. Dash panel insert, oil pressure switch, speedometer sender (Hall sender, on gearbox) oil level/oil temperature sender	185
022 - 1.8 litre fuel injection engine (Motronic), 92 kW, 4-cylinder, engine code APG	186-198
1. 1.8 litre fuel injection engine (Motronic), 92 kW, 4-cylinder, engine code APG	186
2. 1.8 litre fuel injection engine (Motronic), 92 kW, 4-cylinder, engine code APG	187
3. Battery, starter, alternator, ignition/starter switch, fuses	188
4. Motronic control unit, fuel pump relay, injectors, solenoid valves	189
5. Motronic control unit, knock sensors, engine speed sender, coolant temperature senders	190
6. Motronic control unit, throttle valve control unit, power assisted steering pressure switch, Hall sender, exhaust gas recirculation valve	191
7. Motronic control unit, accelerator pedal position senders, brake light switch, clutch pedal switch, cruise control system switch	192
8. Motronic control unit, air mass meter, activated charcoal filter system solenoid valve 1, lambda probes	193
9. Motronic control unit, Motronic current supply relay	194
10. Motronic control unit, brake servo control unit, vacuum pump for brakes, secondary air pump motor, secondary air pump relay	195
11. Motronic control unit, ignition coils, fuses	196
12. Fuses, fuel pump	197
13. Dash panel insert, oil pressure switch, oil level/oil temperature sender, speedometer sender	198
023 - 1.8 litre fuel injection engine (Motronic), 154 kW, 4-cylinder, engine code AMK	199-213
1. 1.8 litre fuel injection engine (Motronic). 154 kW. 4-cylinder. engine code AMK	199

2. 1.8 litre fuel injection engine (Motronic), 154 kW, 4-cylinder, engine code AMK	200
3. Battery, starter, alternator, ignition/starter switch, fuses	201
4. Motronic control unit, fuel pump relay, injectors, solenoid valves	202
5. Motronic control unit, knock sensors, engine speed sender, coolant temperature senders	203
6. Motronic control unit, throttle valve control unit, secondary air system, intake air temperature sender	204
7. Motronic control unit, accelerator pedal position senders, brake light switch, clutch pedal switch, cruise control system switch	205
8. Motronic control unit, air mass meter, charge air pressure sender, exhaust gas temperature sender -1-, Hall sender	206
9. Motronic control unit, lambda probes, solenoid valves	207
10. Motronic control unit, ignition coils	208
11. Motronic control unit, secondary air pump, vacuum pump for brakes	209
12. Motronic control unit, Motronic current supply relay, fuses	210
13. Fuel pump, fuses	211
14. Radiator fan thermo-switch, coolant pump control unit	212
15. Dash panel insert, oil pressure switch, oil level/oil temperature sender, speedometer sender	213
024 - Basic equipment	214-234
1. Basic equipment	214
2. Earth points, earth connections	215
3. Earth connections, battery, main fuse box, alternator	216
4. Ignition/starter switch, X-contact relief relay, starter inhibitor and reversing light relay	217
5. Light switch, left steering column switch	218
6. Illumination regulators - switches and instruments, windscreen washer/wiper system, headlight range control (not for headlight for gaseous discharge light)	219
7. Right steering column switch, windscreen washer/wiper system, rear wiper	220
8. Left tail light, left tail light, rear left turn signal, left brake light, left fog light bulb	221
9. Right tail light, rear right turn signal, right brake light, right reversing light, high level brake light	222
10. Signal horn, cigarette lighter, ashtray illumination bulb, dash panel vent illumination bulb, left and right washer jet heater element	223
11. Fuses	224
12. Fuses, headlight	225
13. Fuses, diagnostic connector, preparation for radio	226
14. Fuses, glove compartment light, number plate light	227
15. Turn signal system and hazard warning lights system	228
16. Right footwell light, door contact switch, central locking motor	229
17. Luggage compartment light, door contact switch, central locking motor, left footwell light	230
18. Combi-processor in dash panel insert, handbrake warning switch, warning lamps, oil level and oil temperature sender, oil pressure switch	231
19. Combi-processor in dash panel insert, ABS control unit with EDL, operating and display unit for air conditioning system, fuel gauge, coolant temperature gauge	232
20. Immobilizer reader coil, warning lamps, belt switch, coolant shortage indicator switch, brake pad wear sender	233
21. Fresh air blower without air conditioning system, heated rear window	234
025 - 1.6 litre fuel injection engine (Simos), 75 kW, 4-cylinder, engine code AVU	235-249
1. 1.6 litre fuel injection engine (Simos), 75 kW, 4-cylinder, engine code AVU	235-238
2. Battery, starter, alternator, fuses	239
3. Injectors, intake manifold change-over valve, fuel pump relay, coolant temperature senders	240
4. Engine speed sender, Simos control unit, thermostat for engine cooling, knock sensor	241
5. Simos control unit, throttle valve control unit, exhaust gas recirculation valve	242
6. Simos control unit, accelerator pedal position senders, cruise control system switch, clutch pedal switch, brake light switch	243
7. Simos control unit, lambda probes, control and display unit for air conditioner/Climatronic	244
8. Simos control unit, ignition coil, Hall sender, power assisted steering pressure switch	245
9. Simos control unit, brake servo control unit, vacuum pump for brakes, secondary air pump motor, secondary air pump relay	246
10. Simos control unit, coolant temperature sender, radiator fan control unit	247
11. Fuses, fuel gauge sender, fuel pump	248
12. Dash panel insert, oil pressure switch, speedometer sender (Hall sender, on gearbox) oil level/oil temperature sender	249
026 - 1.8 litre fuel injection engine (Motronic), 92 kW, 4-cylinder, engine code APG	250-263
1. 1.8 litre fuel injection engine (Motronic), 92 kW, 4-cylinder, engine code APG	250-252
2. Battery, starter, alternator, ignition/starter switch, fuses	253
3. Motronic control unit, fuel pump relay, injectors, solenoid valves	254
4. Motronic control unit, knock sensors, engine speed sender, coolant temperature senders	255

5. Motronic control unit, throttle valve control unit, power assisted steering pressure switch, Hall sender, exhaust gas recirculation valve	256
6. Motronic control unit, accelerator pedal position senders, brake light switch, clutch pedal switch, cruise control system switch	257
7. Motronic control unit, air mass meter, activated charcoal filter system solenoid valve 1, lambda probes	258
8. Motronic control unit, Motronic current supply relay	259
9. Motronic control unit, brake servo control unit, vacuum pump for brakes, secondary air pump motor, secondary air pump relay	260
10. Motronic control unit, ignition coils, fuses	261
11. Fuses, fuel pump	262
12. Dash panel insert, oil pressure switch, oil level/oil temperature sender, speedometer sender	263
027 - 1.8 litre fuel injection engine (Motronic), 154 kW, 4-cylinder, engine code AMK	264-280
1. 1.8 litre fuel injection engine (Motronic), 154 kW, 4-cylinder, engine code AMK	264-267
2. Battery, starter, alternator, ignition/starter switch, fuses	268
3. Motronic control unit, fuel pump relay, injectors, solenoid valves	269
4. Motronic control unit, knock sensors, engine speed sender, coolant temperature senders	270
5. Motronic control unit, throttle valve control unit, intake air temperature sender	271
6. Motronic control unit, accelerator pedal position senders, brake light switch, clutch pedal switch, cruise control system switch	272
7. Motronic control unit, charge air pressure sender, exhaust gas temperature sender -1-, Hall sender, air mass meter	273
8. Motronic control unit, lambda probes, solenoid valves	274
9. Motronic control unit, ignition coils	275
10. Motronic control unit, secondary air pump, vacuum pump for brakes	276
11. Motronic control unit, Motronic current supply relay, fuses	277
12. Fuel pump, fuses	278
13. Radiator fan thermo-switches, coolant pump control unit	279
14. Dash panel insert, oil pressure switch, oil level/oil temperature sender, speedometer sender	280
028 - 1.9 l - Diesel engine (74 kW - unit injectors - 4 cylinder), engine code ATD	281-292
1. 1.9 l - Diesel engine (74 kW - unit injectors - 4 cylinder), engine code ATD	281
2. Battery, starter, alternator, fuses	282
3. Fuses	283
4. Diesel direct injection system control unit, diesel direct injection system relay, glow plug relay, engine glow plugs, glow plugs, coolant	284
5. Diesel direct injection system control unit, air mass meter, intake manifold pressure sender, intake manifold temperature sender, solenoid valve	285
6. Diesel direct injection system control unit, coolant temperature sender, fuel temperature sender, Hall sender	286
7. Diesel direct injection system control unit, fuel pump relay, unit injector valves, accelerator position sender	287
8. Diesel direct injection system control unit, heater element (crankcase breather), cruise control system switch, brake pedal switch, clutch pedal switch	288
9. Diesel direct injection system control unit, radiator fan	289
10. Radiator fan control unit	290
11. Combi-processor in dash panel insert, oil pressure switch, fuel gauge sender, fuel pump (pre-supply pump)	291
12. Combi-processor in dash panel insert, speedometer sender, oil level and oil temperature sender	292
029 - 1.9 l - Diesel engine (74 kW - unit injectors - 4 cylinder), engine code AXR	293-303
1. 1.9 l - Diesel engine (74 kW - unit injectors - 4 cylinder), engine code AXR	293
2. Battery, starter, alternator, fuses	294
3. Fuses	295
4. Diesel direct injection system control unit, diesel direct injection system relay, glow plug relay, engine glow plugs, glow plugs, coolant	296
5. Diesel direct injection system control unit, air mass meter, solenoid valve, intake manifold flap motor	297
6. Diesel direct injection system control unit, coolant temperature sender, fuel temperature sender, intake manifold pressure sender, intake manifold temperature sender, Hall sender	298
7. Diesel direct injection system control unit, fuel pump relay, unit injector valves, accelerator position sender	299
8. Diesel direct injection system control unit, heater element (crankcase breather), cruise control system switch, brake pedal switch, clutch pedal switch	300
9. Diesel direct injection system control unit, radiator fan	301
10. Combi-processor in dash panel insert, diagnostic connector, oil pressure switch, fuel pump	302
11. Combi-processor in dash panel insert, speedometer sender, oil level and oil temperature sender, warnina lamps	303

030 - Airbags, side airbags and curtain airbags for driver's seat and front passenger's seat with belt tensioners	304-307
1. Airbags, side airbags and curtain airbags for driver's seat and front passenger's seat with belt tensioners	304
2. Airbag igniters and belt tensioners	305
3. Airbag disabling key switch on front passenger's side, curtain airbag igniters	306
4. Side airbag crash sensors, igniters for rear belt tensioners and side airbags	307
031 - Trailer towing attachment	308-313
1. Trailer towing attachment	308
2. Earth points and earth connections	309
3. Fuses	310
4. Rear left bulbs	311
5. Rear right bulbs and bulb check warning unit	312
6. Auto-check system, bulb check warning unit, left and right twin filament bulb	313
032 - Anti-lock brake system (ABS), traction control system (ASR/TCS), electronic differential lock (EDL) and electronic stability program (ESP) for MK60 control unit	314-320
1. Anti-lock brake system (ABS), traction control system (ASR/TCS), electronic differential lock (EDL) and electronic stability program (ESP) for MK60 control unit	314-315
2. Voltage supply, brake light switch	316
3. Speed sensors, lateral acceleration sender, brake pressure sender -1-, yaw rate sender, longitudinal acceleration sender, ABS hydraulic pump	317
4. ABS hydraulic unit, switch valves	318
5. Steering angle sender, ESP sensor unit	319
6. Traction control system switch, warning lamps, dash panel insert	320
033 - CAN bus wires	321-326
1. CAN bus wires	321
2. High bus and low bus in dash panel wiring harness	322
3. High bus and low bus, convenience CAN bus in dash panel wiring harness	323
4. Auto-check system, combi-processor in dash panel insert	324
5. Infotainment CAN bus, navigation CAN bus in dash panel wiring harness	325
6. Infotainment CAN bus in dash panel wiring harness	326
034 - Navigation system "NS LOW" (7Q9)	327-332
1. Navigation system "NS LOW" (7Q9)	327-328
2. Fuses	329
3. Radio muting on models with telephone/telematics	330
4. Navigation aerial (GPS), auto-check system, diagnostic connector, combi-processor in dash panel insert	331
5. Function selection switch II, auto-check system	332
035 - Fog lights	333-334
1. Fog lights	333
2. Fuses, front and rear fog light switch, fog light bulbs, twin filament bulbs for headlights	334
036 - Radio and navigation system RNS-D (7Q2)	335-348
1. Radio and navigation system RNS-D (7Q2)	335
2. Fuses	336
3. ABS control unit, reversing light switch	337
4. Telephone and telematics control unit and mobile telephone interface	338
5. Front and rear loudspeaker	339
6. Rear active loudspeaker with bass loudspeaker	340
7. Amplifier, bass loudspeaker with Bose sound system	341
8. Amplifier with Bose sound system	342
9. CD changer	343
10. Navigation system tuner for TV	344
11. Navigation system tuner for TV, navigation system interface	345
12. Auto-check system, combi-processor in dash panel insert	346
13. Aerial, aerial amplifier, aerial selection control unit, navigation system tuner for TV	347
14. Aerials, aerial amplifier, aerial selection control unit	348
037 - Daytime driving lights with fog lights	349-352
1. Daytime driving lights with fog lights	349-350
2. Lighting switch, fog lights, headlight dipper/flasher switch and rear fog light	351
3. Bulb monitoring device, fuses, side lights, twin filament bulbs	352
038 - Telephone	353-360
1. Telephone	353
2. Voltage supply, telephone/telematics control unit	354
3. Telephone/telematics control unit, telephone handset, fax unit	355
4. Telephone/telematics control unit, infotainment CAN bus, telephone microphone	356
5. Telephone/telematics control unit. voice control system without radio. with radio or radio	357

navigation system	
6. Telephone/telematics control unit, voice control system on models with navigation system	358
7. Telephone/telematics control unit, aerials	359
8. Auto-check system, telephone/telematics control unit, combi-processor in dash panel insert	360
039 - Central locking system with interior lights switch-off delay and anti-theft alarm system with interior monitoring	361-371
1. Central locking system with interior lights switch-off delay and anti-theft alarm system with interior monitoring	361-362
2. Earth connections	363
3. Ignition/starter switch, fuses, anti-theft alarm system control unit	364
4. Contact switches, anti-theft alarm system control unit, luggage compartment lights	365
5. Door contact switches, anti-theft alarm system control unit	366
6. Combi-processor in dash panel insert, anti-theft alarm system control unit	367
7. Interior monitor switch, ultra-sonic sensors, ultra-sonic sensor control unit, anti-theft alarm system control unit	368
8. Anti-theft alarm system contact switch, release button for rear lid lock cylinder, rear lid release motor	369
9. Door warning lamps control unit, door warning lamps	370
10. Left and right footwell light, left and right door warning lamp	371
040 - 1.9 litre diesel engine, TDI, 66 kW, 4-cylinder, engine code ALH	372-385
1. 1.9 litre diesel engine, TDI, 66 kW, 4-cylinder, engine code ALH	372-375
2. Starter, battery, alternator, fuses	376
3. Fuses	377
4. Diesel direct injection system relay, glow plugs - (engine), coolant heating elements, diesel direct injection system control unit	378
5. Air mass meter, charge pressure control solenoid valve, diesel direct injection system control unit, intake manifold flap change-over valve, exhaust gas recirculation valve	379
6. Fuel temperature sender and modulating piston movement sender, fuel shut-off valve, metering adjuster, diesel direct injection system control unit, commencement of injection valve	380
7. Accelerator pedal position sender, engine speed sender, needle lift sender, intake manifold pressure sender, intake manifold temperature sender, diesel direct injection system control unit	381
8. Brake pedal switch, heater element (crankcase breather), clutch pedal switch, cruise control system switch, diesel direct injection system control unit	382
9. Coolant temperature senders, radiator fan, diesel direct injection system control unit	383
10. Diagnostic connector, combi-processor in dash panel insert, fuel pump, fuel pump relay	384
11. Speedometer sender, oil level/oil temperature sender, oil pressure switch, combi-processor in dash panel insert, warning lamps	385
041 - 1.8 l Fuel injection engine (165 kW - Motronic - 4 cylinder), engine code BAM	386-398
1. 1.8 l Fuel injection engine (165 kW - Motronic - 4 cylinder), engine code BAM	386
2. Starter, battery, alternator, fuses	387
3. Motronic control unit, fuel pump relay, injectors, solenoid valve	388
4. Motronic control unit, knock sensor, engine speed sender, coolant temperature sender	389
5. Motronic control unit, throttle valve module, intake air temperature sender	390
6. Motronic control unit, accelerator position sender, brake light switch, clutch pedal switch, cruise control system switch	391
7. Motronic control unit, charge air pressure sender, exhaust temperature sender 1, Hall sender, air mass meter	392
8. Motronic control unit, lambda probes, active charcoal filter system solenoid valve 1	393
9. Motronic control unit, ignition coils	394
10. Motronic control unit, Motronic current supply relay, fuses	395
11. Fuel pump, fuses	396
12. Radiator fan thermal switch, coolant pump control unit	397
13. Dash panel insert, oil pressure switch, oil level and oil temperature sender, speedometer sender	398
042 - 4-speed automatic gearbox with selector lever lock (01N)	399-405
1. 4-speed automatic gearbox with selector lever lock (01N)	399-400
2. Selector lever lock solenoid, gear selector light bulb	401
3. Multi-function switch	402
4. Gearbox speed sender, gearbox oil temperature sender, vehicle speed sender	403
5. Starter inhibitor and reversing light relay	404
6. Combi-processor in dash panel insert	405
043 - Haldex coupling with four-wheel drive	406-407
1. Haldex coupling with four-wheel drive	406
2. Four-wheel drive control unit, ABS with EDL control unit (MK 60)	407
044 - Mobile phone	408-414
1. Mobile phone	408
2. Fuses. telephone microphone	409

3. Voice control system with and without radio	410
4. Voice control system with navigation system (RNS-D)	411
5. Voice control system with navigation system 'NS LOW'	412
6. Mobile telephone	413
7. Mobile telephone, telephone aerial, aerial amplifier for mobile telephone	414
045 - Central locking with interior light with switch-off delay, reading lights and illuminated vanity mirror	415-421
1. Central locking with interior light with switch-off delay, reading lights and illuminated vanity mirror	415
2. Driver side interior locking switch, fuses	416
3. Contact switch, luggage compartment light on left and right	417
4. Door contact switch, combi-processor in dash panel insert	418
5. Driver and front passenger side illuminated vanity mirror	419
6. Front and rear interior light	420
7. Door warning lamps control unit, front interior light, footwell lights, door warning lamp	421
046 - Central locking system with interior lights switch-off delay, reading lamps and illuminated vanity mirrors	422-433
1. Central locking system with interior lights switch-off delay, reading lamps and illuminated vanity mirrors	422-423
2. Ignition/starter switch, fuses	424
3. Contact switch in lock cylinder for tailgate anti-theft alarm system/central locking system, luggage compartment lights	425
4. Door contact switches	426
5. Combi-processor in dash panel insert	427
6. Interior locking switch - driver's side, door handle switch for anti-theft alarm	428
7. Release button for rear lid lock cylinder, rear lid release motor	429
8. Illuminated vanity mirrors on driver's and front passenger's side	430
9. Front and rear interior lights	431
10. Door warning lamps control unit, left and right footwell light, left and right door warning lamp	432
11. Door warning lamps control unit, rear left and rear right entry light, rear left and rear right door warning lamp	433
047 - Electric windows, 2-door (with roll-back function)	434-437
1. Electric windows, 2-door (with roll-back function)	434-435
2. Electric window motor, left	436
3. Electric window motor, right	437
048 - Electric sliding sunroof with automatic preselector	438-440
1. Electric sliding sunroof with automatic preselector	438
2. Sliding sunroof adjustment control unit, sliding sunroof lift/lower switch, sliding sunroof adjustment regulator	439
3. Combi-processor in dash panel insert, central locking motor with control unit for interior lights switch-off delay and anti-theft alarm system	440
049 - Driving school vehicles	441-445
1. Driving school vehicles	441-442
2. Footwell light switch, warning buzzer switch	443
3. Combi-processor in dash panel insert, socket	444
4. Brake pedal switch for engine off	445
050 - Anti-locking brake system (ABS) MK20 with electronic differential lock (EDL), traction control system (TCS) and electronic stability program (ESP)	446-454
1. Anti-locking brake system (ABS) MK20 with electronic differential lock (EDL), traction control system (TCS) and electronic stability program (ESP)	446
2. Fuse in fuse holder, brake light suppression relay	447
3. Battery, voltage supply relay main fuse box	448
4. Speed sensor	449
5. Yaw rate sender, longitudinal acceleration sender, solenoid valve, lateral acceleration sender	450
6. Coding link, ABS hydraulic pump	451
7. Brake pressure sender, brake pressure solenoid trip switch	452
8. Steering angle sender, diagnosis	453
9. Combi-processor in dash panel insert, traction control system warning lamp	454
201 - -Fitting locations: Relay carrier, fuse carrier and main fuse box, from model year 2001 - 3	455-476
1. Relay carrier, fuse carrier and main fuse box, from model year 2001	455-476
1.1 Fitting locations overview	455
1.2 Relay carrier	456-457
1.2.1 Fuse colours	456
1.2.2 Position of relays:	456
1.2.3 Fuses:	456
1.2.4 Position of relays:	457

1.3 Relay carrier	458-461
1.3.1 Position of relays:	458
1.3.2 Fuse colours	459
1.3.3 Fuses:	459
1.3.4 Position of relays:	460
1.3.5 Fuse colours	461
1.3.6 Fuses:	461
1.4 Fuse holder	462-475
1.4.1 Fuse colours	462-475
1.5 Main fuse box	476
1.5.1 Fuse colours	476
1.5.2 Fuses:	476
202 - -Fitting Locations: List of earth points	477
1. -Fitting Locations: List of earth points	477
203 - -Fitting Locations: Fitting locations of individual control units	478-485
1. Fitting locations overview	478
2. -Fitting Locations: Fitting locations of individual control units	479
3. -Fitting Locations: Fitting locations of individual control units	480
4. Engine compartment	481
5. Passenger compartment	482
6. -Fitting Locations: Fitting locations of individual control units	483
7. Luggage compartment	484
8. Near rear final drive	485
204 - -Fitting Locations: Radio sound system	486-493
1. Fitting locations overview	486
2. -Fitting Locations: Radio sound system	487
3. -Fitting Locations: Radio sound system	488
4. Passenger compartment, Luggage compartment	489
5. -Fitting Locations: Radio sound system	490
6. -Fitting Locations: Radio sound system	491
7. -Fitting Locations: Radio sound system	492
8. -Fitting Locations: Radio sound system	493
205 - -Fitting Locations: Navigation system (NS LOW)	494-497
1. Fitting locations overview	494
2. -Fitting Locations: Navigation system (NS LOW)	495
3. Passenger compartment	496
4. Luggage compartment	497
206 - -Fitting Locations: Navigation system (RNSfD)	498-506
1. Fitting locations overview	498
2. -Fitting Locations: Navigation system (RNSfD)	499
3. -Fitting Locations: Navigation system (RNSfD)	500
4. Passenger compartment	501
5. Luggage compartment	502
6. -Fitting Locations: Navigation system (RNSfD)	503
7. Loudspeakers	504
8. -Fitting Locations: Navigation system (RNSfD)	505
9. -Fitting Locations: Navigation system (RNSfD)	506
207 - -Fitting Locations: Telematics	507-514
1. Fitting locations overview	507
2. -Fitting Locations: Telematics	508
3. -Fitting Locations: Telematics	509
4. Passenger compartment	510
5. -Fitting Locations: Telematics	511
6. Luggage compartment	512
7. Loudspeakers	513
8. Rear bumper	514
208 - -Fitting Locations: Telephone system (D network)	515-519
1. Fitting locations overview	515
2. -Fitting Locations: Telephone system (D network)	516
3. Passenger compartment	517
4. Luggage compartment	518
5. Loudspeakers	519
209 - -Fitting Locations: Mobile phone (provision for mobile phone)	520-524
1. Fitting locations overview	520
2. -Fitting Locations: Mobile phone (provision for mobile phone)	521
3. Passenger compartment	522

4. Luggage compartment
5. Loudspeakers

523
524