

001 - Basic equipment	1-23
1. Basic equipment	1-3
2. Earth connections	4
3. Earth connections, battery, main fuse box, alternator	5
4. Earth connections, ignition/starter switch, X contact relief relay, starter inhibitor and reversing light relay	6
5. Lighting switch, left steering column switch	7
6. Switches and instruments - lighting control, windscreen washer/wiper system, headlight range control (does not apply to headlights with gas discharge lamps)	8
7. Right steering column switch, windscreen washer/wiper system, rear window wiper	9
8. Tail lights, brake lights, reversing lights, rear fog light	10
9. Horn, cigarette lighter, ashtray light bulb, illumination for dash panel vents, heater element for left and right washer jet	11
10. Fuses	12
11. Fuses, headlights	13
12. Fuses, diagnostic connector, provision for radio	14
13. Fuses, glove box light, number plate light	15
14. Turn signals and hazard warning lights	16
15. Right footwell light, door contact switches, central locking motor	17
16. Luggage compartment lights, door contact switch, central locking motor, left footwell light	18
17. Fresh air blower (models without air conditioner), heated rear window	19
18. Combi-processor in dash panel insert, handbrake warning switch, warning lamps	20
19. Combi-processor in dash panel insert, ABS with EDL control unit, control and display unit for air conditioner, fuel gauge, coolant temperature gauge	21
20. Immobilizer reading coil, warning lamps, belt switch, coolant shortage indicator switch, brake lining/pad wear sender	22
21. Combi-processor in dash panel insert, oil level/oil temperature sender, oil pressure switch	23
002 - 1.6 litre fuel injection engine (Simos), 75 kW, 4-cylinder, engine code BFQ	24-38
1. 1.6 litre fuel injection engine (Simos), 75 kW, 4-cylinder, engine code BFQ	24-27
2. Battery, starter, alternator, fuses	28
3. Injectors, intake manifold change-over valve, fuel pump relay, coolant temperature senders	29
4. Simos control unit, current supply relay for Simos control unit, secondary air pump relay, map-controlled engine cooling thermostat, exhaust gas recirculation valve	30
5. Simos control unit, throttle valve control unit, exhaust gas recirculation valve	31
6. Simos control unit, accelerator pedal position senders, cruise control system switch, clutch pedal switch, brake light switch	32
7. Simos control unit, lambda probes	33
8. Simos control unit, Hall sender, engine speed sender, knock sensor I, ignition coils	34
9. Simos control unit, brake servo control unit, automatic gearbox control unit, control and display unit for air conditioner/Climatronic	35
10. Simos control unit, coolant temperature sender, radiator fan control unit	36
11. Fuses, fuel gauge sender, fuel pump	37
12. Dash panel insert, oil pressure switch, speedometer sender (Hall sender, on gearbox), oil level/oil temperature sender	38
003 - 1.8 litre fuel injection engine (Motronic), 92 kW, 4-cylinder, engine code APG	39-53
1. 1.8 litre fuel injection engine (Motronic), 92 kW, 4-cylinder, engine code APG	39-42
2. Battery, starter, alternator, ignition/starter switch, fuses	43
3. Motronic control unit, fuel pump relay, injectors, solenoid valves	44
4. Motronic control unit, knock sensors, engine speed sender, coolant temperature senders	45
5. Motronic control unit, throttle valve control unit, power assisted steering pressure switch, Hall sender, exhaust gas recirculation valve	46
6. Motronic control unit, accelerator pedal position senders, brake light switch, clutch pedal switch, cruise control system switch	47
7. Motronic control unit, air mass meter, activated charcoal filter system solenoid valve 1, lambda probes	48
8. Motronic control unit, Motronic current supply relay, secondary air pump relay, radiator fan	49
9. Motronic control unit, automatic gearbox control unit, vacuum pump for brakes, control and display unit for air conditioner/Climatronic	50
10. Motronic control unit, ignition coils, fuses	51
11. Fuses, fuel pump	52
12. Dash panel insert, oil pressure switch, oil level/oil temperature sender, speedometer sender	53
004 - 1.8 litre fuel injection engine (Motronic), 165 kW, 4-cylinder, engine code BAM	54-70
1. 1.8 litre fuel injection engine (Motronic), 165 kW, 4-cylinder, engine code BAM	54-57
2. Battery, starter, alternator, ignition/starter switch, fuses	58
3. Motronic control unit, fuel pump relay, injectors, solenoid valves	59
4. Motronic control unit, knock sensors, engine speed sender, coolant temperature senders	60

5. Motronic control unit, throttle valve control unit, intake air temperature sender	61
6. Motronic control unit, accelerator pedal position senders, brake light switch, clutch pedal switch, cruise control system switch	62
7. Motronic control unit, charge air pressure sender, exhaust gas temperature sender -1-, Hall sender, air mass meter	63
8. Motronic control unit, lambda probes, solenoid valves	64
9. Motronic control unit, ignition coils	65
10. Motronic control unit, vacuum pump for brakes, automatic gearbox control unit	66
11. Motronic control unit, Motronic current supply relay, fuses	67
12. Fuel pump, fuses	68
13. Radiator fan thermo-switches, coolant pump control unit	69
14. Dash panel insert, oil pressure switch, oil level/oil temperature sender, speedometer sender	70
005 - 1.9 litre diesel engine (unit injector), 74 kW, 4-cylinder, engine code ATD	71-86
1. 1.9 litre diesel engine (unit injector), 74 kW, 4-cylinder, engine code ATD	71-74
2. Battery, starter, alternator, fuses	75
3. Fuses	76
4. Diesel direct injection system control unit, diesel direct injection system relay, relay for glow plugs, glow plugs - (engine), coolant heating elements	77
5. Diesel direct injection system control unit, air mass meter, intake manifold flap motor, intake manifold flap change-over valve, exhaust gas recirculation valve -2-	78
6. Diesel direct injection system control unit, Hall sender, exhaust gas recirculation valve, charge pressure control solenoid valve, engine speed sender	79
7. Diesel direct injection system control unit, intake manifold pressure sender, intake manifold temperature sender, coolant temperature senders, fuel temperature sender	80
8. Diesel direct injection system control unit, fuel pump relay, unit injector solenoid valves, accelerator pedal position sender	81
9. Diesel direct injection system control unit, heater element (crankcase breather), cruise control system switch, brake pedal switch, clutch pedal switch	82
10. Diesel direct injection system control unit, radiator fan, automatic gearbox control unit, control and display unit for air conditioner/Climatronic	83
11. Diesel direct injection system control unit, radiator fan control unit	84
12. Combi-processor in dash panel insert, oil pressure switch, fuel gauge sender, diagnostic connector	85
13. Combi-processor in dash panel insert, speedometer sender (Hall sender, on gearbox), oil level/oil temperature sender	86
006 - 1.6 litre fuel injection engine (Motronic), 69 kW, 4-cylinder, engine code BAH	87-100
1. 1.6 litre fuel injection engine (Motronic), 69 kW, 4-cylinder, engine code BAH	87-89
2. Battery, starter, alternator, fuses	90
3. Motronic control unit, injectors, fuel pump relay	91
4. Motronic control unit, coolant temperature sender, engine speed sender, Hall sender, coolant temperature sender, intake manifold pressure sender, intake air temperature sender	92
5. Motronic control unit, throttle valve unit	93
6. Motronic control unit, accelerator pedal position senders, clutch pedal switch, brake light switch	94
7. Motronic control unit, knock sensor I, lambda probe, lambda probe heater, activated charcoal filter system solenoid valve 1	95
8. Motronic control unit, control and display unit for air conditioner/Climatronic	96
9. Motronic control unit, ignition coils, final output stage	97
10. Fuses	98
11. Fuses, fuel gauge sender, fuel pump	99
12. Dash panel insert, oil pressure switch, speedometer sender (Hall sender, on gearbox), oil level/oil temperature sender	100