

Contents

00 - Technical data	1
1 Technical data for brakes	1
1.1 Production code (PR No.) allocation: brakes	1
1.2 Technical data for brakes	1
2 Brake test	6
2.1 General notes	6
2.2 Vehicles with front-wheel drive	6
2.3 Vehicles with all-wheel drive	6
2.4 Brake test on a single-axle brake dynamometer	7
45 - Anti-lock brake system	8
1 General notes	8
2 Connecting VAS 5051 x or VAS 5052 and selecting functions	10
3 ABS/ESP ITT Mark 60/ ITT Mark 70	12
3.1 Assembly overview	12
4 Removing and installing parts of ABS/ESP system	18
4.1 Removing and installing brake light switch on brake pedal	18
4.2 Removing and installing brake light switch on brake master cylinder	19
4.3 Removing and installing ESP sensor unit G419	20
4.4 Removing and installing steering angle sender G85	22
4.5 Removing and installing brake pressure sender 1 G201	23
4.6 Removing and installing brake servo vacuum sender G483 - Vehicles with optimised hydraulic brake assistance/vacuum sender (OHBV) only	24
5 ABS/ESP ITT Mark 60 control unit and hydraulic unit	27
5.1 Assembly overview	27
5.2 Removing and installing control unit and hydraulic unit (Mark 60)	30
5.3 Basic setting of inlet valves and separating valves (Mark 60EC)	40
6 ABS- ITT Mark 70 control unit and hydraulic unit	41
6.1 Assembly overview	41
6.2 Removing and installing control unit and hydraulic unit (Mark 70)	44
7 ABS control unit -J104- and ABS hydraulic unit -N55- - TFSI engine	54
7.1 Removing and installing control unit and hydraulic unit - TFSI engine	54
8 ABS control unit -J104- and ABS hydraulic unit -N55- - 2.0 ltr. TDI engine	64
8.1 Removing and installing control unit and hydraulic unit - 2.0 ltr. TDI engine	64
9 ABS control unit -J104- and ABS hydraulic unit -N55- - RS 3	75
9.1 Assembly overview	75
9.2 Removing and installing ABS control unit -J104- and ABS hydraulic unit -N55-	76
10 Control unit and hydraulic unit - vehicles with diesel particulate filter	82
10.1 Removing and installing control unit and hydraulic unit - vehicles with diesel particulate filter	82
11 ABS/ESP system components on front axle	93
11.1 Assembly overview	93
11.2 Removing and installing speed sensor	93
12 ABS/ESP system components on rear axle - front-wheel drive vehicles	95
12.1 Assembly overview	95
12.2 Removing and installing speed sensor	95
13 ABS/ESP system components on rear axle - vehicles with all-wheel drive	97
13.1 Assembly overview	97
13.2 Removing and installing speed sensor	97
46 - Brakes - mechanism	99

1	Servicing front brakes FS III (PR 1ZF)	99
1.1	Assembly overview - front brakes (FS III)	99
1.2	Removing and installing brake pads - front brakes	102
1.3	Removing and installing brake caliper - front brakes	105
2	Front brakes (FN-3, PR 1LJ, 1ZA, 1ZC, 1ZD, 1ZE, 1ZM, 1ZP)	107
2.1	Assembly overview	107
2.2	Removing and installing brake pads	110
2.3	Removing and installing brake caliper - front brakes	115
3	Front brakes (FNRG-57, PR 1LK/ 1ZK)	117
3.1	Servicing front brakes	117
3.2	Removing and installing brake pads	120
4	Brake caliper with vibration damper	125
4.1	Removing and installing vibration dampers	126
5	Servicing front brakes (PR 1LG) - RS 3	128
5.1	Removing and installing front brake pads - RS 3	131
5.2	Removing and installing front brake caliper - RS 3	135
5.3	Renewing front brake caliper - RS 3	137
5.4	Removing and installing front brake disc (RS 3)	141
6	Vibration dampers on front brake calipers - RS 3 (new version)	144
6.1	Removing and installing vibration dampers - RS 3	145
7	Servicing rear brakes	147
7.1	Assembly overview - rear brake for front-wheel drive vehicles	147
7.2	Assembly overview - rear brake, vehicles with all-wheel drive	150
7.3	Detaching and attaching handbrake cable from/to brake caliper	153
7.4	Pressing back piston in rear brake caliper	154
7.5	Removing and installing brake pads	155
7.6	Removing and installing brake caliper	158
7.7	Remove brake disc.	162
8	Handbrake	164
8.1	Assembly overview - handbrake	164
8.2	Removing and installing handbrake cable	165
8.3	Adjusting handbrake	167
8.4	Removing and installing handbrake warning switch	169
9	Brake pedal	170
9.1	Assembly overview - brake pedal, left-hand drive vehicles	170
9.2	Assembly overview - brake pedal, left-hand drive vehicles with automatic gearbox	172
9.3	Assembly overview - brake pedal, right-hand drive vehicles	174
9.4	Removing and installing brake pedal	177
9.5	Separating and connecting brake pedal and brake servo	178
9.6	Separating and connecting brake pedal and brake servo	180
47 - Brakes - hydraulics		182
1	High-pressure and low-pressure tests	182
1.1	Tests	182
2	Servicing front brake calipers	184
2.1	Assembly overview - brake caliper FS III	184
2.2	Removing and installing piston for brake caliper FS III	184
2.3	Assembly overview - brake caliper FN3	186
2.4	Removing and installing piston for front brake caliper FN3	187
3	Brake caliper FN RG-57	191
3.1	Servicing brake calipers	191
3.2	Removing and installing piston for front brake caliper	192
3.3	Brake caliper - RS 3	195
4	Servicing rear brake calipers	196

4.1	Assembly overview	196
4.2	Removing and installing piston for rear brake caliper	197
5	Bleeding brake system	201
5.1	Brake fluid	201
5.2	Bleeding brake system using brake filling and bleeding equipment	202
5.3	Bleeding brake system without brake filling and bleeding equipment	204
5.4	Bleeding using ABS hydraulic unit N55 pump	205
6	Brake servo/brake master cylinder - left-hand drive vehicles	206
6.1	Assembly overview	206
6.2	Removing and installing brake master cylinder	208
6.3	Removing and installing brake servo	212
6.4	Removing and installing brake servo - vehicles with 7-speed dual clutch gearbox	215
6.5	Removing and installing brake master cylinder - TFSI engine	220
6.6	Removing and installing brake servo - TFSI engine	223
6.7	Removing and installing brake servo - RS 3	227
7	Electric vacuum pumps for brake servo	231
7.1	Vacuum pump for brakes V192 (old generation)	231
7.2	Removing and installing vacuum pump for brakes V192	231
7.3	Electric vacuum pump for brakes V192 (new generation)	233
8	Mechanical vacuum pumps for brake servo	238
8.1	Removing and installing vacuum pump - TDI engine	238
8.2	Removing and installing vacuum pump - TFSI engine	241
8.3	Removing and installing vacuum pump - RS 3	243
9	Checking brake servo vacuum system	246
9.1	Connecting vacuum gauge for brake servo VAS 6721	246
9.2	Checking vacuum generation	248
9.3	Checking for leaks	249
9.4	Generating vacuum with hand vacuum pump VAS 6213	251
10	Brake lines and brake hoses - left-hand drive vehicles	252
10.1	Removing and installing brake lines and brake hoses	252