

Contents

27 - Starter, current supply, CCS	1
1 Contact corrosion	1
2 Battery	2
2.1 Battery - general notes	2
2.2 Maintenance-free batteries	2
2.3 Disconnecting and connecting battery in engine compartment	2
2.4 Disconnecting and connecting battery in luggage compartment	3
2.5 Removing and installing earth cable with battery monitor control unit J367 in engine compartment	5
2.6 Removing and installing earth cable with battery monitor control unit J367 in luggage compartment	5
2.7 Removing and installing battery in engine compartment	6
2.8 Removing and installing battery mounting	10
2.9 Removing and installing battery in luggage compartment	10
2.10 Checking battery	13
2.11 Charging battery	14
2.12 Preparations before charging battery	14
2.13 Preparations for back-up power supply of battery	15
3 Start/stop system	17
3.1 Safety precautions for vehicles with start/stop system	17
3.2 Exploded view - start/stop system	17
3.3 Removing and installing voltage stabiliser J532	18
4 Removing and installing alternator	19
4.1 1.2 litre TFSI engine	19
4.2 1.4 litre TFSI engine	21
4.3 1.6 litre (2-valve) engine	22
4.4 1.6 litre FSI engine	24
4.5 1.8 litre TFSI engine - vehicles up to 05.2008	27
4.6 1.8 litre TFSI engine - vehicles from 06.2008 onwards	31
4.7 2.0 litre FSI engine	34
4.8 2.0 litre TFSI engine	38
4.9 2.5 litre TFSI engine	40
4.10 3.2 litre MPI engine	42
4.11 1.6 litre TDI engine (common rail)	47
4.12 1.9 litre TDI engine	50
4.13 2.0 litre TDI engine (unit injector)	54
4.14 2.0 litre TDI engine (common rail)	57
5 Checking and servicing alternator	63
5.1 Checking alternator	63
6 Removing and installing starter	64
6.1 1.2 litre TFSI engine - vehicles with dual clutch gearbox	64
6.2 1.2 litre and 1.4 litre TFSI engine - vehicles with manual gearbox	65
6.3 1.4 litre TFSI engine - vehicles with dual clutch gearbox	66
6.4 1.6 litre (2-valve) engine	67
6.5 1.6 litre FSI engine	69
6.6 1.8 litre TFSI engine - vehicles up to 05.2008	70
6.7 1.8 litre TFSI engine with manual gearbox - vehicles from 06.2008 onwards	72
6.8 1.8 litre TFSI engine with dual clutch gearbox - vehicles from 06.2008 onwards	74
6.9 2.0 litre FSI engine	76
6.10 2.0 litre TFSI engine	77
6.11 2.5 litre TFSI engine with dual clutch gearbox	78
6.12 3.2 litre MPI engine	78



6.13	1.6 litre TDI engine (common rail)	80
6.14	1.9 litre TDI engine	83
6.15	2.0 litre TDI engine (unit injector)	84
6.16	2.0 litre TDI engine (common rail)	86
90	Gauges, instruments	88
1	Contact corrosion	88
2	Instrument cluster	89
2.1	Removing and installing instrument cluster	89
2.2	Multi-pin connectors on instrument cluster	90
2.3	Pin assignment at multi-pin connectors on instrument cluster	91
2.4	Pin assignment on fuel gauge sender G	93
2.5	Pin assignment on fuel gauge sender 2 G169	94
2.6	Pin assignment at coolant temperature senders - vehicles with 1.2 ltr. TFSI engine	95
2.7	Pin assignment at coolant temperature senders - vehicles with 1.4 ltr. TFSI engine	96
2.8	Pin assignment at coolant temperature senders - vehicles with 1.6 ltr. (2-valve) engine	97
2.9	Pin assignment at coolant temperature senders - vehicles with 1.6 ltr. FSI engine	98
2.10	Pin assignment at coolant temperature senders - vehicles with 1.8 ltr. TFSI engine	99
2.11	Pin assignment at coolant temperature senders - vehicles with 2.0 ltr. FSI engine	100
2.12	Pin assignment at coolant temperature senders - vehicles with 2.0 ltr. TFSI engine	101
2.13	Pin assignment at coolant temperature sender - vehicles with 2.5 ltr. TFSI engine	102
2.14	Pin assignment at coolant temperature senders - vehicles with 3.2 ltr. MPI engine	103
2.15	Pin assignment at coolant temperature senders - vehicles with 1.9 ltr. TDI engine	104
2.16	Pin assignment at coolant temperature senders - vehicles with 2.0 ltr. TDI engine (unit injector)	105
2.17	Pin assignment at coolant temperature senders - vehicles with 1.6 ltr. and 2.0 ltr. TDI engine (common rail)	106
2.18	Removing and installing ambient temperature sensor G17 - A3	107
2.19	Removing and installing ambient temperature sensor G17 - RS 3	107
2.20	Removing and installing radio-controlled clock receiver J489	108
3	Cigarette lighter, 12 V electric socket	109
3.1	Removing and installing cigarette lighter U1 / electric socket U without function selection switch 2 E272	109
3.2	Removing and installing cigarette lighter U1 / electric socket U with function selection switch 2 E272	110
3.3	Removing and installing cigarette lighter illumination bulb L28	112
3.4	Removing and installing mounting with cigarette lighter U1 and 12 V socket U5 - USA vehicles	113
4	Horns - vehicles up to 05.2008	114
4.1	Removing and installing horn/dual tone horn H1 - vehicles without charge air cooler	114
4.2	Removing and installing horn/dual tone horn H1 - vehicles with charge air cooler	115
5	Horns - vehicles from 06.2008 onwards	116
5.1	Removing and installing horns H2 / H7 - A3	116
5.2	Removing and installing horns H2 / H7 - RS 3	117
5.3	Removing and installing bracket for horns	117
6	Data bus diagnostic interface	118
6.1	Overview - data bus diagnostic interface J533	118
6.2	Data bus diagnostic interface J533	118
6.3	Removing and installing data bus diagnostic interface J533	119
6.4	Connector at data bus diagnostic interface J533	120
92	Windscreen wash/wipe system	121
1	Contact corrosion	121
2	Windscreen wiper system	122
2.1	Moving windscreen wipers to service position	122
2.2	Renewing wiper blade (old version)	123

2.3	Renewing wiper blade (new version)	123
2.4	Removing and installing wiper arms	124
2.5	Adjusting wiper arms	125
2.6	Removing and installing wiper motor with wiper motor control unit J400 - vehicles up to 05.2008	126
2.7	Removing and installing wiper motor V with wiper motor control unit J400 - vehicles from 06.2008 onwards	127
2.8	Renewing wiper motor with wiper motor control unit J400	129
2.9	Removing and installing rain and light sensor	129
3	Windscreen washer system - vehicles up to 05.2008	133
3.1	Removing and installing washer jets	133
3.2	Adjusting washer jets	133
3.3	Removing and installing washer fluid reservoir - vehicles without auxiliary heater	133
3.4	Removing and installing washer fluid reservoir - vehicles with auxiliary heater	135
4	Windscreen washer system - vehicles from 06.2008 onwards	139
4.1	Removing and installing filler neck for washer fluid reservoir	139
4.2	Removing and installing washer fluid reservoir - vehicles without auxiliary heater	140
4.3	Removing and installing washer fluid reservoir - RS 3	141
4.4	Removing and installing windscreen washer fluid level sender G33	142
4.5	Removing and installing washer pump V5	143
4.6	Removing and installing washer jets	144
4.7	Adjusting washer jets	145
5	Rear window wiper and washer system	146
5.1	Exploded view - rear window wiper	146
5.2	Removing and installing washer jet	146
5.3	Adjusting washer jet	147
5.4	Removing and installing wiper arm	147
5.5	Adjusting wiper arm	148
5.6	Renewing wiper blade	149
5.7	Exploded view - rear window wiper motor	149
5.8	Removing and installing rear window wiper motor	149
5.9	Removing and installing washer fluid reservoir	150
6	Headlight washer system - vehicles up to 05.2008	151
6.1	Removing and installing headlight washer jets	151
6.2	Adjusting washer jets	152
6.3	Removing and installing washer fluid reservoir	152
7	Headlight washer system - vehicles from 06.2008 onwards	153
7.1	Removing and installing headlight washer system pump V11	153
7.2	Removing and installing headlight washer jets - A3	153
7.3	Removing and installing headlight washer jets - RS 3	154
7.4	Adjusting washer jets	156
7.5	Removing and installing washer fluid reservoir	156
8	Washer fluid hoses	157
94	Lights, bulbs, switches - exterior	158
1	Contact corrosion	158
2	Halogen headlights - vehicles up to 05.2008	159
2.1	Exploded view - halogen headlight	159
2.2	Removing and installing headlights	160
2.3	Preparations before working on headlights	161
2.4	Renewing dipped beam bulb	161
2.5	Renewing main beam bulb	162
2.6	Renewing side light bulb	162
2.7	Renewing turn signal bulb	163
2.8	Removing and installing headlight range control motor	163

2.9	Installing repair kit for headlight housing	164
2.10	Adapting headlights for driving on the left side of the road	165
2.11	Adapting headlights for driving on the right side of the road	166
3	Halogen headlights - USA vehicles up to 05.2008	167
3.1	Exploded view - halogen headlight	167
3.2	Removing and installing headlights	168
3.3	Preparations before working on headlights	169
3.4	Renewing dipped beam bulb	169
3.5	Renewing main beam bulb	169
3.6	Renewing turn signal bulb	170
3.7	Installing repair kit for headlight housing	170
4	Halogen headlights - vehicles from 06.2008 onwards	172
4.1	Exploded view - halogen headlight	172
4.2	Removing and installing headlight housing	173
4.3	Removing and installing mounting for headlight housing	174
4.4	Renewing headlight dipped beam bulb M29 / M31	175
4.5	Renewing headlight main beam bulb M30 / M32	177
4.6	Renewing bulb for daytime running light and side light L186 / L188	178
4.7	Renewing front turn signal bulb M5 / M7	179
4.8	Removing and installing headlight range control motor V48 / V49	179
4.9	Installing repair kit for headlight housing	180
4.10	Adapting headlights for driving on the left side of the road	181
4.11	Adapting headlights for driving on the right side of the road	181
5	Gas discharge headlights - rest-of-the-world vehicles and USA vehicles up to 05.2008	183
5.1	Safety precautions when handling gas discharge bulbs	183
5.2	Exploded view - gas discharge headlight	183
5.3	Removing and installing headlights	184
5.4	Preparations before working on headlights	185
5.5	Renewing gas discharge bulb for dipped beam headlight	186
5.6	Renewing main beam bulb	188
5.7	Renewing side light bulb	188
5.8	Renewing turn signal bulb	189
5.9	Removing and installing headlight range control motor	189
5.10	Removing and installing gas discharge bulb control unit	191
5.11	Removing and installing starter unit for gas discharge bulb	191
5.12	Installing repair kit for headlight housing	193
5.13	Adapting headlights for driving on the left or right side of the road	193
6	Bi-xenon gas discharge headlights with cornering lights - rest-of-the-world vehicles and USA vehicles up to 05.2008	195
6.1	Safety precautions when handling gas discharge bulbs	195
6.2	Exploded view - bi-xenon gas discharge headlight with cornering light	195
6.3	Removing and installing headlights	196
6.4	Preparations before working on headlights	198
6.5	Renewing gas discharge bulb	199
6.6	Renewing bulb for daytime running lights	200
6.7	Renewing bulb for side lights	201
6.8	Removing and installing dip beam screen motor V294 / V295	201
6.9	Removing and installing dynamic cornering light control motor V318 / V319	202
6.10	Removing and installing headlight range control motor V48 / V49	202
6.11	Removing and installing swivel module position sensor G474 / G475	202
6.12	Renewing turn signal bulb	202
6.13	Removing and installing output module for headlight J667 / J668	203
6.14	Installing repair kit for headlight housing	203
6.15	Adapting headlights for driving on the left or right side of the road - rest-of-the-world vehicles	204

7	Bi-xenon gas discharge headlights - vehicles from 06.2008 onwards	205
7.1	Safety precautions when handling gas discharge bulbs	205
7.2	Exploded view - bi-xenon gas discharge headlight	205
7.3	Removing and installing headlight housing	207
7.4	Removing and installing mounting for headlight housing	208
7.5	Preparations before working on headlights	209
7.6	Renewing gas discharge bulb L13 / L14	209
7.7	Renewing LED module for daytime running light and side light L176 / L177	211
7.8	Removing and installing dip beam screen motor V294 / V295	211
7.9	Removing and installing headlight range control motor V48 / V49	211
7.10	Removing and installing dynamic cornering light control motor V318 / V319	211
7.11	Renewing front turn signal bulb M5 / M7	211
7.12	Removing and installing gas discharge bulb control unit J343 / J344	212
7.13	Removing and installing output module for headlight J667 / J668	213
7.14	Installing repair kit for headlight housing	214
7.15	Adapting headlights for driving on the left or right side of the road - rest-of-the-world vehicles	214
8	Side marker light - USA vehicles up to 05.2008	215
8.1	Removing and installing side marker light	215
8.2	Renewing side marker light bulb	216
9	Side marker light - USA vehicles from 06.2008 onwards	218
9.1	Removing and installing side marker light	218
10	Fog lights - vehicles up to 05.2008	219
10.1	Removing and installing fog lights	219
10.2	Renewing fog light bulb	220
11	Fog lights - vehicles from 06.2008 onwards	221
11.1	Removing and installing fog lights	221
11.2	Renewing fog light bulb L22 / L23	221
12	Adjusting headlights	222
12.1	Adjusting headlights	222
12.2	Adjusting halogen headlights - rest-of-the-world vehicles up to 05.2008	222
12.3	Adjusting gas discharge headlights - rest-of-the-world vehicles up to 05.2008	225
12.4	Adjusting halogen headlights - rest-of-the-world vehicles from 06.2008 onwards	228
12.5	Adjusting gas discharge headlights - rest-of-the-world vehicles from 06.2008 onwards	231
12.6	Adjusting halogen headlights - USA vehicles up to 05.2008	234
12.7	Adjusting gas discharge headlights - USA vehicles up to 05.2008	237
12.8	Adjusting halogen headlights - USA vehicles from 06.2008 onwards	240
12.9	Adjusting gas discharge headlights - USA vehicles from 06.2008 onwards	243
12.10	Adjusting fog lights	246
13	Turn signal repeaters - vehicles up to 05.2008	248
13.1	Removing and installing turn signal repeater	248
14	Turn signal repeaters - vehicles from 06.2008 to 05.2010	249
14.1	Exploded view - exterior mirror turn signal	249
14.2	Removing and installing exterior mirror turn signal bulb L131 / L132	249
15	Turn signal repeaters - vehicles from 06.2010 onwards	252
15.1	Exploded view - exterior mirror turn signal	252
15.2	Removing and installing exterior mirror turn signal bulb L131 / L132	253
16	Tail lights - three-door vehicle	255
16.1	Exploded view - tail light, vehicles up to 05.2008	255
16.2	Exploded view - tail light, vehicles from 06.2008 onwards	256
16.3	Removing and installing tail light cluster	257
16.4	Removing and installing bulb holder	257
17	Exploded view - tail lights (Sportback), vehicles up to 05.2008	258
17.1	Exploded view - outer tail light cluster	258

17.2	Removing and installing outer tail light cluster	259
17.3	Removing and installing bulb holder	259
17.4	Exploded view - inner tail light cluster	259
17.5	Removing and installing inner tail light cluster	260
17.6	Removing and installing bulb holder	261
18	Tail lights (Sportback) - vehicles from 06.2008 onwards	262
18.1	Exploded view - outer tail light cluster	262
18.2	Removing and installing outer tail light cluster	263
18.3	Removing and installing bulb holder	263
18.4	Exploded view - inner tail light cluster	263
18.5	Removing and installing inner tail light cluster	264
18.6	Removing and installing bulb holder	265
19	High-level brake light - three-door vehicle	266
19.1	Removing and installing high-level brake light	266
19.2	Preparing high-level brake light for installation	267
19.3	Removing and installing high-level brake light in roof spoiler	268
20	High-level brake light - Sportback	269
20.1	Removing and installing high-level brake light	269
20.2	Removing and installing high-level brake light in roof spoiler	270
21	Number plate light	272
21.1	Removing and installing number plate light	272
22	Steering column switch module	273
22.1	Exploded view - steering column switch module	273
22.2	Removing and installing steering column electronics control unit J527	274
22.3	Pin assignment on steering column electronics control unit J527	275
22.4	Removing and installing return ring with slip ring	278
22.5	Removing and installing steering angle sender G85	279
22.6	Removing and installing turn signal switch E2 and cruise control system switch E45	279
22.7	Removing and installing intermittent wiper switch E22	280
23	Lock cylinder and ignition/starter switch with steering lock	281
23.1	Removing and installing lock cylinder	281
23.2	Removing and installing ignition key withdrawal lock solenoid N376	282
23.3	Removing and installing ignition/starter switch D	282
23.4	Pin assignment on ignition/starter switch	284
23.5	Removing and installing steering lock housing	284
23.6	Removing and installing adapter wiring harness for steering lock housing	285
24	Parking aid - vehicles up to 05.2008	286
24.1	Overview - parking aid	286
24.2	Removing and installing parking aid control unit J446 - three-door vehicle	286
24.3	Removing and installing parking aid control unit J446 - Sportback	287
24.4	Removing and installing rear parking aid warning buzzer H15 - three-door vehicle	287
24.5	Removing and installing rear parking aid warning buzzer H15 - Sportback	288
24.6	Removing and installing rear parking aid senders	288
25	Parking aid - vehicles from 06.2008 onwards	289
25.1	Overview - parking aid (front)	289
25.2	Removing and installing front parking aid warning buzzer H22 - 8-channel parking aid	290
25.3	Removing and installing front parking aid senders G252 / G253 / G254 / G255	290
25.4	Removing and installing front park assist steering senders G568 / G569	291
25.5	Overview - parking aid (rear)	291
25.6	Removing and installing parking aid control unit J446 - three-door vehicle	292
25.7	Removing and installing parking aid control unit J446 - Sportback	292
25.8	Removing and installing rear parking aid warning buzzer H15 - three-door vehicle	293
25.9	Removing and installing rear parking aid warning buzzer H15 - Sportback	293
25.10	Removing and installing rear parking aid senders G203 / G204 / G205 / G206	294

26	Automatic headlight range control	295
26.1	Overview - automatic headlight range control	295
26.2	Removing and installing control unit for headlight range control J431	295
96	Lights, bulbs, switches - interior	297
1	Lights and switches in dash panel	297
1.1	Removing and installing central locking SAFELOCK function warning lamp K133	297
1.2	Removing and installing light switch E1	297
1.3	Removing and installing regulator/switch unit (E20 , E102) and "coming home" button	298
1.4	Removing and installing hazard warning light switch E3 - vehicles from 06.2008 to 01.2010	298
1.5	Removing and installing tyre pressure monitor button E226 - vehicles from 06.2004 to 05.2008	298
1.6	Removing and installing tyre pressure monitor button E226 - vehicles from 06.2008 to 01.2010	300
1.7	Removing and installing start/stop operation button E693 - vehicles up to 01.2010	300
1.8	Removing and installing sport program button E541 - vehicles up to 01.2010	301
1.9	Removing and installing TCS and ESP button E256 - vehicles up to 05.2008	301
1.10	Removing and installing TCS and ESP button E256 - vehicles from 06.2008 to 01.2010	303
1.11	Removing and installing warning lamp for airbag deactivated on front passenger side K145 - vehicles up to 05.2004	303
1.12	Removing and installing warning lamp for airbag deactivated on front passenger side K145 - vehicles up to 05.2008	303
1.13	Removing and installing warning lamp for airbag deactivated on front passenger side K145 - vehicles from 06.2008 to 01.2010	304
1.14	Removing and installing parking aid button E266 - vehicles from 06.2008 to 01.2010	305
1.15	Removing and installing switches in dash panel - vehicles from 01.2010 onwards	305
1.16	Removing and installing front heated seat regulator E94 / E95	306
1.17	Removing and installing glove compartment light W6	306
1.18	Removing and installing glove compartment light switch E26	307
1.19	Removing and installing bulb for footwell light W9 / W10	308
2	Lights and switches in front doors	309
2.1	Removing and installing mirror adjustment switch - three-door vehicle	309
2.2	Removing and installing mirror adjustment switch - Sportback	310
2.3	Removing and installing window switches - three-door vehicle	311
2.4	Removing and installing window switches (driver side) - Sportback	312
2.5	Removing and installing window switch (front passenger side) - Sportback	313
2.6	Removing and installing door contact switch	313
2.7	Removing and installing front central locking button - three-door vehicle	313
2.8	Removing and installing front central locking button - Sportback	314
2.9	Removing and installing rear lid remote release button E233 and fuel tank flap release button E319 - USA vehicles	315
2.10	Renewing door opener light bulb	315
2.11	Removing and installing door warning lamp/entry light (front)	316
2.12	Removing and installing interior monitoring deactivation switch E183 and alarm system off switch E217	317
3	Lights and switches in rear doors	318
3.1	Removing and installing window switches in rear - Sportback	318
3.2	Renewing door opener light bulb	318
3.3	Removing and installing door warning lamp/entry light (rear)	319
3.4	Removing and installing door contact switch	319
4	Lights and switches in centre console, front seats, luggage compartment	320
4.1	Removing and installing selector lever display unit	320
4.2	Removing and installing function selection switch 2 E272	321
4.3	Removing and installing rear seat heating switches	321
4.4	Removing and installing rear central locking button - USA vehicles	321
4.5	Removing and installing luggage compartment light	322

4.6	Removing and installing rear lid contact switch - three-door vehicle	323
4.7	Removing and installing rear lid contact switch - Sportback	323
5	Lights and switches in roof trim	324
5.1	Removing and installing vanity mirror light	324
5.2	Removing and installing contact switch for vanity mirror F147 / F148	324
5.3	Removing and installing interior light/reading light (front)	324
5.4	Renewing interior light bulbs (front)	326
5.5	Renewing reading light bulbs (front)	326
5.6	Removing and installing sunroof switch - three-door vehicle	327
5.7	Removing and installing sunroof switch - Sportback	328
5.8	Removing and installing garage door operation control unit J530	328
5.9	Removing and installing garage door operating unit E284	328
5.10	Removing and installing rear interior light (version I)	329
5.11	Renewing rear interior light bulb (version I)	329
5.12	Removing and installing rear interior light (version II)	329
5.13	Renewing rear interior light bulb (version II)	330
5.14	Removing and installing interior light/reading light (rear)	330
5.15	Renewing interior light/reading light bulb (rear)	331
6	Immobiliser	332
7	Ultrasonic interior monitoring	333
7.1	Removing and installing interior monitoring sensor G273	333
7.2	Removing and installing anti-theft/tilt system control unit J529	333
7.3	Removing and installing convenience system central control unit J393	333
7.4	Removing and installing alarm horn H12	335
8	Towing bracket	337
8.1	Removing and installing trailer detector control unit J345 - three-door vehicle	337
8.2	Removing and installing trailer detector control unit J345 - Sportback	337
97 - Wiring		338
1	Contact corrosion	338
2	Relay carriers, fuse carriers (engine compartment)	339
2.1	Removing and installing suppression filter - vehicles with 2.5 ltr. TFSI engine and 3.2 ltr. MPI engine	339
2.2	Removing and installing relay and fuse holder B SB - vehicles up to 05.2009	340
2.3	Removing and installing relay and fuse holder B SB - vehicles from 06.2009 onwards	341
2.4	Removing and installing electronics box (engine compartment, left-side) - vehicles up to 05.2008	342
2.5	Removing and installing electronics box (engine compartment, left-side) - vehicles from 06.2008 onwards	344
2.6	Removing and installing 6-position relay carrier under electronics box (engine compartment) - vehicles up to 05.2008	346
2.7	Removing and installing 2-position relay carrier under electronics box (engine compartment) - vehicles from 06.2008 onwards	347
2.8	Removing and installing connector point in plenum chamber	348
3	Relay carriers, fuse carriers (vehicle interior)	349
3.1	Unplugging door disconnecter (left-side)	349
3.2	Removing and installing fuse holder C SC in dash panel (driver side)	349
3.3	Removing and installing onboard supply control unit J519 - vehicles up to 05.2008	351
3.4	Removing and installing onboard supply control unit J519 - vehicles from 06.2008 onwards	351
3.5	Removing and installing 5-position relay carrier - vehicles from 06.2008 onwards	352
3.6	Removing and installing 5-position relay carrier	353
3.7	Unplugging door disconnecter (right-side)	354
4	Relay carriers, fuse carriers (luggage compartment)	355
4.1	Removing and installing main fuse box, on rear right in luggage compartment - vehicles with 2.5 ltr. TFSI engine and 3.2 ltr. MPI engine	355

5	Repairing wiring harnesses and electrical connectors	356
6	Releasing and dismantling connector housings	357
7	Cleaning contact surfaces	358
8	Repairing aerial wires	359
9	Fibre optic cables	360
10	Vehicle diagnostic, testing and information systems	361