

## Contents

<b>00 - Technical data</b>	<b>1</b>
1    Routing and attaching lines and wiring	1
2    Contact corrosion	2
<b>68 - Interior equipment</b>	<b>3</b>
1    Storage compartments/covers/trim panels	3
1.1    Removing and installing glove box	3
1.2    Routing and securing glove box wiring harness	5
1.3    Removing and installing glove box lid	5
1.4    Removing and installing cushioning element for glove box lid	8
1.5    Removing and installing trim panel for glove box lid	8
1.6    Removing and installing bracket for knee bolster on front passenger side - country-specific version	8
1.7    Removing and installing storage compartment (driver side)	10
1.8    Removing and installing bracket for knee bolster on driver side - country-specific version	11
1.9    Removing and installing trim for steering column switch module	12
1.10    Removing and installing trim cover	13
1.11    Removing and installing mobile phone bracket	14
1.12    Removing and installing cup holder/storage compartment in centre console (top section)	14
1.13    Overview of fitting locations - centre console	16
1.14    Overview of fitting locations - centre console, country-specific version	18
1.15    Removing and installing centre console	19
1.16    Removing and installing cover for selector mechanism and securing frame with gear lever boot	22
1.17    Removing and installing storage compartment (version 1) - storage compartment trim, storage compartment cover (front), storage compartment cover and ashtray (front), smoker vehicle	25
1.18    Removing and installing storage compartment (version 2) - frame for storage compartment cover, storage compartment cover (front) and ashtray (front), smoker vehicle	27
1.19    Removing and installing storage compartment (version 1) - storage compartment trim, storage compartment cover (front) and lining mat, non-smoker vehicle	30
1.20    Removing and installing storage compartment (version 2) - storage compartment trim and lining mat, non-smoker vehicle	32
1.21    Removing and installing grab handle (left-side/right-side)	35
1.22    Removing and installing handbrake cover	37
1.23    Removing and installing cigarette lighter	38
1.24    Removing and installing 12 V socket	38
1.25    Removing and installing storage compartment	38
1.26    Removing and installing panel with cigarette lighter and cover	39
1.27    Removing and installing panel with cigarette lighter and 12 V socket - country-specific version	39
1.28    Removing and installing sliding cover unit	40
1.29    Removing and installing ashtray (rear)	41
1.30    Removing and installing storage compartment (rear)	42
1.31    Removing and installing panel with control unit for heated rear seats (left-side/right-side)	42
1.32    Removing and installing heated rear seat switch with regulator (left-side/right-side)	42
1.33    Removing and installing panel with rear central locking switch - country-specific version	43
1.34    Removing and installing centre console storage net - vehicles with left-hand drive	43
1.35    Removing and installing centre console storage net - vehicles with right-hand drive	45
1.36    Removing and installing mounting bracket for selector mechanism cover	46
1.37    Removing and installing brackets for centre console	47

1.38	Removing and installing centre armrest .....	47
1.39	Dismantling and assembling centre armrest .....	49
1.40	Removing and installing padding .....	50
1.41	Removing and installing side caps (left-side/right-side) .....	50
1.42	Removing and installing cover (rear) .....	51
1.43	Removing and installing storage compartment .....	51
1.44	Removing and installing trim .....	52
<b>2</b>	<b>Interior mirror .....</b>	<b>53</b>
2.1	Safety regulations for interior mirror .....	53
2.2	General notes on interior mirror .....	53
2.3	Switching automatic anti-dazzle function on and off .....	54
2.4	Switching compass display on and off .....	54
2.5	Setting magnetic deflection zone .....	54
2.6	Calibrating digital compass .....	55
2.7	Adjusting automatic anti-dazzle interior mirror Y7 for vehicles with left-hand drive or right-hand drive .....	56
2.8	Selecting the applicable deflection zone from the map .....	56
2.9	Checking operation of automatic anti-dazzle interior mirror .....	62
2.10	Removing and installing manual anti-dazzle interior mirror .....	63
2.11	Bonding in retaining plate for manual anti-dazzle interior mirror .....	64
2.12	Removing and installing automatic anti-dazzle interior mirror .....	65
2.13	Removing and installing rain and light sensor G397 .....	67
<b>69 - Passenger protection .....</b>	<b>68</b>	
<b>1</b>	<b>Safety regulations and test methods for pyrotechnic, electrical and mechanical components of the restraint system .....</b>	<b>68</b>
1.1	General safety regulations .....	68
1.2	Storing, transporting and disposing of airbag units, belt tensioner units and battery isolation units (pyrotechnic components) .....	69
1.3	Additional safety regulations for side airbags .....	70
1.4	Additional safety regulations for curtain airbags .....	71
1.5	Safety regulations for crash sensors (pressure sensors) for side airbag (front) .....	71
1.6	Additional safety regulations for working on seat occupied sensor controlling deactivation of front passenger airbag - country-specific version .....	72
1.7	Procedure for dealing with seat occupied sensor controlling deactivation of front passenger airbag following an accident - country-specific version .....	72
1.8	Renewing pyrotechnic, electrical and mechanical components of the restraint system following an accident .....	73
1.9	Checking airbag mounting components following an accident .....	75
1.10	Accident in which airbag was not triggered .....	75
1.11	Checking seat belts .....	75
1.12	Checking belt .....	76
1.13	Checking automatic belt retractor (locking action) .....	76
1.14	Visual inspection of belt buckle .....	77
1.15	Functional check of belt buckle .....	77
1.16	Checking guide fittings and latch plate .....	77
1.17	Checking securing components and anchorage points .....	78
1.18	Checking child seat restraint function for additional child seats (not for driver's seat belt) - country-specific version .....	78
1.19	Checking child seat anchors following an accident (ISOFIX, Top Tether) .....	78
1.20	Checking belt-fastened sensor for three-point seat belts (rear) with belt tensioner .....	79
<b>2</b>	<b>Seat belts - vehicles with 3 doors .....</b>	<b>80</b>
2.1	Exploded view - seat belts .....	80
2.2	Removing and installing outer floor panel anchorage point, guide rail .....	81
2.3	Removing and installing three-point seat belt (front) .....	82
2.4	Anchorage point (belt buckle) .....	84
2.5	Removing and installing belt height adjuster .....	86

2.6	Removing and installing three-point seat belt (rear) . . . . .	88
2.7	Removing and installing belt guide . . . . .	91
2.8	Removing and installing third three-point seat belt (rear) . . . . .	93
2.9	Removing and installing outer floor panel anchorage point (rear) . . . . .	94
2.10	Removing and installing floor panel anchorage points (rear centre) . . . . .	95
<b>3</b>	<b>Seat belts - vehicles with 5 doors</b> . . . . .	<b>97</b>
3.1	Exploded view - seat belts . . . . .	97
3.2	Outer floor panel anchorage point . . . . .	98
3.3	Removing and installing three-point seat belt (front) . . . . .	98
3.4	Anchorage point (belt buckle) . . . . .	101
3.5	Renewing belt buckle for seat occupied recognition system controlling deactivation of front passenger airbag - country-specific version . . . . .	102
3.6	Removing and installing belt height adjuster . . . . .	103
3.7	Removing and installing three-point seat belt (rear) . . . . .	106
3.8	Removing and installing belt guide . . . . .	109
3.9	Removing and installing third rear three-point seat belt . . . . .	111
3.10	Removing and installing outer floor panel anchorage point (rear) . . . . .	112
3.11	Removing and installing floor panel anchorage points (rear centre) . . . . .	113
<b>4</b>	<b>ISOFIX retainers</b> . . . . .	<b>115</b>
4.1	Removing and installing ISOFIX retainers (front) . . . . .	115
4.2	Removing and installing trim caps for ISOFIX retainers (rear) . . . . .	115
<b>5</b>	<b>Servicing airbags</b> . . . . .	<b>116</b>
5.1	Exploded view - airbag, vehicles with 3 doors . . . . .	116
5.2	Exploded view - airbag, vehicles with 5 doors . . . . .	117
5.3	Removing and installing airbag control unit J234 . . . . .	118
5.4	Removing and installing cover for airbag control unit J234 . . . . .	120
5.5	Removing and installing return ring with slip ring . . . . .	120
<b>6</b>	<b>Servicing airbag (driver side) - vehicles up to 05.04</b> . . . . .	<b>124</b>
6.1	Removing and installing airbag unit (driver side) - 4-spoke steering wheel . . . . .	124
6.2	Removing and installing airbag unit (driver side) - 4-spoke steering wheel with multi-function feature / with multi-function feature and tiptronic . . . . .	128
6.3	Removing and installing airbag unit (driver side) - 3-spoke steering wheel, vehicles with and without tiptronic . . . . .	131
6.4	Removing and installing 4-spoke steering wheel . . . . .	134
6.5	Removing and installing 3-spoke steering wheel . . . . .	136
<b>7</b>	<b>Servicing airbag (driver side) - vehicles from 06.04 onwards</b> . . . . .	<b>138</b>
7.1	Exploded view - airbag unit (driver side) . . . . .	138
7.2	Removing and installing airbag unit (driver side) . . . . .	138
7.3	Attaching connector to airbag unit . . . . .	142
7.4	Removing and installing steering wheel . . . . .	143
<b>8</b>	<b>Servicing airbag (front passenger side)</b> . . . . .	<b>144</b>
8.1	Removing and installing airbag (front passenger side) . . . . .	144
8.2	Removing and installing key-operated switch to deactivate airbag on front passenger side E224 . . . . .	148
8.3	Removing and installing warning lamp for airbag deactivated on front passenger side K145 - vehicles up to 05.04 . . . . .	149
8.4	Removing and installing warning lamp for airbag deactivated on front passenger side K145 - vehicles from 06.04 onwards . . . . .	150
<b>9</b>	<b>Servicing side airbag (front)</b> . . . . .	<b>151</b>
9.1	Removing and installing side airbag . . . . .	151
9.2	Cable guide for side airbag (new version; continuous) . . . . .	154
9.3	Cable guide for side airbag (new version; continuous) - seats with electric adjustment . . . . .	155
<b>10</b>	<b>Wiring harness repair set for airbag</b> . . . . .	<b>156</b>
10.1	Installing wiring harness repair set for airbag . . . . .	156
10.2	Installing wiring harness repair set for airbags on backrest . . . . .	157
10.3	Installing wiring harness repair set for airbags on seat pan . . . . .	159

<b>11</b>	<b>Servicing side airbag (rear) - vehicles with 5 doors</b>	<b>161</b>
11.1	Exploded view - side airbag (rear)	161
11.2	Removing and installing side airbag (rear)	161
<b>12</b>	<b>Servicing curtain airbag - vehicles with 3 doors</b>	<b>165</b>
12.1	Removing and installing curtain airbag	165
<b>13</b>	<b>Servicing curtain airbag - vehicles with 5 doors</b>	<b>168</b>
13.1	Removing and installing curtain airbag	168
<b>14</b>	<b>Renewing battery cut-off relay and battery isolation igniter</b>	<b>172</b>
14.1	Fitting location for battery cut-off relay and battery isolation igniter	172
14.2	Removing and installing battery cut-off relay and battery isolation igniter	172
<b>15</b>	<b>Servicing crash sensors for airbags (vehicles with 3 doors)</b>	<b>176</b>
15.1	Overview of fitting locations	176
15.2	Removing and installing crash sensor for front airbags	177
15.3	Removing and installing crash sensor for side airbag (front)	179
15.4	Removing and installing crash sensor for curtain airbag	181
<b>16</b>	<b>Servicing crash sensors for airbags (vehicles with 5 doors)</b>	<b>183</b>
16.1	Overview of fitting locations	183
16.2	Removing and installing crash sensor for front airbags	184
16.3	Removing and installing crash sensor for side airbag (front)	186
16.4	Removing and installing crash sensor for side airbag (rear)	188
<b>17</b>	<b>Belt-fastened recognition system</b>	<b>190</b>
<b>18</b>	<b>Seat occupied recognition system controlling deactivation of front passenger airbag - country-specific version</b>	<b>192</b>
18.1	Exploded view - seat occupied sensor	192
18.2	Removing and installing seat occupied sensor	194
<b>70 - Trim, insulation</b>	<b>198</b>	
<b>1</b>	<b>Door trim (front) - vehicles with 3 doors</b>	<b>198</b>
1.1	Exploded view - door trim (front)	198
1.2	Removing and installing door trim (front)	199
1.3	Removing and installing interior door handle	201
1.4	Removing and installing armrest	201
1.5	Removing and installing mirror adjustment switch	202
1.6	Removing and installing window regulator switch	203
1.7	Removing and installing interior monitor switch E183 and alarm system switch E217	204
1.8	Removing and installing door safety light and entry light	204
1.9	Overview - door trim wiring	205
<b>2</b>	<b>Door trim (front) - vehicles with 5 doors</b>	<b>207</b>
2.1	Exploded view - door trim (front)	207
2.2	Removing and installing central locking switch (front)	208
2.3	Removing and installing trim panel	209
2.4	Removing and installing door trim (front)	209
2.5	Removing and installing interior door handle	211
2.6	Removing and installing armrest	212
2.7	Removing and installing switch mounting	214
2.8	Removing and installing mirror adjustment switch	215
2.9	Removing and installing window regulator switch (driver side)	215
2.10	Removing and installing window regulator switch (passenger side)	216
2.11	Removing and installing interior monitor switch E183 and alarm system switch E217	216
2.12	Removing and installing door safety light and entry light (front)	217
2.13	Removing and installing loudspeaker trim	217
2.14	Overview - door trim wiring	218
<b>3</b>	<b>Door trim (rear) - vehicles with 5 doors</b>	<b>220</b>
3.1	Exploded view - door trim (rear)	220

3.2	Removing and installing trim panel .....	221
3.3	Removing and installing door trim (rear) .....	221
3.4	Removing and installing interior door handle .....	223
3.5	Removing and installing armrest .....	224
3.6	Removing and installing switch mounting .....	225
3.7	Removing and installing window regulator switch .....	226
3.8	Removing and installing door safety light and entry light (rear) .....	226
3.9	Removing and installing loudspeaker trim .....	226
3.10	Overview - door trim wiring .....	227
3.11	Exploded view - sun blind .....	229
3.12	Removing and installing sun blind .....	230
<b>4</b>	<b>Dash panel .....</b>	<b>231</b>
4.1	Overview of fitting locations .....	231
4.2	Removing and installing defroster vent (left-side/right-side) .....	233
4.3	Removing and installing dash panel vent (left-side/right-side) .....	233
4.4	Removing and installing dash panel vent (centre) .....	235
4.5	Removing and installing sunlight penetration photosensor G107 .....	235
4.6	Removing and installing cover for mid-range/treble loudspeaker (centre) .....	235
4.7	Removing and installing central locking warning lamp -SAFE- K133 .....	236
4.8	Removing and installing defroster vent (centre) .....	236
4.9	Removing and installing dash panel end trim (left and right) .....	238
4.10	Removing and installing cover for pre-fitted components for radio installation .....	239
4.11	Removing and installing frame for pre-fitted components for radio installation .....	240
4.12	Removing and installing frame for heater controls .....	240
4.13	Removing and installing centre section .....	240
4.14	Removing and installing dash panel .....	243
<b>5</b>	<b>Central tube .....</b>	<b>250</b>
5.1	Exploded view - central tube I .....	250
5.2	Exploded view - central tube II .....	251
5.3	Removing and installing central tube .....	251
5.4	Removing and installing mounting bracket for central tube .....	257
<b>6</b>	<b>Roof trim - vehicles with 3 doors .....</b>	<b>258</b>
6.1	Exploded view - moulded headliner .....	258
6.2	Removing and installing moulded headliner .....	259
6.3	Attaching roof reinforcement to body - vehicles without sliding sunroof .....	265
6.4	Attaching roof reinforcement to body - vehicles with sunroof .....	265
6.5	Removing sun visor .....	266
6.6	Removing sun visor (centre) .....	267
6.7	Removing and installing grab handle .....	267
<b>7</b>	<b>Roof trim - vehicles with 5 doors .....</b>	<b>268</b>
7.1	Removing and installing moulded headliner .....	269
7.2	Attaching roof reinforcement to body .....	276
7.3	Removing sun visor .....	277
7.4	Removing sun visor (centre) .....	278
7.5	Removing and installing grab handle .....	278
<b>8</b>	<b>Trim - vehicles with three doors .....</b>	<b>280</b>
8.1	Exploded view - A-pillar trim (top) .....	280
8.2	Removing and installing A-pillar trim (top) .....	280
8.3	Removing and installing A-pillar trim (bottom) .....	282
8.4	Removing and installing foot rest cover and foot rest bracket - vehicles with left-hand drive .....	284
8.5	Removing and installing foot rest cover and foot rest bracket - vehicles with right-hand drive .....	285
8.6	Exploded view - B-pillar trim (top) .....	286
8.7	Removing and installing B-pillar trim (top) .....	286

8.8	Exploded view - C-pillar trim . . . . .	287
8.9	Removing and installing C-pillar trim (large section) . . . . .	288
8.10	Removing and installing C-pillar trim (small section) . . . . .	290
8.11	Exploded view - roof end trim . . . . .	290
8.12	Removing and installing roof end trim . . . . .	291
8.13	Removing and installing rear side trim . . . . .	292
8.14	Removing and installing sill panel trim . . . . .	294
8.15	Exploded view - handbrake lever trim . . . . .	295
8.16	Removing and installing handbrake lever trim . . . . .	296
8.17	Removing and installing loudspeaker trim and trim panel of side trim (rear) . . . . .	296
8.18	Removing and installing luggage compartment side trim . . . . .	298
8.19	Removing and installing retainer for luggage compartment side trim . . . . .	299
8.20	Exploded view - luggage compartment floor covering . . . . .	300
8.21	Removing and installing rear cross panel trim - vehicles with front-wheel drive . . . . .	301
8.22	Removing and installing rear cross panel trim - vehicles with four-wheel drive . . . . .	302
8.23	Exploded view - rear shelf . . . . .	303
8.24	Removing and installing sun blind . . . . .	304
8.25	Removing and installing retainers for sun blind . . . . .	304
8.26	Removing and installing securing cord with ball . . . . .	305
8.27	Removing and installing bag hook . . . . .	305
8.28	Removing and installing hook for storage net . . . . .	306
8.29	Removing and installing storage net . . . . .	306
8.30	Removing and installing centre bracket for sun blind . . . . .	306
8.31	Removing and installing fastening rings - vehicles with front-wheel drive . . . . .	307
8.32	Removing and installing fastening rings - vehicles with four-wheel drive . . . . .	308
8.33	Exploded view - rear lid trim . . . . .	310
8.34	Removing and installing rear lid trim (bottom) . . . . .	311
8.35	Removing and installing rear lid trim (top) . . . . .	311
8.36	Removing and installing trim for rear lid lock . . . . .	312
8.37	Removing and installing trim for footwell vent . . . . .	312
8.38	Removing and installing floor covering . . . . .	312
<b>9</b>	<b>Trim - vehicles with five doors . . . . .</b>	<b>315</b>
9.1	Exploded view - A-pillar trim (top) . . . . .	315
9.2	Removing and installing A-pillar trim (top) . . . . .	315
9.3	Removing and installing A-pillar trim (bottom) . . . . .	317
9.4	Removing and installing foot rest cover and foot rest bracket - vehicles with left-hand drive . . . . .	319
9.5	Removing and installing foot rest cover and foot rest bracket - vehicles with right-hand drive . . . . .	320
9.6	Exploded view - B-pillar trim (top) . . . . .	321
9.7	Removing and installing B-pillar trim (top) . . . . .	322
9.8	Removing and installing B-pillar trim (bottom) . . . . .	323
9.9	Exploded view - C-pillar trim (top) . . . . .	325
9.10	Removing and installing C-pillar trim (top) . . . . .	325
9.11	Exploded view - C-pillar trim (bottom) on vehicles without side airbag, vehicles with 5 doors . . . . .	326
9.12	Removing and installing C-pillar trim (bottom) . . . . .	327
9.13	Exploded view - C-pillar trim (bottom) on vehicles with side airbag . . . . .	328
9.14	Removing and installing C-pillar trim (bottom) . . . . .	329
9.15	Exploded view - D-pillar trim . . . . .	330
9.16	Removing and installing D-pillar trim . . . . .	331
9.17	Exploded view - roof end trim . . . . .	333
9.18	Removing and installing roof end trim . . . . .	334
9.19	Removing and installing sill panel trim . . . . .	335
9.20	Exploded view - handbrake lever trim . . . . .	336
9.21	Removing and installing handbrake lever trim . . . . .	337

9.22	Exploded view - luggage compartment side trim . . . . .	337
9.23	Removing and installing luggage compartment side trim . . . . .	338
9.24	Removing and installing retainer for luggage compartment side trim . . . . .	340
9.25	Exploded view - luggage compartment floor covering . . . . .	340
9.26	Exploded view - rear cross panel trim, vehicles with front-wheel drive . . . . .	342
9.27	Exploded view - rear cross panel trim, vehicles with four-wheel drive . . . . .	343
9.28	Removing and installing rear cross panel trim . . . . .	344
9.29	Exploded view - rear shelf . . . . .	344
9.30	Removing and installing sun blind . . . . .	346
9.31	Removing and installing retainers for sun blind . . . . .	346
9.32	Removing and installing securing cord with ball . . . . .	347
9.33	Removing and installing bag hook . . . . .	347
9.34	Removing and installing hook for storage net . . . . .	348
9.35	Removing and installing storage net . . . . .	348
9.36	Removing and installing centre bracket for sun blind . . . . .	348
9.37	Removing and installing fastening rings - vehicles with front-wheel drive . . . . .	349
9.38	Removing and installing fastening rings - vehicles with four-wheel drive . . . . .	350
9.39	Exploded view - rear lid trim . . . . .	352
9.40	Removing and installing rear lid trim (bottom) . . . . .	353
9.41	Removing and installing rear lid trim (top) . . . . .	353
9.42	Removing and installing trim for rear lid lock . . . . .	354
9.43	Removing and installing trim for footwell vent . . . . .	354
9.44	Removing and installing floor covering . . . . .	354
<b>72 - Seat frames</b> . . . . .	<b>357</b>	
<b>1</b>	<b>Front seats - vehicles with 3 doors</b> . . . . .	<b>357</b>
1.1	Removing and installing seat . . . . .	357
1.2	Unplugging connectors (body end) . . . . .	359
1.3	Connecting airbag adapter VAS 6235 . . . . .	360
1.4	Removing and installing seat rail covers . . . . .	363
1.5	Removing and installing front seat backrest . . . . .	364
1.6	Cable guide for side airbag (new version) on seats with manual adjustment . . . . .	369
1.7	Removing and installing side trim (sill side) . . . . .	370
1.8	Removing and installing retaining bracket for side trim (sill side) . . . . .	371
1.9	Removing and installing seat height adjuster . . . . .	372
1.10	Removing and installing backrest adjuster . . . . .	373
1.11	Removing and installing side trim (tunnel side) . . . . .	374
1.12	Removing and installing four-way lumbar support switch . . . . .	374
1.13	Removing and installing seat height adjustment unit . . . . .	375
1.14	Removing and installing Bowden cable for Easy Entry system . . . . .	377
1.15	Exploded view - backrest cover . . . . .	378
1.16	Removing and installing backrest cover panel . . . . .	378
1.17	Removing and installing four-way lumbar support . . . . .	380
1.18	Removing and installing motors for lumbar support adjustment . . . . .	383
1.19	Removing and installing Easy Entry system . . . . .	384
1.20	Removing and installing retainer for Easy Entry system . . . . .	384
1.21	Removing and installing Bowden cable for locking backrest . . . . .	385
1.22	Removing and installing head restraint with slide-in locking mechanism . . . . .	386
1.23	Seat pan: cable routing . . . . .	387
1.24	Backrest: cable routing . . . . .	388
<b>2</b>	<b>Front seats (with manual adjustment) - vehicles with 5 doors</b> . . . . .	<b>389</b>
2.1	Exploded view - front seat . . . . .	389
2.2	Attaching front seat to seat repair stand VAS 6136 . . . . .	389
2.3	Removing and installing front seat (with manual adjustment) . . . . .	390
2.4	Unplugging and plugging in connectors . . . . .	392
2.5	Connecting airbag adapter . . . . .	394



2.6	Removing and installing seat rail covers . . . . .	395
2.7	Exploded view - backrest adjuster wheel, seat height adjuster, side trim (sill side), retaining bracket, side trim (tunnel side) . . . . .	396
2.8	Removing and installing backrest adjuster . . . . .	397
2.9	Removing and installing seat height adjuster . . . . .	398
2.10	Removing and installing side trim (sill side) . . . . .	399
2.11	Removing and installing retaining bracket for side trim (sill side) . . . . .	400
2.12	Removing and installing side trim (tunnel side) . . . . .	401
2.13	Exploded view - backrest . . . . .	403
2.14	Removing and installing backrest cover panel . . . . .	404
2.15	Removing and installing backrest . . . . .	405
2.16	Exploded view - spring mat . . . . .	408
2.17	Removing and installing spring mat . . . . .	409
2.18	Exploded view - four-way lumbar support (version 1) . . . . .	411
2.19	Removing and installing four-way lumbar support (version 1) . . . . .	412
2.20	Exploded view - four-way lumbar support (version 2) . . . . .	415
2.21	Removing and installing four-way lumbar support (version 2) . . . . .	416
2.22	Removing and installing lumbar support adjustment motor (version 2) . . . . .	418
2.23	Removing and installing lumbar support adjustment switch . . . . .	418
2.24	Exploded view - head restraint . . . . .	418
2.25	Removing and installing head restraint with slide-in locking mechanism . . . . .	419
2.26	Exploded view - seat pan, seat height adjuster unit . . . . .	420
2.27	Renewing seat pan . . . . .	421
2.28	Removing and installing seat height adjustment unit . . . . .	422
2.29	Removing and installing hinged compartment with retainer . . . . .	424
<b>3</b>	<b>Front seats (with electric adjustment) - vehicles with 5 doors</b> . . . . .	<b>426</b>
3.1	Exploded view - front seat . . . . .	426
3.2	Attaching front seat to seat repair stand VAS 6136 . . . . .	426
3.3	Removing and installing front seat (with electric adjustment) . . . . .	427
3.4	Removing front seat if seat longitudinal adjustment motor is defective . . . . .	429
3.5	Unplugging and plugging in connectors . . . . .	430
3.6	Connecting airbag adapter . . . . .	430
3.7	Removing and installing seat rail covers . . . . .	430
3.8	Exploded view - side trim (sill side), retaining bracket, side trim (tunnel side) . . . . .	430
3.9	Removing and installing side trim (sill side) . . . . .	432
3.10	Removing and installing retaining bracket for side trim (sill side) . . . . .	433
3.11	Removing and installing side trim (tunnel side) . . . . .	433
3.12	Exploded view - backrest . . . . .	433
3.13	Removing and installing backrest cover panel . . . . .	434
3.14	Removing and installing backrest . . . . .	434
3.15	Overview of electrical and electronic components . . . . .	437
3.16	Exploded view - four-way lumbar support (version 1) . . . . .	439
3.17	Removing and installing four-way lumbar support (version 1) . . . . .	439
3.18	Exploded view - four-way lumbar support (version 2) . . . . .	439
3.19	Removing and installing four-way lumbar support (version 2) . . . . .	439
3.20	Removing and installing lumbar support adjustment motor (version 2) . . . . .	439
3.21	Exploded view - seat pan, motors for seat longitudinal, rake and height adjustment . . . . .	440
3.22	Dismantling and assembling seat pan . . . . .	441
3.23	Removing and installing seat rake adjustment motor . . . . .	444
3.24	Removing and installing seat longitudinal adjustment motor . . . . .	445
3.25	Removing and installing seat height adjustment motor . . . . .	447
3.26	Removing and installing toothed segment for seat height adjustment . . . . .	449
3.27	Exploded view - backrest adjustment motor . . . . .	451
3.28	Removing and installing backrest adjustment motor . . . . .	452
3.29	Exploded view - lumbar support adjustment switch, seat adjustment actuator, switch for seat longitudinal, rake, height and backrest adjustment . . . . .	454

3.30	Removing and installing lumbar support adjustment switch .....	455
3.31	Removing and installing seat adjustment actuator .....	455
3.32	Removing and installing backrest adjustment actuator .....	456
3.33	Removing and installing seat longitudinal, rake, height and backrest adjustment switches .....	457
<b>4</b>	<b>Front seats (bucket seats) .....</b>	<b>458</b>
4.1	Attaching front seat to seat repair stand VAS 6136 .....	458
4.2	Removing and installing seat .....	458
4.3	Removing and installing seat rail cover .....	459
4.4	Unplugging electrical connectors .....	460
4.5	Removing and installing side trim panels .....	461
4.6	Removing and installing backrest adjuster knob .....	463
4.7	Removing and installing seat height adjuster .....	463
4.8	Removing and installing backrest and seat pan (front) .....	464
4.9	Removing and installing seat height adjustment unit .....	466
4.10	Removing and installing backrest cover panels .....	467
4.11	Exploded view - operating cable for locking backrest .....	469
4.12	Removing and installing operating cable for locking backrest .....	471
4.13	Adjusting operating cables for locking backrest .....	473
<b>5</b>	<b>Rear seats .....</b>	<b>474</b>
5.1	Removing and installing rear seat bench .....	474
5.2	Exploded view - 1/3 section of backrest (left-side) and 2/3 section of backrest (right-side) without centre armrest .....	474
5.3	Exploded view - 2/3 section of backrest (right-side) with centre armrest .....	476
5.4	Removing and installing 1/3 section of backrest (left-side) / 2/3 section of backrest (right-side) .....	477
5.5	Removing and installing centre armrest .....	477
5.6	Removing and installing intermediate padding for centre armrest .....	478
5.7	Removing and installing cup holder .....	478
5.8	Removing and installing load-through hatch .....	479
5.9	Removing and installing outer head restraint .....	479
5.10	Removing and installing centre head restraint .....	480
5.11	Removing and installing latch trim .....	480
5.12	Removing and installing latch .....	480
5.13	Removing and installing belt guide .....	481
5.14	Removing and installing trim caps for ISOFIX retainers .....	481
<b>74 - Seat - padding, covers .....</b>	<b>482</b>	
<b>1</b>	<b>Front seat covers and padding - vehicles with 3 or 5 doors .....</b>	<b>482</b>
1.1	Removing and installing seat pan cover and padding .....	482
1.2	Detaching seat pan cover from padding .....	483
1.3	Cutting slots in fabric cover for ISOFIX retainer .....	484
1.4	Removing and installing backrest cover and padding .....	484
1.5	Detaching seat cover from backrest padding .....	486
1.6	Removing and installing head restraint guides without and with release button .....	487
1.7	Removing and installing seat heating elements (bonded) .....	488
1.8	Removing and installing backrest heating elements (bonded) .....	489
1.9	Removing and installing head restraint cover and padding .....	489
<b>2</b>	<b>Front bucket seat covers and padding .....</b>	<b>491</b>
2.1	Removing and installing seat pan cover and padding .....	491
2.2	Removing and installing backrest cover and padding .....	492
2.3	Removing and installing seat heating elements .....	494
2.4	Removing and installing backrest heating element .....	494
<b>3</b>	<b>Covers and padding on rear seats .....</b>	<b>495</b>
3.1	Removing and installing seat bench cover and padding .....	495

3.2	Removing and installing cover and padding for split backrest (rear): 1/3 section of backrest (left-side) .....	496
3.3	Detaching cover from padding on 1/3 section of backrest (left-side) .....	497
3.4	Removing and installing cover and padding for split backrest (rear): 2/3 section of backrest (right-side) without centre armrest .....	498
3.5	Detaching cover from padding on 2/3 section of backrest (right-side) without centre armrest .....	499
3.6	Exploded view - cover and padding for split backrest (rear): 2/3 section of backrest (right-side) with centre armrest .....	500
3.7	Removing and installing padding on 2/3 section of backrest (right-side) with centre armrest .....	500
3.8	Detaching cover from padding on 2/3 section of backrest (right-side) - vehicles with centre armrest .....	502
3.9	Removing and installing head restraint cover and padding .....	502