

Contents

00 - Technical data	1
1 Safety briefing/employee qualification	1
1.1 Qualification	1
2 Safety precautions	2
2.1 Safety precautions	2
2.2 Safety precautions when working on the cooling system	4
2.3 Safety precautions when using testers and measuring instruments during a road test	4
3 Repair instructions	5
3.1 Important notes	5
3.2 General notes	5
3.3 Information on handling fine dust, aluminium dust and steel dust	6
3.4 Routing and attachment of pipes, hoses and wiring	7
3.5 Contact corrosion	7
3.6 Bonding surfaces for adhesive strips	7
3.7 Self-locking bolts	7
3.8 Identification plates	7
3.9 Impact wrenches	8
3.10 Moulded foam inserts	8
3.11 Bonded joints	10
3.12 Repair methods for bonded joints	11
3.13 Repairing thread for seat belt anchorage	20
3.14 Renewing studs	21
3.15 Thread repair for M6 pop rivet nut	22
3.16 Corrosion protection	22
3.17 Matching the surface contour	23
4 Vehicle identification data	25
4.1 Type plate and vehicle identification number	25
4.2 Vehicle data sticker	25
5 Using edge milling unit -VAS 882 005-	26
5.1 General information	26
5.2 Assembling unit/changing milling tool	29
5.3 Separating flanged edges	39
5.4 Separating panels at corners and along surfaces	45
5.5 Separating outer edges	48
5.6 Roof - Renewal	51
5.7 Separating laser weld seams using round head milling unit	53
5.8 Aluminium panels	55
6 Processing body structure adhesive D 180 004 M2	58
6.1 Preparing bonding surfaces	59
7 Extraction systems for steel/aluminium body repair station ("multi-material-mix" workplace)	73
8 Body dimensions	75
8.1 Floor group, front	75
8.2 Floor group, centre	76
8.3 Floor group, rear	77
8.4 Body - front	78
8.5 Body - centre	81
8.6 Body - rear	84
9 Body panel gaps/shut lines	86
9.1 Body - front and centre	86
9.2 Body - rear	87



10	Tools	89
11	Straightening jig	93
11.1	Procedure for repairing structural body damage on Audi vehicles	93
11.2	Setting up straightening jig	93
11.3	Portal gauge	107
50	Body - front	113
1	Safety precautions	113
2	Support bracket (right-side) - Renewal	114
2.1	Tools	114
2.2	Procedure	114
3	Support bracket (right-side) - Renewal (RS 3 only)	118
3.1	Tools	118
3.2	Procedure	118
4	Support bracket (left-side) - Renewal	124
4.1	Tools	124
4.2	Procedure	125
5	Front bumper bracket - Renewal	129
5.1	Tools	129
5.2	Procedure	129
6	Upper wheel housing longitudinal member - Renewal	132
6.1	Tools	132
6.2	Procedure	132
7	Upper inner longitudinal member for wheel housing - Renewal	135
7.1	Tools	135
7.2	Procedure	135
8	Front longitudinal member - Renewal	138
8.1	Tools	138
8.2	Procedure	139
9	Front longitudinal member - Partial renewal	146
9.1	Tools	147
9.2	Procedure	147
10	Mounting bracket (for subframe) - Renewal	151
10.1	Tools	151
10.2	Procedure	151
51	Body - centre	159
1	Safety precautions	159
2	Roof - Renewal	160
2.1	Tools	160
2.2	Procedure	160
3	Roof (5-door) - Renewal	166
3.1	Tools	166
3.2	Procedure	166
4	Roof side member - Renewal	176
4.1	Tools	176
4.2	Procedure	176
5	Roof side member (5-door) - Renewal	181
5.1	Tools	181
5.2	Procedure	181
6	Cross panel - Renewal	185
6.1	Tools	185
6.2	Procedure	185

7	Front roof cross member - Renewal	188
7.1	Tools	188
7.2	Procedure	188
8	Rear roof frame - Renewal	190
8.1	Tools	190
8.2	Procedure	190
9	A-pillar - Renewal	192
9.1	Tools	192
9.2	Procedure	192
10	Inner A-pillar - Renewal	195
10.1	Tools	195
10.2	Procedure	195
11	Inner B-pillar - Renewal	198
11.1	Tools	198
11.2	Procedure	198
12	Inner B-pillar (5-door) - Renewal	201
12.1	Tools	201
12.2	Procedure	201
13	Outer side member (2-door) - Renewal	205
13.1	Tools	205
13.2	Procedure	205
14	Outer side member (5-door) - Renewal	208
14.1	Tools	209
14.2	Procedure	210
15	Inner side member - Renewal	214
15.1	Tools	214
15.2	Procedure	214
16	Inner side member (5-door) - Renewal	217
16.1	Tools	217
16.2	Procedure	218
53 - Body - rear		221
1	Safety precautions	221
2	Rear upper cross panel - Renewal	222
2.1	Tools	222
2.2	Procedure	222
3	Inner cross panel - Renewal	225
3.1	Tools	225
3.2	Procedure	225
4	Tail light mounting - Renewal	227
4.1	Tools	227
4.2	Procedure	228
5	Luggage compartment floor - Renewal (includes operations for RS 3)	232
5.1	Tools	232
5.2	Procedure	233
6	Rear longitudinal member - Partial renewal	239
6.1	Tools	239
6.2	Procedure	240
7	Side panel - Renewal	245
7.1	Tools	245
7.2	Procedure	245
8	Side panel (5-door) - Renewal (includes drip rail)	249
8.1	Cutting locations	249



8.2	Procedure	250
9	Side panel (5-door) - Renewal (operations for RS 3 only)	255
9.1	Cutting locations	255
9.2	Procedure	256
10	Rear wheel housing - Partial renewal	262
10.1	Tools	263
10.2	Procedure	263