

Contents

82	Auxiliary heating	1
1	Servicing auxiliary heater	1
1.1	Contact corrosion	1
1.2	Notes on auxiliary heater	1
1.3	Notes on operation of auxiliary heater with biodiesel (vehicles with diesel engine only) ..	3
2	Safety precautions when working on vehicles fitted with auxiliary heater	4
3	Notes on general repair work on vehicles fitted with auxiliary heater	5
4	Rules for cleanliness when working on auxiliary heater (and fuel system)	6
5	Layout of components for auxiliary heater in vehicle	7
5.1	Auxiliary heater remote control buttons and indicator lamp	13
5.2	Checking and replacing batteries in hand-held transmitter for auxiliary heater remote control	16
5.3	Adapting hand-held transmitter for remote control in auxiliary heater control unit J364 ..	16
5.4	Switching auxiliary heating/ventilation on and off via dash panel insert	17
6	Fuel extraction for auxiliary heater	25
6.1	Components for fuel extraction for auxiliary heater	25
6.2	Removing and installing fuel extraction pipe	31
6.3	Removing and installing fuel extraction pipe	34
6.4	Removing and installing metering pump V54	36
6.5	Checking operation of fuel shut-off valve N109	40
6.6	Routing of fuel pipe to auxiliary heater	41
6.7	Checking fuel delivery volume of metering pump V54	41
7	Checking and adjusting CO₂ content in exhaust gas of auxiliary heater	50
7.1	Checking and adjusting CO ₂ content in exhaust gas of auxiliary heater	50
7.2	Checking CO ₂ content in exhaust gas of auxiliary heater	51
7.3	Adjusting CO ₂ content in exhaust gas of auxiliary heater	55
7.4	Checking components of auxiliary heater	61
8	Functional description of auxiliary heater	69
8.1	Functional description of auxiliary heater	70
8.2	Control sequence on start-up of auxiliary heater (also as additional heater)	79
8.3	Auxiliary heater control sequence on load change (from full to part-load mode and vice versa)	83
8.4	Control sequence on shutoff of auxiliary heater	86
8.5	Auxiliary heater temperature control curve	87
9	Incorporation of auxiliary heater into coolant circuit	89
9.1	Incorporation of auxiliary heater on vehicles with heater coolant shut-off valve N279	89
9.2	Operation of heater coolant shut-off valve N279 , removing and installing	91
9.3	Non-return valve in coolant hose	93
9.4	Incorporation of auxiliary heater on vehicles without heater coolant shut-off valve N279	93
9.5	Bleeding coolant circuit	94
10	Removing and installing auxiliary heater	96
10.1	Examples for assignment of different part numbers and versions	97
10.2	Removing and installing auxiliary heater	100
11	Dismantling and assembling auxiliary heater	109
11.1	Detaching and re-attaching add-on components at auxiliary heater	109
11.2	Removing and installing circulation pump V55	112
11.3	Dismantling and assembling auxiliary heater	113
11.4	Design of auxiliary heater control unit J364 and combustion air blower V6	118
11.5	Checking installation position of glow plug with flame monitor Q8	119
11.6	Attaching connection for coolant hoses to auxiliary heater	120
11.7	Removing and installing combustion air intake manifold	120



11.8	Assembling burner housing with heat exchanger and outer casing	121
11.9	Assembling auxiliary heater control unit J364 and burner element	121
11.10	Removing and installing overheating fuse S24 / overheating sensor G189 and temperature sensor G18	123
12	Block diagram of auxiliary heater	125
12.1	Assignment of connector console at auxiliary heater control unit J364	125
13	Activation of auxiliary heater with remote control	128
13.1	Block diagram of auxiliary heater activation with remote control	128
13.2	Fitting location for remote control receiver for auxiliary heater R64	132