

Contents

00 - Technical data	1
1 Gearbox identification	1
1.1 Code, allocation, transmission ratios, capacities	2
2 Overview - power transmission	4
3 Calculating ratio "i"	5
4 General repair instructions	6
5 Safety precautions for vehicles with start/stop system	12
6 Overview of fitting locations - electrical components	13
6.1 Overview of fitting locations - electrical components, manual gearbox	13
6.2 Overview of fitting locations - electrical components, clutch mechanism	14
30 - Clutch	15
1 Overview - clutch mechanism	15
2 Notes on removing and installing clutch master cylinder and slave cylinder	16
2.1 Function check for clutch master cylinder and slave cylinder	16
3 Exploded view - pedal cluster, clutch master cylinder	18
3.1 Removing and installing over-centre spring	20
3.2 Removing and installing clutch pedal	23
3.3 Removing and installing mounting bracket	26
3.4 Removing and installing clutch position sender G476	32
3.5 Removing and installing clutch master cylinder	35
4 Exploded view - hydraulics (LHD)	38
4.1 Removing and installing clutch slave cylinder	41
4.2 Removing and installing pipe/hose assembly	48
5 Exploded view - hydraulics (RHD)	52
6 Bleeding clutch system	55
7 Exploded view - clutch release mechanism	57
8 Overview - servicing clutch	60
8.1 Clutch identification	60
8.2 Exploded view - Sachs version clutch	61
8.3 Removing and installing clutch (Sachs version)	63
8.4 Exploded view - LuK version clutch	67
8.5 Removing and installing clutch (LuK version)	69
34 - Controls, housing	74
1 Overview - selector mechanism	74
1.1 Exploded view - gear knob and gear lever boot	75
1.2 Removing and installing gear knob with gear lever boot	76
1.3 Separating gear lever boot from gear knob	78
1.4 Exploded view - gear lever and selector housing on vehicles up to model year 2008	78
1.5 Exploded view - selector mechanism, vehicles from model year 2008 onwards	81
1.6 Removing and installing selector mechanism	83
1.7 Dismantling and assembling selector mechanism on vehicles from model year 2008 onwards	91
1.8 Exploded view - gear selector cable and gate selector cable, vehicles up to model year 2007	98
1.9 Exploded view - gear selector cable and gate selector cable, vehicles from model year 2008 onwards	103
1.10 Removing and installing gear selector cable and gate selector cable	111
1.11 Adjusting selector mechanism	113
2 Removing and installing gearbox	117



2.1	Removing gearbox - vehicles with 1.8 ltr. TFSI engine	117
2.2	Removing gearbox - vehicles with 2.0 ltr. FSI engine	130
2.3	Installing gearbox - vehicles with 1.8 ltr. TFSI engine	142
2.4	Installing gearbox - vehicles with 2.0 ltr. FSI engine	152
3	Transporting gearbox	163
4	Exploded view - assembly mountings	165
4.1	Removing and installing gearbox mounting	167
4.2	Removing and installing pendulum support	171
4.3	Removing and installing gearbox bracket	172
5	Checking gear oil level and filling up with gear oil	178
5.1	Checking gear oil level	178
5.2	Draining off gear oil	178
5.3	Filling up with gear oil	181
6	Dismantling and assembling gearbox	183
6.1	General layout of gearbox	183
6.2	Exploded view - dismantling and assembling gearbox	183
6.3	Exploded view - removing and installing gearbox housing cover and 5th/6th gear	184
6.4	Exploded view - removing and installing gearbox housing and selector mechanism	188
6.5	Exploded view - removing and installing input shaft, output shaft, differential and selector forks	190
6.6	Assembly sequence - removing and installing gearbox housing cover and 5th/6th gear	192
6.7	Assembly sequence - dismantling and assembling complete gearbox	200
7	Exploded view - gearbox housing and clutch housing	227
7.1	Servicing gearbox housing and clutch housing	229
8	Removing and installing gearbox neutral position sender G701	236
9	Exploded view - gearbox housing cover	238
9.1	Servicing gearbox housing cover	238
10	Exploded view - servicing selector unit	243
10.1	Dismantling and assembling selector unit	244
11	Exploded view - selector forks	247
11.1	Exploded view - selector forks in conjunction with reverse selector gear arrow	247
11.2	Exploded view - selector forks in conjunction with locking collar for reverse gear arrow	249
11.3	Dismantling and assembling selector forks	250
35 - Gears, shafts		255
1	Input shaft	255
1.1	Exploded view - input shaft	255
1.2	Dismantling and assembling input shaft	258
1.3	Adjusting input shaft	266
2	Output shaft	271
2.1	Exploded view - output shaft	271
2.2	Dismantling and assembling output shaft	274
2.3	Adjusting output shaft	288
3	Reverse shaft	293
3.1	Exploded view - reverse shaft with reverse selector gear arrow	293
3.2	Exploded view - reverse shaft with locking collar for reverse gear arrow	294
3.3	Dismantling and assembling reverse shaft	295
39 - Final drive - front differential		299
1	Renewing oil seals for flange shafts with gearbox installed in vehicle	299
1.1	Renewing oil seal for flange shaft (left-side)	299
1.2	Identification of flange shaft oil seals (right-side)	302
1.3	Renewing flange shaft oil seal (right-side) - two-piece oil seal and sleeve	303

1.4	Renewing oil seal together with sleeve (one-piece sleeve and flange shaft oil seal (right-side))	308
2	Table of adjustments	313
3	Differential	314
3.1	Exploded view - differential	314
3.2	Dismantling and assembling differential	316
3.3	Adjusting differential	324