



Contents

00 - Technical data	1
1 Gearbox identification	1
2 Technical data	2
2.1 Code letters, allocation, transmission ratios	2
2.2 Capacities	6
2.3 Calculating ratio "i"	6
3 Transmission layout	8
4 Safety precautions	10
4.1 Safety precautions when working on vehicles with start/stop system	10
5 Repair instructions	11
5.1 Contact corrosion	11
5.2 General repair instructions	11
30 - Clutch	16
1 Overview - clutch mechanism	16
1.1 Notes on removing and installing clutch master cylinder and slave cylinder	16
1.2 Function check for clutch master cylinder and slave cylinder	17
2 Exploded view - pedal cluster, clutch master cylinder	19
2.1 Removing and installing over-centre spring	20
2.2 Removing and installing clutch pedal	22
2.3 Removing and installing mounting bracket	24
2.4 Removing and installing clutch position sender G476	28
2.5 Removing and installing clutch master cylinder	30
3 Exploded view - hydraulics, left-hand drive vehicles	33
3.1 Removing and installing pipe/hose assembly or plastic pipe	35
3.2 Exploded view - hydraulics, right-hand drive vehicles	38
4 Bleeding clutch system	41
5 Exploded view - clutch release mechanism, slave cylinder	43
5.1 Removing and installing clutch slave cylinder together with release bearing	43
6 Clutch identification	45
7 Exploded view - Sachs version clutch	47
7.1 Removing and installing clutch (Sachs version)	49
8 Exploded view - LuK version clutch	53
8.1 Removing and installing clutch (LuK version)	55
34 - Controls, housing	58
1 Overview - selector mechanism	58
1.1 Exploded view - gear knob with gear lever boot	60
1.2 Removing and installing gear knob with gear lever boot	60
1.3 Separating gear lever boot from gear knob	61
1.4 Exploded view - selector mechanism, vehicles up to model year 2008	62
1.5 Exploded view - selector mechanism, vehicles from model year 2009 onwards	64
1.6 Removing and installing selector mechanism	65
1.7 Exploded view - gear selector cable and gate selector cable, vehicles up to model year 2008	69
1.8 Exploded view - gear selector cable and gate selector cable, vehicles from model year 2009 onwards	73
1.9 Dismantling and assembling selector mechanism	77
1.10 Removing and installing gear selector cable and gate selector cable	83
1.11 Adjusting selector mechanism	84
2 Removing and installing gearbox	87



2.1	Removing gearbox - vehicles with 1.8 ltr. and 2.0 ltr. FSI turbocharged engine	87
2.2	Installing gearbox - vehicles with 1.8 ltr. and 2.0 ltr. FSI turbocharged engine	101
2.3	Removing gearbox - vehicles with 2.0 ltr. TDI engine (unit injector)	108
2.4	Installing gearbox - vehicles with 2.0 ltr. TDI engine (unit injector)	120
2.5	Removing gearbox - vehicles with 2.0 ltr. TDI engine (common rail)	126
2.6	Installing gearbox - vehicles with 2.0 ltr. TDI engine (common rail)	141
2.7	Transporting gearbox	147
3	Exploded view - assembly mountings	150
3.1	Removing and installing gearbox mounting	153
3.2	Removing and installing pendulum support	155
4	Gear oil	157
4.1	Distinguishing manual gearboxes for oil filling	157
4.2	Checking gear oil level	157
5	Exploded view - selector unit	162
5.1	Renewing oil seal for selector shaft	162
5.2	Removing and installing selector unit	165
6	Dismantling and assembling gearbox	167
7	Gearbox housing, clutch housing	168
35	Gears, shafts	169
1	Input shaft	169
2	Output shaft	170
39	Final drive - differential	171
1	Oil seals	171
1.1	Overview of fitting locations - oil seals	171
1.2	Renewing flange shaft oil seal (left-side)	172
1.3	Renewing stub shaft oil seal (right-side) - up to gearbox manufacturing date 31 10 4	175
1.4	Renewing flange shaft oil seal (right-side) - from gearbox manufacturing date 01 11 4 onwards	179
1.5	Renewing input shaft oil seal	182
2	Differential	184