

Contents

00 - Technical data	1
1 Identification	1
1.1 Gearbox identification, four-wheel drive	1
1.2 Bevel box identification	2
2 Technical data	3
2.1 Code, allocation, transmission ratios, capacities	3
2.2 Capacities	7
2.3 Calculating gear ratios	7
3 Overview - power transmission	9
4 Safety information	11
4.1 Safety precautions when working on vehicles with start/stop system	11
4.2 Safety precautions when using testers and measuring instruments during a road test	11
5 Repair instructions	12
5.1 Contact corrosion	12
5.2 Use of impact wrenches	12
5.3 General repair instructions	13
6 Electrical components	20
6.1 Overview of fitting locations - electrical components	20
30 - Clutch	21
1 Overview - clutch mechanism	21
1.1 Notes on removing and installing clutch master cylinder and slave cylinder	21
1.2 Function check for clutch master cylinder and slave cylinder	22
2 Assembly overview - pedal cluster, clutch master cylinder	24
2.1 Removing and installing over-centre spring	26
2.2 Removing and installing clutch pedal	29
2.3 Removing and installing mounting bracket	32
2.4 Removing and installing clutch position sender G476	37
2.5 Removing and installing clutch master cylinder	38
3 Assembly overview - hydraulics, right-hand drive vehicles	42
4 Assembly overview - hydraulics, left-hand drive vehicles	45
4.1 Removing and installing pipe/hose assembly or plastic pipe	49
4.2 Bleeding clutch system	53
5 Assembly overview - clutch release mechanism, slave cylinder	56
5.1 Removing and installing clutch slave cylinder together with release bearing	57
6 Clutch identification	59
7 Assembly overview - Sachs version clutch	61
7.1 Removing and installing clutch (Sachs version)	64
8 Assembly overview - LuK version clutch	68
8.1 Removing and installing clutch (LuK version)	70
34 - Controls, housing	75
1 Overview - selector mechanism	75
1.1 Assembly overview - gear knob and gear lever boot	76
1.2 Removing and installing gear knob with gear lever boot	77
1.3 Separating gear lever boot from gear knob	79
1.4 Assembly overview - gear lever and selector housing on vehicles up to model year 2008	79
1.5 Assembly overview - selector mechanism, vehicles from model year 2009 onwards	82
1.6 Removing and installing selector mechanism	84
1.7 Assembly overview - gear selector cable and gate selector cable, vehicles up to model year 2008	90



1.8	Assembly overview - gear selector cable and gate selector cable, vehicles from model year 2009 onwards	95
1.9	Dismantling and assembling selector mechanism on vehicles from model year 2009 onwards	102
1.10	Removing and installing gear selector cable and gate selector cable	108
1.11	Adjusting selector mechanism	110
1.12	Checking gear lever setting	113
2	Removing and installing gearbox	114
2.1	Removing gearbox - vehicles with TFSI engine	114
2.2	Removing gearbox - vehicles with V6-FSI engine	130
2.3	Removing gearbox - vehicles with TDI engine	145
2.4	Installing gearbox	163
2.5	Tightening torques (installing gearbox)	170
3	Transporting gearbox	174
4	Assembly overview - assembly mountings	176
4.1	Removing and installing gearbox mounting	180
4.2	Removing and installing pendulum support	188
5	Gear oil	191
5.1	Distinguishing manual gearboxes for oil filling	191
5.2	Checking gear oil level	192
6	Removing and installing bevel box	198
6.1	Removing bevel box - vehicles with petrol engine	198
6.2	Removing bevel box - vehicles with diesel engine	203
6.3	Installing bevel box	209
7	Assembly overview - selector unit	215
7.1	Renewing selector shaft oil seal	215
7.2	Removing and installing selector unit (gearbox installed)	218
8	Dismantling and assembling gearbox	221
9	Gearbox housing, clutch housing	222
35 - Gears, shafts		223
1	Input shaft	223
2	Output shaft	224
39 - Final drive - front differential		225
1	Oil seals	225
1.1	Overview of fitting locations - oil seals and flange shaft on gearbox	225
2	Renewing input shaft oil seal	232
3	Overview of fitting locations - oil seals and flange shaft on bevel box	234
3.1	Removing and installing flange shaft (right-side)	236
3.2	Renewing flange shaft oil seal (right-side) at bevel box (outer)	238
3.3	Renewing needle bearings (polygon bearings) for flange shaft (right-side)	239
3.4	Renewing oil seal between gearbox and bevel box (on bevel box)	242
3.5	Renewing oil seal for bevel box output flange	243
4	Gear oil	244
4.1	Checking gear oil level	244
4.2	Draining and filling gear oil	245
5	Differential	251
6	Propshaft	252
7	Rear final drive	253