

Contents

00 - Technical data	1
1 Gearbox identification	1
1.1 Code, allocation, capacities	2
2 Overview - power transmission	3
3 Calculating ratio "i"	5
4 General repair instructions	6
4.1 Contact corrosion	10
30 - Clutch	11
1 Overview - clutch mechanism	11
1.1 Notes on removing and installing clutch master cylinder and slave cylinder	11
1.2 Function check for clutch master cylinder and slave cylinder	12
2 Assembly overview - pedal cluster, clutch master cylinder	14
2.1 Removing and installing over-centre spring	16
2.2 Removing and installing clutch pedal	19
2.3 Removing and installing mounting bracket	22
2.4 Removing and installing clutch position sender G476	26
2.5 Removing and installing clutch master cylinder	27
3 Assembly overview - hydraulics, left-hand drive vehicles	30
3.1 Assembly overview - hydraulics, right-hand drive vehicles	33
3.2 Removing and installing clutch slave cylinder	35
3.3 Removing and installing pipe/hose assembly or plastic pipe	37
3.4 Bleeding clutch system	40
4 Assembly overview - servicing clutch release mechanism	42
4.1 Removing and installing clutch release bearing with release lever and guide sleeve	42
5 Assembly overview - servicing clutch	45
5.1 Removing and installing clutch	46
34 - Controls, housing	51
1 Overview - selector mechanism	51
1.1 Assembly overview - gear knob with gear lever boot	51
1.2 Removing and installing gear knob with gear lever boot	52
1.3 Separating gear lever boot from gear knob	53
1.4 Assembly overview - gear lever and selector housing on vehicles up to model year 2007	54
1.5 Assembly overview - selector mechanism, vehicles from model year 2008 onwards	57
1.6 Dismantling and assembling selector mechanism on vehicles from model year 2008 onwards	59
1.7 Removing and installing selector mechanism	64
1.8 Assembly overview - gear selector cable and gate selector cable, vehicles up to model year 2007	71
1.9 Assembly overview - gear selector cable and gate selector cable, vehicles from model year 2008 onwards	76
1.10 Removing and installing gear selector cable and gate selector cable	82
1.11 Adjusting selector mechanism	84
2 Removing and installing gearbox	88
2.1 Removing gearbox - vehicles with 1.2 ltr. TFSI engine	88
2.2 Removing gearbox - vehicles with 1.4 ltr. TFSI engine	96
2.3 Installing gearbox	108
2.4 Transporting gearbox	115
2.5 Assembly mountings - exploded view	116
3 Checking gearbox oil	124
4 Securing to engine and gearbox support	126



5	Dismantling and assembling gearbox	127
5.1	General layout of gearbox	127
5.2	Assembly overview - dismantling and assembling gearbox	127
5.3	Assembly overview - removing and installing gearbox housing cover and 5th/6th gear	128
5.4	Assembly overview - removing and installing clutch housing	130
5.5	Assembly overview - input shaft, output shaft, differential, selector mechanism and selector forks	131
5.6	Dismantling and assembling gearbox	133
6	Servicing gearbox housing and clutch housing	155
7	Renewing input shaft oil seal when gearbox is not dismantled	159
8	Servicing gearbox housing cover	161
9	Servicing selector unit	164
10	Dismantling and assembling selector forks	167
35	Gears, shafts	173
1	Assembly overview - input shaft	173
1.1	Dismantling and assembling input shaft	176
2	Assembly overview - output shaft	186
2.1	Dismantling and assembling output shaft	189
39	Final drive - differential	197
1	Oil seals	197
1.1	Overview of fitting locations - oil seals	197
1.2	Renewing left flange shaft oil seal	197
1.3	Renewing right flange shaft oil seal	200
2	Assembly overview - differential	203
2.1	Dismantling and assembling differential	205
2.2	Adjusting differential	211