

Contents

00 - Technical data	1
1 Gearbox identification	1
2 Notes on the automatic 6-speed gearbox 09G	2
3 Code letters, gearbox allocation, ratios, equipment	3
4 Capacities in planetary gearbox and final drive	4
5 Notes on tow-starting and towing	5
6 Repair instructions	6
7 Rules for cleanliness when working on the gearbox	8
32 - Torque converter	9
1 Torque converter	9
1.1 Identification of torque converter	9
1.2 Draining torque converter	9
1.3 Removing and installing oil seal for torque converter	10
1.4 Checking torque converter	11
1.5 Installing torque converter	11
37 - Controls, housing	13
1 Electrical/electronic components and fitting locations	13
1.1 Removing and installing automatic gearbox control unit J217	18
2 Servicing selector mechanism	20
2.1 Checking selector mechanism	20
2.2 Checking and adjusting selector lever cable	21
2.3 Checking function of ignition key removal lock	22
2.4 Dismantling and assembling selector mechanism - exploded view of components	23
2.5 Removing and installing selector lever handle	25
2.6 Removing and installing selector mechanism cover	26
2.7 Removing and installing printed circuit on cover	28
2.8 Removing and installing selector mechanism	28
2.9 Removing and installing selector lever cable	33
2.10 Removing and installing tiptronic switch F189	38
2.11 Removing and installing selector lever lock solenoid N110	38
2.12 Checking connectors on selector mechanism	39
2.13 Manual release of selector mechanism from position „P“	39
3 Removing and installing gearbox	41
3.1 Special tools, test and measuring appliances and auxiliary items required	41
3.2 Removing gearbox on vehicles with 1.6 ltr. engine	42
3.3 Removing gearbox on vehicles with 2.0 ltr. FSI engine	51
3.4 Installing gearbox	59
4 Gearbox mounting	64
4.1 Removing and installing gearbox mounting	64
4.2 Removing and installing pendulum support	68
5 Transporting automatic gearbox	69
5.1 Procedure	69
6 Securing gearbox to assembly stand	70
7 ATF level in gearbox	71
7.1 Special tools, test and measuring appliances and auxiliary items required	71
7.2 Reading out ATF temperature from vehicle diagnostic tester	72
7.3 Checking and correcting ATF level	73
7.4 Changing ATF or filling up after performing repairs	80
8 Removing and installing ATF cooler	85



8.1	ATF cooler - exploded view of components	85
8.2	Removing and installing ATF cooler	85
38	Gears, control	88
1	Oil pan, ATF strainer and valve body	88
1.1	Oil pan, ATF strainer, valve body and internal wiring harnesses - exploded view of components	88
1.2	Removing and installing oil pan	92
1.3	Removing and installing ATF strainer	95
1.4	Removing and installing valve body	95
1.5	Removing and installing wiring harness with 14-pin connector	105
1.6	Removing and installing wiring harness with 8-pin connector and integrated gearbox oil temperature sender G93	107
1.7	Removing and installing gearbox input speed sender G182	109
1.8	Removing and installing gearbox output speed sender G195	110
2	Exploded view - multi-function switch F125	112
2.1	Removing and installing multifunction switch F125	112
2.2	Adjusting multifunction switch F125	115
39	Final drive - front differential	118
1	Renewing flange shaft oil seals	118
1.1	Renewing flange shaft oil seal (left-side)	118
1.2	Renewing flange shaft oil seal (right-side)	120
2	Renewing selector shaft oil seal	122
2.1	Renewing selector shaft oil seal	122
3	Definitions	123
3.1	Explanation of terms	123