

## Contents

<b>00 - Technical data</b> .....	<b>1</b>
<b>1 Gearbox identification</b> .....	<b>1</b>
<b>2 Code letters, gearbox allocation, transmission ratios, equipment</b> .....	<b>2</b>
2.1 Calculating ratio "i" .....	5
<b>3 Capacities</b> .....	<b>6</b>
<b>4 Safety precautions</b> .....	<b>7</b>
4.1 When working on the vehicle .....	7
4.2 Working on vehicles with start/stop system .....	7
4.3 Using testers and measuring instruments during a road test .....	8
<b>5 Notes on the direct shift gearbox 02E</b> .....	<b>9</b>
5.1 General notes .....	9
5.2 Safety functions of gearbox control unit .....	9
<b>6 Notes on tow-starting and towing</b> .....	<b>11</b>
<b>7 Repair instructions</b> .....	<b>12</b>
7.1 Contact corrosion .....	12
7.2 General notes .....	12
<b>8 Rules for cleanliness when working on the gearbox</b> .....	<b>14</b>
<b>30 - Clutch</b> .....	<b>15</b>
<b>1 Exploded view - multiple clutch</b> .....	<b>15</b>
1.1 Removing and installing multiple clutch .....	16
<b>34 - Controls, housing</b> .....	<b>27</b>
<b>1</b> .....	<b>27</b>
<b>2 Checking and adjusting selector mechanism</b> .....	<b>30</b>
2.1 Checking selector mechanism .....	30
2.2 Checking and adjusting selector lever cable .....	31
2.3 Checking function of ignition key removal lock .....	35
<b>3 Exploded view - selector lever handle with fixed selector mechanism cover and selector lever display illumination bulb L101</b> .....	<b>36</b>
3.1 Operating manual release for selector mechanism from position "P" (vehicles with fixed selector mechanism cover) .....	36
3.2 Removing and installing selector lever handle (vehicles with fixed selector mechanism cover) .....	38
3.3 Removing and installing selector mechanism cover (vehicles with fixed selector mechanism cover) .....	39
3.4 Removing and installing printed circuit on cover with selector lever display illumination bulb L101 (vehicles with fixed selector mechanism cover) .....	40
<b>4 Exploded view - selector lever handle with selector lever boot, selector lever display illumination bulb L101 (vehicles up to 11.2009)</b> .....	<b>41</b>
4.1 Operating manual release for selector mechanism from position "P" (vehicles with selector lever boot, up to 11.2009) .....	41
4.2 Removing and installing selector lever handle (vehicles with selector lever boot, up to 11.2009) .....	42
4.3 Separating selector lever boot from selector lever handle (vehicles with selector lever boot, up to 11.2009) .....	45
4.4 Removing and installing selector lever display illumination bulb L101 (vehicles with selector lever boot, up to 11.2009) .....	45
<b>5 Exploded view - selector lever handle, selector lever display illumination bulb L101 (vehicles from 11.2009 onwards)</b> .....	<b>47</b>
5.1 Operating manual release for selector mechanism from position "P" (vehicles from 11.2009 onwards) .....	47
5.2 Removing and installing selector lever handle (vehicles from 11.2009 onwards) .....	49



5.3	Separating selector lever boot from selector lever handle (vehicles from 11.2009 onwards)	51
5.4	Moving interlock button on selector lever handle into installation position (vehicles from 11.2009 onwards)	52
5.5	Removing and installing selector lever display illumination bulb L101 (vehicles from 11.2009 onwards)	54
<b>6</b>	<b>Exploded view - selector mechanism (vehicles up to 11.2009)</b>	<b>56</b>
6.1	Removing and installing shift unit (vehicles up to 11.2009)	57
6.2	Removing and installing selector lever cable (vehicles up to 11.2009)	61
6.3	Removing and installing selector lever sensors control unit J587 with selector lever E313 , tiptronic switch F189 and selector lever locked in position P switch F319 (vehicles up to 11.2009)	67
6.4	Removing and installing selector lever lock solenoid N110 (vehicles up to 11.2009)	67
6.5	Checking connectors on selector mechanism (vehicles up to 11.2009)	67
<b>7</b>	<b>Exploded view - selector mechanism (vehicles from 11.2009 onwards)</b>	<b>68</b>
7.1	Removing and installing shift unit (vehicles from 11.2009 onwards)	69
7.2	Removing and installing selector lever cable (vehicles from 11.2009 onwards)	73
7.3	Removing and installing selector lever sensors control unit J587 with selector lever E313 , tiptronic switch F189 and selector lever locked in position P switch F319 (vehicles from 11.2009 onwards)	73
7.4	Removing and installing selector lever lock solenoid N110 (vehicles from 11.2009 onwards)	74
7.5	Checking connectors on shift unit (vehicles from 11.2009 onwards)	74
<b>8</b>	<b>Removing and installing gearbox</b>	<b>75</b>
8.1	Removing gearbox (vehicles with 4-cylinder 2.0 ltr. TFSI engine)	75
8.2	Removing gearbox (vehicles with 6-cylinder 3.2 ltr. engine)	85
8.3	Installing gearbox	96
<b>9</b>	<b>Transporting the direct shift gearbox</b>	<b>102</b>
<b>10</b>	<b>Securing gearbox to engine and gearbox support</b>	<b>103</b>
<b>11</b>	<b>Exploded view - assembly mountings</b>	<b>105</b>
11.1	Removing and installing gearbox mounting and gearbox support	106
11.2	Removing and installing pendulum support	111
<b>12</b>	<b>Exploded view - drain plug, inspection plug and overflow pipe for gear oil</b>	<b>112</b>
12.1	Checking gear oil level and topping up	113
12.2	Changing gear oil or filling up after performing repairs	120
<b>13</b>	<b>Exploded view - gear oil cooler and gear oil filter</b>	<b>125</b>
13.1	Removing and installing gear oil cooler	125
13.2	Removing and installing gear oil filter	128
<b>14</b>	<b>Removing and installing bevel box</b>	<b>132</b>
<b>15</b>	<b>Exploded view - drain plug and inspection plug for oil in bevel box</b>	<b>140</b>
15.1	Checking and topping up oil level in bevel box	140
15.2	Draining oil in bevel box and filling up after repairs	141
<b>35 - Gears, shafts</b>		<b>144</b>
<b>1</b>	<b>Exploded view - oil pan, mechatronic unit, gear oil pump</b>	<b>144</b>
1.1	Removing and installing oil pan	147
1.2	Removing and installing mechatronic unit for dual clutch gearbox J743	150
1.3	Removing and installing gearbox input speed sender G182 / clutch temperature sender G509	155
1.4	Removing and installing gear oil pump	156
<b>39 - Final drive - front differential</b>		<b>160</b>
<b>1</b>	<b>Exploded view - flange shaft (left-side), oil seals and bracket for bevel box</b>	<b>160</b>
1.1	Removing and installing flange shaft (left-side)	161
1.2	Renewing oil seal for flange shaft (left-side)	161
1.3	Renewing oil seal between bevel box and gearbox (on gearbox)	162

1.4	Renewing oil seal for selector shaft .....	164
<b>2</b>	<b>Exploded view - flange shafts, oil seals .....</b>	<b>167</b>
2.1	Removing and installing flange shaft (right-side) .....	169
2.2	Renewing flange shaft oil seal (right-side) at bevel box (outer seal) .....	171
2.3	Renewing needle bearings (polygon bearings) for flange shaft (right-side) .....	171
2.4	Renewing oil seal between gearbox and bevel box (on bevel box) .....	173
2.5	Renewing oil seal for output flange on bevel box .....	174
<b>3</b>	<b>Propshaft .....</b>	<b>180</b>
<b>4</b>	<b>Rear final drive .....</b>	<b>181</b>