

Contents

00 - Technical data	1
1 Gearbox identification	1
2 Code letters, gearbox allocation, transmission ratios, equipment	2
2.1 Calculating ratio "i"	8
3 Capacities	10
4 Safety precautions	11
4.1 When working on the vehicle	11
4.2 When working on vehicles with start/stop system	11
4.3 When using testers and measuring instruments during a road test	12
5 Notes on the direct shift gearbox 02E	13
5.1 General notes	13
5.2 Safety functions of gearbox control unit	13
6 Notes on tow-starting and towing	15
7 Repair instructions	16
7.1 Contact corrosion	16
7.2 General notes	16
8 Rules for cleanliness when working on the gearbox	18
30 - Clutch	19
1 Exploded view - multiple clutch	19
1.1 Removing and installing multiple clutch	20
34 - Controls, housing	31
1	31
2 Checking and adjusting selector mechanism	34
2.1 Checking selector mechanism	34
2.2 Checking and adjusting selector lever cable	35
2.3 Checking function of ignition key removal lock	38
3 Exploded view - selector lever handle with fixed selector mechanism cover and selector lever display illumination bulb L101	40
3.1 Operating manual release for selector mechanism from position "P" (vehicles with fixed selector mechanism cover)	40
3.2 Removing and installing selector lever handle (vehicles with fixed selector mechanism cover)	42
3.3 Removing and installing selector mechanism cover (vehicles with fixed selector mechanism cover)	43
3.4 Removing and installing printed circuit on cover with selector lever display illumination bulb L101 (vehicles with fixed selector mechanism cover)	44
4 Exploded view - selector lever handle with selector lever boot, selector lever display illumination bulb L101 (vehicles up to 11.2009)	45
4.1 Operating manual release for selector mechanism from position "P" (vehicles with selector lever boot, up to 11.2009)	45
4.2 Removing and installing selector lever handle (vehicles with selector lever boot, up to 11.2009)	46
4.3 Separating selector lever boot from selector lever handle (vehicles with selector lever boot, up to 11.2009)	49
4.4 Removing and installing selector lever display illumination bulb L101 (vehicles with selector lever boot, up to 11.2009)	49
5 Exploded view - selector lever handle with selector lever boot, selector lever display illumination bulb L101 (vehicles from 11.2009 onwards)	51
5.1 Operating manual release for selector mechanism from position "P" (vehicles from 11.2009 onwards)	51
5.2 Removing and installing selector lever handle (vehicles from 11.2009 onwards)	53



5.3	Separating selector lever boot from selector lever handle (vehicles from 11.2009 onwards)	55
5.4	Moving interlock button on selector lever handle into installation position (vehicles from 11.2009 onwards)	56
5.5	Removing and installing selector lever display illumination bulb L101 (vehicles from 11.2009 onwards)	58
6	Exploded view - selector mechanism (vehicles up to 11.2009)	60
6.1	Removing and installing shift unit (vehicles up to 11.2009)	61
6.2	Removing and installing selector lever cable (vehicles up to 11.2009)	65
6.3	Removing and installing selector lever sensors control unit J587 with selector lever E313 , tiptronic switch F189 and selector lever locked in position P switch F319 (vehicles up to 11.2009)	71
6.4	Removing and installing selector lever lock solenoid N110 (vehicles up to 11.2009)	71
6.5	Checking connectors on shift unit (vehicles up to 11.2009)	71
7	Exploded view - selector mechanism (vehicles from 11.2009 onwards)	72
7.1	Removing and installing shift unit (vehicles from 11.2009 onwards)	73
7.2	Removing and installing selector lever cable (vehicles from 11.2009 onwards)	77
7.3	Removing and installing selector lever sensors control unit J587 with selector lever E313 , tiptronic switch F189 and selector lever locked in position P switch F319 (vehicles from 11.2009 onwards)	78
7.4	Removing and installing selector lever lock solenoid N110 (vehicles from 11.2009 onwards)	78
7.5	Checking connectors on shift unit (vehicles from 11.2009 onwards)	78
8	Removing and installing gearbox	79
8.1	Removing gearbox - vehicles with 1.8 ltr. TFSI engine	79
8.2	Removing gearbox - vehicles with 2.0 ltr. TFSI engine	88
8.3	Removing gearbox (vehicles with 1.9/2.0 ltr. TDI unit injector engine)	99
8.4	Removing gearbox (vehicles with 2.0 ltr. TDI common rail engine)	108
8.5	Installing gearbox	119
9	Transporting the direct shift gearbox	123
10	Securing gearbox to engine and gearbox support	124
11	Exploded view - assembly mountings	126
11.1	Removing and installing gearbox mounting	127
11.2	Removing and installing pendulum support	131
12	Exploded view - drain plug, inspection plug and overflow pipe for gear oil	132
12.1	Checking gear oil level and topping up	133
12.2	Draining and changing gear oil / filling up after performing repairs	140
13	Exploded view - gear oil cooler and gear oil filter	145
13.1	Removing and installing gear oil cooler	145
13.2	Removing and installing gear oil filter	148
35 - Gears, shafts		152
1	Exploded view - oil pan, mechatronic unit, gear oil pump	152
1.1	Removing and installing oil pan	155
1.2	Removing and installing mechatronic unit for dual clutch gearbox J743	158
1.3	Removing and installing gearbox input speed sender G182 / clutch temperature sender G509	163
1.4	Removing and installing gear oil pump	164
39 - Final drive - differential		168
1	Exploded view - flange shafts, oil seals	168
1.1	Removing and installing flange shaft (left-side)	168
1.2	Renewing oil seal for flange shaft (left-side)	169
1.3	Removing and installing flange shaft (right-side)	171
1.4	Renewing oil seal for flange shaft (right-side)	172
1.5	Renewing oil seal for selector shaft	173