

Contents

00 - Technical data	1
1 Identification	1
1.1 Gearbox identification	1
2 Technical data	3
2.1 Allocation of gearbox to engine	3
2.2 Calculating ratio "i"	7
2.3 Capacities	8
3 Transmission layout	9
3.1 Transmission layout - front-wheel drive	9
4 Safety precautions	10
4.1 General safety precautions	10
4.2 Safety precautions when working on vehicles with start/stop system	11
4.3 Safety precautions when using testers and measuring instruments during a road test	11
4.4 Safety precautions when working on mechatronic unit for dual clutch gearbox J743	12
4.5 Notes on tow-starting and towing	13
5 Repair instructions	14
5.1 General notes	14
5.2 Rules for cleanliness	16
5.3 General repair instructions	16
5.4 Contact corrosion	18
30 - Clutch	19
1 Clutch	19
2 Clutch mechanism	20
34 - Controls, housing	21
1	21
2 Basic settings	23
3 Checking and adjusting selector mechanism	25
3.1 Checking selector mechanism	25
3.2 Checking and adjusting selector lever cable	26
3.3 Checking function of ignition key removal lock	28
4 Exploded view - selector lever handle, selector lever position display Y26 with selector lever display illumination bulb L101 (vehicles up to 11.2009)	29
4.1 Operating manual release for selector mechanism from position "P" (vehicles up to 11.2009)	29
4.2 Removing and installing selector lever handle (vehicles up to 11.2009)	30
4.3 Separating selector lever boot from selector lever handle (vehicles up to 11.2009)	33
4.4 Removing and installing selector lever position display Y26 with selector lever display illumination bulb L101 (vehicles up to 11.2009)	33
5 Exploded view - selector lever handle, selector lever position display Y26 with selector lever display illumination bulb L101 (vehicles from 11.2009 onwards)	35
5.1 Operating manual release for selector mechanism from position "P" (vehicles from 11.2009 onwards)	35
5.2 Removing and installing selector lever handle (vehicles from 11.2009 onwards)	36
5.3 Separating selector lever boot from selector lever handle (vehicles from 11.2009 onwards)	38
5.4 Moving interlock button on selector lever handle into installation position (vehicles from 11.2009 onwards)	40
5.5 Removing and installing selector lever position display Y26 with selector lever display illumination bulb L101 (vehicles from 11.2009 onwards)	41
6 Exploded view - selector mechanism (vehicles up to 11.2009)	43
6.1 Removing and installing shift unit (vehicles up to 11.2009)	44



6.2	Removing and installing selector lever cable (vehicles up to 11.2009)	47
7	Exploded view - selector mechanism (vehicles from 11.2009 onwards)	53
7.1	Removing and installing shift unit (vehicles from 11.2009 onwards)	54
7.2	Removing and installing selector lever cable (vehicles from 11.2009 onwards)	57
8	Removing and installing gearbox	58
8.1	Removing gearbox - vehicles with 1.2 ltr. TFSI engine	58
8.2	Removing gearbox - vehicles with 1.4 ltr. TFSI engine	65
8.3	Removing gearbox - vehicles with 1.6 ltr. MPI engine	76
8.4	Removing gearbox - vehicles with 1.8 ltr. TFSI engine	86
8.5	Removing gearbox - vehicles with 1.6 ltr. TDI engine	98
8.6	Installing gearbox	108
9	Transporting gearbox	114
10	Securing to engine and gearbox support	117
11	Exploded view - assembly mountings	119
11.1	Removing and installing gearbox mounting and gearbox support	120
11.2	Removing and installing pendulum support	123
12	Renewing gear oil	124
13	Mechatronic unit	128
13.1	Exploded view - mechatronic unit for dual clutch gearbox J743	128
13.2	Removing and installing mechatronic unit for dual clutch gearbox J743 with gearbox installed	129
13.3	Moving mechatronic unit for dual clutch gearbox J743 into removal position by hand	140
35 - Gears, shafts		141
1	Parking lock	141
39 - Final drive - differential		142
1	Oil seals	142
1.1	Overview of fitting locations - oil seals	142
2	Exploded view - stub shafts and oil seals	143
2.1	Removing and installing stub shaft (left-side)	144
2.2	Removing and installing stub shaft (right-side)	145
2.3	Renewing stub shaft oil seal (left-side)	147
2.4	Renewing oil seal for right stub shaft	149
3	Exploded view - flange shafts and oil seals	151
3.1	Removing and installing flange shaft (left-side)	152
3.2	Removing and installing flange shaft (right-side)	153
3.3	Renewing flange shaft oil seal (left-side)	154
3.4	Renewing flange shaft oil seal (right-side)	155