

## Contents

<b>24 - Mixture preparation - injection</b> .....	<b>1</b>
<b>1 Safety precautions and rules for cleanliness</b> .....	<b>1</b>
1.1 General notes on self-diagnosis .....	1
1.2 Safety precautions when using testers and measuring instruments during a road test .....	1
1.3 Safety precautions for vehicles with start/stop system .....	2
1.4 Rules for cleanliness and instructions for working on fuel system .....	2
1.5 Safety precautions when working on the ignition system .....	3
1.6 Checking vacuum system .....	3
<b>2 Injection system</b> .....	<b>4</b>
2.1 Technical data .....	4
2.2 Overview of fitting locations - injection system .....	4
<b>3 Air cleaner</b> .....	<b>13</b>
3.1 Exploded view - air cleaner .....	13
3.2 Removing and installing air filter element .....	14
3.3 Removing and installing air cleaner housing .....	15
<b>4 Intake manifold</b> .....	<b>17</b>
4.1 Exploded view - intake manifold (part 1) .....	17
4.2 Exploded view - intake manifold (part 2) .....	18
4.3 Removing and installing intake manifold .....	19
4.4 Removing and installing throttle valve module J338 .....	21
4.5 Cleaning throttle valve module J338 .....	23
<b>5 High-pressure pump</b> .....	<b>25</b>
5.1 Exploded view - high-pressure pump .....	25
5.2 Removing and installing high-pressure pump .....	26
<b>6 Injectors</b> .....	<b>30</b>
6.1 Removing and installing injectors .....	30
6.2 Cleaning injectors .....	36
<b>7 Senders and sensors</b> .....	<b>37</b>
7.1 Checking fuel pressure sender G247 .....	37
7.2 Removing and installing fuel pressure sender G247 .....	39
7.3 Checking residual pressure in fuel system (up to high-pressure pump) .....	40
<b>8 Lambda probe</b> .....	<b>43</b>
8.1 Exploded view - Lambda probe .....	43
8.2 Removing and installing Lambda probe G39 and Lambda probe heater Z19 before catalytic converter .....	43
8.3 Removing and installing Lambda probe after catalytic converter G130 and Lambda probe 1 heater after catalytic converter Z29 .....	44
<b>9 Engine control unit</b> .....	<b>46</b>
9.1 Wiring and component check with test box V.A.G 1598/42 .....	46
9.2 Removing and installing engine control unit J623 .....	48
<b>28 - Ignition system</b> .....	<b>51</b>
<b>1 General notes and safety precautions</b> .....	<b>51</b>
1.1 General notes on ignition system .....	51
1.2 Safety precautions .....	51
<b>2 Ignition system</b> .....	<b>53</b>
2.1 Test data .....	53
2.2 Exploded view - ignition system .....	53
2.3 Removing and installing knock sensor 1 G61 .....	55
2.4 Removing and installing Hall sender G40 .....	55
2.5 Removing and installing engine speed sender G28 .....	55